

System	COMfortel													
	1200	1400	1600	2600	1400 IP	2600 IP	D-110	D-210	D-400	D-600	C-400	WS-500S	WS-500M	SoftPhone
COMpact 3000 series	4.0L o.a.	4.0L o.a.	4.0L o.a.	4.0L o.a.	only std. SIP	only std. SIP	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓	-	-	-
COMpact 4000	1.6A o.a.	1.6A o.a.	1.6A o.a.	1.6A o.a.	2.2E o.a.	2.2E o.a.	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓	7.4B o.a.	7.4B o.a.	8.4A o.a.
COMpact 5200/5200R	2.0A o.a.	2.0A o.a.	2.0A o.a.	2.0A o.a.	2.6E o.a.	2.6E o.a.	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓	7.4B o.a.	7.4B o.a.	8.4A o.a.
COMpact 5500R	2.0A o.a.	2.0A o.a.	2.0A o.a.	2.0A o.a.	2.6E o.a.	2.6E o.a.	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓	7.4B o.a.	7.4B o.a.	8.4A o.a.
COMmander 6000 series	6.0E o.a.	6.0E o.a.	5.4B o.a.	5.4B o.a.	6.0E o.a.	6.0E o.a.	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓	7.4B o.a.	7.4B o.a.	-
COMtrexx Business	-	-	-	-	only std. SIP	only std. SIP	1.4 o.a.	1.4 o.a.	1.4 o.a.	1.4 o.a.	✓	1.4 o.a.	1.4 o.a.	1.6 o.a.
COMtrexx VM, Adv.	-	-	-	-	only std. SIP	only std. SIP	1.4 o.a.	1.4 o.a.	1.4 o.a.	1.4 o.a.	✓	1.4 o.a.	1.4 o.a.	1.6 o.a.
COMuniq ONE	-	-	-	-	-	-	2.2A o.a.	2.2A o.a.	2.2A o.a.	2.2A o.a.	✓ <sup>2</sup>	✓ <sup>3</sup>	✓ <sup>3</sup>	-

**Comments:**

- X.X o.a. The green box indicates a necessary fimware version of the terminal (o.a. = or above)
- X.X o.a. The blue box indicates a necessary fimware version of the ICT system (o.a. = or above)
- ✓ This telephone is supported by this system without limitation. No special firmware version is necessary.
- This telephone is not supported by this system. Other combinations might be possible (under certain conditions).
- <sup>1</sup> The telephones of the D series are standard SIP phones for general purpose use - but in combination with systems from Auerswald they support:  
Group login/logout / Configuration switching / Call forwarding DDI/MSN/subscriber / DND
- <sup>2</sup> The first provisioning has to be done manually (update in work)
- <sup>3</sup> Firmware will be updated during the first provisioning.