

	COMfort / COMfortel																							
	1000	1200	2000(plus)	1100	1500	2500 (AB)	1200	1400	1600	2600	VoIP 2500 AB	1200 IP	1400 IP	2600 IP	3200	3500	3600 IP	D-100	D-200	WS-400 IP	WS-650 IP	WS-500S	WS-500M	
COMpact 2206 USB ¹	✓	✓	✓	2.2D o.h.	2.0B o.h.	2.0B o.h.	2.4B o.h.	2.4B o.h.	1.0C o.h.	1.0C o.h.	-	-	-	-	-	-	-	-	-	-	-	-	-	-
COMpact 4410 USB ¹	✓	✓	✓	2.2D o.h.	2.0B o.h.	2.0B o.h.	2.4B o.h.	2.4B o.h.	1.0C o.h.	1.0C o.h.	-	-	-	-	-	-	-	-	-	-	-	-	-	-
COMpact 3000 series	-	-	-	✓	✓	✓	4.0L o.h.	4.0L o.h.	4.0I o.h.	4.0I o.h.	✓	only stand. SIP	only stand. SIP	only stand. SIP	only stand. SIP	only stand. SIP	only stand. SIP	only stand. SIP	only stand. SIP	-	-	-	-	-
COMpact 5010 VoIP	up to 2.2I	up to 2.2I	up to 2.2I	3.2B o.h.	✓	✓	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	3.0K o.h.	only stand. SIP	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	4.2F o.h.	only stand. SIP	only stand. SIP	4.0A o.h.	4.0A o.h.	4.0A o.h. ³	4.0A o.h. ³	
COMpact 5020 VoIP	up to 2.2I	up to 2.2I	up to 2.2I	3.2B o.h.	✓	✓	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	3.0K o.h.	only stand. SIP	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	4.2F o.h.	only stand. SIP	only stand. SIP	4.0A o.h.	4.0A o.h.	4.0A o.h. ³	4.0A o.h. ³	
COMpact 4000 ²	-	-	-	only stand. ISDN	only stand. ISDN	only stand. ISDN	1.6A o.h.	1.6A o.h.	1.6A o.h.	1.6A o.h.	-	only stand. SIP	2.2E o.h.	2.2E o.h.	1.8E o.h.	1.8E o.h.	6.4D o.h.	7.4A o.h.	7.4A o.h.	✓	✓	7.4B o.h.	7.4B o.h.	
COMpact 5000/5000R ²	-	-	-	up to 6.4E	up to 6.4E	up to 6.4E	✓	✓	✓	✓	up to 6.4E	only stand. SIP	✓	✓	✓	✓	6.4D o.h.	7.4A o.h.	7.4A o.h.	✓	✓	7.4B o.h.	7.4B o.h.	
COMpact 5200/5200R ²	-	-	-	only stand. ISDN	only stand. ISDN	only stand. ISDN	1.6A o.h.	1.6A o.h.	1.6A o.h.	1.6A o.h.	-	only stand. SIP	2.2E o.h.	2.2E o.h.	1.8E o.h.	1.8E o.h.	6.4D o.h.	7.4A o.h.	7.4A o.h.	✓	✓	7.4B o.h.	7.4B o.h.	
COMpact 5500R ²	-	-	-	only stand. ISDN	only stand. ISDN	only stand. ISDN	1.6A o.h.	1.6A o.h.	1.6A o.h.	1.6A o.h.	-	only stand. SIP	2.2E o.h.	2.2E o.h.	1.8E o.h.	1.8E o.h.	6.4D o.h.	7.4A o.h.	7.4A o.h.	✓	✓	7.4B o.h.	7.4B o.h.	
COMmander Basic	up to 1.5A	up to 1.5A	up to 1.3A	2.2D o.h.	2.0B o.h.	2.0B o.h.	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
COMmander Basic.2	up to 2.2I	up to 2.2I	up to 2.2I	3.2B o.h.	✓	✓	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	3.0K o.h.	only stand. SIP	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	4.2F o.h.	only stand. SIP	only stand. SIP	4.0A o.h.	4.0A o.h.	4.0A o.h. ³	4.0A o.h. ³	
COMmander Business	up to 2.2I	up to 2.2I	up to 2.2I	3.2B o.h.	1.4C o.h.	1.4C o.h.	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	3.0K o.h.	only stand. SIP	4.2E o.h.	4.2E o.h.	4.2A o.h.	4.2A o.h.	4.2F o.h.	only stand. SIP	only stand. SIP	4.0A o.h.	4.0A o.h.	4.0A o.h. ³	4.0A o.h. ³	
COMmander 6000 series ²	-	-	-	up to 6.4E	up to 6.4E	up to 6.4E	6.0B o.h.	6.0B o.h.	5.4B o.h.	5.4B o.h.	up to 6.4E	only stand. SIP	6.0E o.h.	6.0E o.h.	5.8A o.h.	5.4A o.h.	6.4D o.h.	7.4A o.h.	7.4A o.h.	6.0B o.h.	6.0B o.h.	7.4B o.h.	7.4B o.h.	

- ✓ Telephone is supported by this system without limitations. There is no dependence on firmware versions.
- Telephone is not supported by this system.
- ...¹ Limited system functionality with COMfortel 1200, 1400, 1600 and 2600:
 - The function key "Exchange line" and a user PIN cannot be programmed using COMfortel Set. Must be set directly at the telephone.
 - No control of the VMC 461.2
 - No firmware update of the telephones using the Update Server via ISDN
- ...² COMfortel D-100 and D-200 support some important PBX functions:
 - Group login/logout
 - Caller ID – display phone numbers and names from a central telephone book
 - Do-not-disturb (DND)
 - Pick-up – fetch a call
 - Call forwarding centrally via the communication server
 - Access to the central telephone book
 - Online name search (reverse search)
 - Busy Lamp Field (BLF) for displaying the call and busy status of extensions
 - Switch central configuration profiles such as day/night switching
- o.h. or higher