

COMfortel D-600

Advanced Information



Table of Contents

Information on Release 2.4.....	16
About these instructions.....	20
Gender Notice.....	21
Trademarks.....	22
Licenses.....	23
Instructions.....	24
Functions and Applications.....	25
Information about the section.....	28
Action URL.....	29
Anonymous call.....	32
Apps.....	34
Automatic call acceptance.....	35
Automatic start of call.....	36
Backup and restore.....	37
Bluetooth.....	39
Call.....	42
Call bindings.....	44
Call Completion.....	45
Call forwarding.....	47
General.....	48
Immediately.....	49
On busy.....	50
On no reply.....	51
Call type.....	52
Call waiting.....	53
Caller list.....	55
Overview of call lists.....	56
Redial List.....	57

Table of Contents

Missed calls.....	59
Log calls.....	61
Cameras.....	62
Central caller list.....	64
Certificate.....	66
Codecs.....	67
Conference call.....	68
Contact.....	70
CTI.....	75
Date and time.....	76
Device Information.....	77
Dial a Subscriber Number Manually.....	78
Direct call.....	79
Display and LED.....	81
Do not disturb.....	83
Fallback identity.....	84
Function keys.....	86
Function templates.....	91
Hands-free calling mode.....	92
Headset mode.....	93
Identities.....	94
General.....	95
PBX.....	96
VoIP provider.....	97
Idle state.....	99
InterCom.....	101
Jitter buffer.....	103
Language and location.....	104
LDAP.....	105
LLDP.....	107
Logging.....	108
Loudspeaker listening mode.....	109
Music on hold.....	110

Table of Contents

NAT	111
Network	112
General.....	113
IPv4.....	114
IPv6.....	115
VLAN.....	116
VPN.....	117
Topology.....	120
Notifications	121
Outbound proxy	122
Park position	123
Passwords	125
Pick-Up	127
Pick-up in idle state.....	128
Pick-up during a call.....	129
Query Calls	130
Redial List	132
Reset to default	133
Reverse search	135
Roaming User	136
Silent Alert	138
Silent Call	140
SIP	141
SIPS	143
Sound	144
Speed dial	147
SRTP	150
Sync	151
Trace	153
Transferring calls	155
Call transfer types.....	156
Transfer the call with an announcement.....	157
Transferring a call without an announcement.....	158

Table of Contents

Calling a 3rd internal subscriber.....	159
Update.....	160
User roles and permissions.....	164
Using provisioning.....	166
Voicemail App.....	170
Voicemail number.....	172
Wallpaper.....	174
Wi-Fi.....	176
XML Minibrowser.....	180
Telephoning.....	182
Information about the section.....	183
Incoming calls.....	185
Call-Waiting Calls.....	186
Dialled calls.....	188
Call.....	190
Query Calls.....	192
Transferring calls.....	194
Conference call.....	195
Hands-Free Calling.....	197
Loudspeaker listening.....	199
Headset Call.....	200
Calls.....	202
Pick-Up.....	205
Device Overview.....	207
Front View.....	208
Rear View.....	211
Using the Web Interface.....	214
Basic Knowledge.....	215
Opening the web interface.....	216
Operating Instructions.....	218

Table of Contents

Overview.....	219
Fields and User Elements.....	221
Appearance.....	223
Dashboard.....	224
Status information.....	225
Language and location.....	228
Device name.....	229
Display and LED.....	230
Basic Settings.....	231
Key extension modules.....	232
Options for experts.....	233
LED notifications.....	235
Function keys.....	237
Overview.....	238
Edit function keys.....	241
Edit parameters.....	243
Speed dial.....	244
Identity.....	246
Activate config.....	247
Anonymous call.....	248
Automatic configuration switching.....	249
Bluetooth.....	250
Browser.....	251
Call forwarding immediately.....	252
Call forwarding on busy.....	253
Call forwarding on no reply.....	254
Call waiting.....	255
CF ext. calls: Immediately.....	256
CF ext. calls: On busy.....	257
CF ext. calls: On no reply.....	258
Do not disturb.....	259
DTMF-Relay.....	260
Group.....	261

Table of Contents

Group (incoming).....	262
Group (outgoing).....	263
Park position.....	264
Relays.....	265
Silent Alert.....	266
VPN.....	267
XML Minibrowser.....	268
Edit Icon.....	269
Using provisioning.....	271
Basic Settings.....	272
Schedule.....	274
SIP provisioning.....	275
Additional function templates.....	276
Identities.....	277
Managing Identities.....	278
Basic Settings.....	279
Options for experts.....	281
Codecs.....	288
Registrar.....	289
NAT.....	291
Outbound proxy.....	294
Cameras.....	296
Camera management.....	297
Settings.....	299
Update.....	301
Basic Settings.....	302
Restart and factory reset.....	303
Schedule.....	304
Network.....	305
Current Settings.....	306
IPv4.....	308
IPv6.....	310
VLAN.....	312

Table of Contents

VPN.....	314
Topology.....	319
Basic Settings.....	320
Jitter buffer.....	322
STUN server.....	324
STUN server management.....	325
Settings.....	326
LDAP.....	328
Basic Settings.....	329
LDAP filter.....	332
Telephony.....	335
Call settings.....	336
Call signalling.....	337
Direct call.....	338
Dialled calls.....	339
Call forwarding.....	340
Call history.....	342
Automatic call acceptance.....	343
Call bindings.....	345
Sound.....	347
Ringtones by call type.....	348
Ringtone management.....	349
Upload ringtone.....	350
Settings.....	351
Date and time.....	352
User.....	354
User administration.....	355
Settings.....	357
Backup and restore.....	359
Access.....	360
General settings.....	361
Developer options.....	362
Action URL.....	363

Table of Contents

Logging.....	364
Telephone menu.....	365
Using the Phone.....	366
Basic Knowledge.....	367
Gesture control.....	368
Display.....	370
Display overview.....	371
Home.....	372
Varying display names.....	374
All call lists.....	376
Incoming calls.....	378
Active conversation.....	385
Putting a conversation on hold.....	386
Call forwarding.....	388
Conference call.....	392
Transfer.....	395
Call bindings.....	396
Status Line.....	398
Status widget.....	399
Status bar.....	400
Function keys.....	402
System icons.....	404
Entry and Selection Fields.....	409
Virtual keyboard.....	410
Navigation in menus.....	412
Notifications.....	413
Keys and LEDs.....	414
Keypad.....	415
Dedicated function keys.....	416
Delete, Home and Back.....	418
Directional pad and OK.....	419
LED signalling on function keys.....	420

Table of Contents

Casing LED.....	428
Changing the input mode.....	429
Apps.....	430
All Apps.....	431
Installing Additional Apps.....	433
Calls.....	434
Navigation.....	435
Options.....	436
Contacts.....	438
Navigation.....	439
Edit Contact.....	441
Gallery.....	443
Voicemail App.....	444
Configuration.....	445
Welcome.....	446
Login.....	447
Add ICT system.....	448
Add subscriber.....	449
Settings.....	450
Overview.....	451
Faxes.....	452
Voicemails.....	454
Fax / Voicemail Boxes.....	456
Memory Overview.....	457
Synchronize.....	458
Logout.....	459
App Info.....	460
Sync.....	461
Accounts.....	462
Global options.....	464
Settings.....	465
Network.....	466
Current Settings.....	467

Table of Contents

IPv4 settings.....	468
IPv6 Settings.....	470
VLAN.....	471
VPN.....	473
Topology.....	474
Basic Settings.....	475
STUN server.....	477
Identities.....	479
Managing Identities.....	480
Basic Settings.....	481
Options for experts.....	483
Registrar.....	484
SIP.....	486
NAT.....	490
Function codes.....	492
Audio.....	493
Security.....	494
Outbound proxy.....	496
Fallback for.....	498
Ringer Tone.....	499
Bluetooth.....	500
Wi-Fi.....	502
Overview.....	503
Configure Wi-Fi.....	505
Sound.....	506
Language and location.....	508
Display and LED.....	509
Telephony.....	514
Call waiting.....	515
Audible indication.....	516
Do not disturb.....	517
Call forwarding.....	518
Anonymous call.....	520

Table of Contents

Reverse search.....	521
Automatic start of call.....	522
Direct call.....	523
Automatic call acceptance.....	524
Call Completion.....	525
Log calls.....	526
Call bindings.....	527
Function keys.....	529
Managing function keys.....	530
Edit function keys.....	531
Edit parameters.....	532
Speed dial.....	533
Identity.....	535
Activate config.....	536
Anonymous call.....	537
Automatic configuration switching.....	538
Bluetooth.....	539
Browser.....	540
Call forwarding immediately.....	541
Call forwarding on busy.....	542
Call forwarding on no reply.....	543
Call waiting.....	544
CF ext. calls: Immediately.....	545
CF ext. calls: On busy.....	546
CF ext. calls: On no reply.....	547
Do not disturb.....	548
DTMF-Relay.....	549
Group.....	550
Group (incoming).....	551
Group (outgoing).....	552
Park position.....	553
Relays.....	554
Silent Alert.....	555

Table of Contents

VPN.....	556
XML Minibrowser.....	557
Camera.....	558
Update.....	560
Using provisioning.....	562
Access.....	564
Apps.....	566
Date and time.....	567
Contacts/LDAP.....	569
About phone.....	571
Glossary.....	573
Technical Terms and Functions.....	574
Account.....	577
Bootloader.....	578
Browser.....	579
Build number.....	580
Call deflection.....	581
Client.....	582
Codec.....	583
DHCP.....	584
DNS.....	585
Domain.....	586
Downdate.....	587
DTMF.....	588
EHS.....	589
End device.....	590
Ethernet.....	591
Firewall.....	592
Firmware.....	593
Frame size.....	594
Gateway.....	595
HOST.....	596

Table of Contents

HTTP.....	597
ICE.....	598
IMAP.....	599
IP address.....	600
Ipsec.....	601
IPv4.....	602
IPv6.....	603
jitter buffer.....	604
LDAP.....	605
LED.....	606
LLDP.....	607
MAC.....	608
NAT.....	609
NAT traversal.....	610
NTP.....	611
Open source licenses.....	612
PoE.....	613
POP3.....	614
Port.....	615
Prefetch.....	616
Using provisioning.....	617
Redirect Server.....	618
Registrar.....	619
router.....	620
RTP.....	621
Rubber cover.....	622
Server.....	623
SIP.....	624
SIP port.....	625
SIPS.....	626
SLAAC.....	627
SMTP server.....	628
STUN.....	629

Table of Contents

Subnet mask.....	630
Switch.....	631
TCP.....	632
TLS.....	633
UDP.....	634
Update.....	635
update server.....	636
URI.....	637
URL.....	638
VLAN.....	639
VoIP.....	640
VoIP account.....	641
VoIP address.....	642
VoIP provider.....	643
VPN.....	644
Dial preparation.....	645
XML.....	646
Certificate.....	647
Abbreviations.....	648

Information on Release 2.4

The new or revised functions below have been published with this Release.

- You will find more information about changes to the firmware and the associated documentation at [Auerswald Support/FONtevo Support](#).

Log calls

When this function is active, incoming and outgoing calls are saved in the Call history.

- Further help under [Log calls](#).

Direct call

After picking up the receiver or putting it down, a predefined phone number is called after a predefined time.

- Further help under [Direct call](#).

Function keys


The following entries have been added to the list of function keys and their associated LED signalling: **Silent Alert**.

If a key to which a function has not been assigned is pressed for a longer time (long press), the menu for configuring the selected key opens automatically.

- Further help under [Function keys](#).


USB headsets

From Release 2.4A, the use of USB headsets is supported.

 Further help under [Headset mode](#).

Network

Due to modifications in the firmware: Thus invalid notes on settings in the area of IPv4/IPv6 mode have been removed.

 Further help under [IPv4](#) , [IPv6](#).


Provisioning

Note inserted for trouble-free operation after provisioning by a cloud PBX.

 Further help under [Using provisioning](#).


Silent Alert

Pressing a configured emergency call button on the device sends an alert in the form of a silent notification to other users.

 Further help under [Silent Alert](#).

Update

Note inserted for displaying error messages in case of failed boot process in the updater.

 Further help under [Update](#).

Change of term in the arealidentities

Previously:

- **Repeat subscription**
- **Repeat register**

Modified in:

- **Retry subscriptions**
- **Retry register**

 Further help under [Options for experts](#).

Incoming calls

Description and illustration of various incoming calls on a COMfortel D-series device.

 Further help under [Incoming calls](#).

Voicemail App

Description of the Voicemail App. The app allows you to organise fax messages and voicemails conveniently. The Voicemail App is now supported in connection with Auerswald/FONtevo PBXs (support for COMtrexx from release 1.8).

 Further help under [Voicemail App](#).

Video tutorials

Functions and Applications: Integration of video tutorials on specific topics.

Specific links to the Dokuwiki

Targeted positioning of links to selected topics in the Dokuwiki.

Display of integrated help

The »Advanced Information« has been integrated into the firmware and can be accessed in the Help Panel by selecting the desired question mark behind the settings or the first aid symbol.

About these instructions

About these instructions

[Gender Notice](#)

[Trademarks](#)

[Licenses](#)

[Instructions](#)

Gender Notice

The English-language documentation does not use gender-specific forms of address.

Any references to persons apply to all people of all genders.

Trademarks

Android and Google Search are trademarks of Google, Inc. Microsoft, Windows and ActiveSync are registered trademarks of Microsoft Corporation in the USA and/or other countries. All other trademarks mentioned are the property of the relevant manufacturer.

Licenses

The software in this product contains elements of copyright-protected software that is subject to the GPL, the LGPL or other licenses. To view the licences, select **Settings > About phone > Licenses**.

Instructions

You will find the Operating Manual and the Quick Guide on our web site. After an update, you usually require a new version of the instructions. You will find these on our website.

Functions and Applications

Information about the section

Action URL

Anonymous call

Apps

Automatic call acceptance

Automatic start of call

Backup and restore

Bluetooth

Call

Call bindings

Call Completion

Call forwarding

Call type

Call waiting

Caller list

Cameras

Central caller list

Certificate

Codecs

Conference call

Contact

CTI

Date and time

Device Information

Dial a Subscriber Number Manually

Direct call

Display and LED

Do not disturb

Fallback identity
Function keys
Function templates
Hands-free calling mode
Headset mode
Identities
Idle state
InterCom
Jitter buffer
Language and location
LDAP
LLDP
Logging
Loudspeaker listening mode
Music on hold
NAT
Network
Notifications
Outbound proxy
Park position
Passwords
Pick-Up
Query Calls
Redial List
Reset to default
Reverse search
Roaming User
Silent Alert
Silent Call
SIP

Functions and Applications

SIPS

Sound

Speed dial

SRTP

Sync

Trace

Transferring calls

Update

User roles and permissions

Using provisioning

Voicemail App

Voicemail number

Wallpaper

Wi-Fi

XML Minibrowser

Information about the section

This section describes how to configure and use the functions on your phone.

Action URL

Action URLs are HTTP GET requests which are either sent to a PC, PBX or server, from your phone, or vice versa. In the latter case, the phone is the HTTP server. Action URLs that are sent to the phone trigger actions (such as starting a call). Action URLs that are sent by the phone report changes to the number and condition of calls to the device (e.g. a newly received call).


 Further help in the [Auerswald DokuWiki](#)

Requirement for use


- Web interface is open, user is logged on to it
- or
- valid token (generated using the phone's web interface)

Configuration

Web interface:

- **Access**
 -  Details about the settings are in [Access](#)

Phone:

- **Access**
 -  Details about the settings are in [Access](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Process

1. In your browser address line, enter the required command.

The table below displays the possible actions and the corresponding http commands.

```
https://[phoneIP]/api/v1/exec/command?action=*
```


*help	Displays help texts for the function entered.
*resume	Resumes the call
*log	Adds an entry to the telephone log.
*accept	Accepts a call
*terminate	Ends a call
*call	Starts a call
*show	Displays a brief message in the phone display.
*hold	Puts the call on hold
*transfer	Connects to a number
*join	Connects two existing calls
*conference	Conference call
*dtmf	DTMF

2. If a token is used for authentication, the token must be sent in the request header.

Action URL

3. Press Enter to confirm.


The action you want is carried out.

 **Note:** For full functionality, some commands that are to be executed will need additional parameter settings.

 Further help in the [Auerswald DokuWiki](#)

Anonymous call

The function **Anonymous call** enables the caller to make a call without revealing their subscriber number to the person being called.

-  **Note:** Anonymous calls are not possible with some VoIP providers. If you intend to use this function, first ask your provider if this service attribute is supported. This function can only be used on one of the PBX's land line connections if the CLIR (case-by-case restriction of calling line identification) service feature has been requested from, and activated by, the network provider.

Requirement for use

- The CLIR (suppression of subscriber number display per call) service feature has been enabled by the network operator.

Configuration

Web interface:

- **Telephony > Anonymous call**


 Details about the settings are in [Dialled calls](#)

Phone:


- **Settings > Telephony > Anonymous call**


 Details about the settings are in [Anonymous call](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Anonymous call


 **Note:** When you configure an identity, ensure that you select the same CLIR (number presentation suppression) type as is set on the PBX/at the provider.

 Details about the settings are in [Options for experts](#)

 Details about the settings are in [Function codes](#)

Apps

Apps are application programs which are installed on the telephone. Apps are used to control functions or set up the telephone. The telephone is delivered with a variety of preinstalled apps. You can download apps from the Internet to add new functions to your telephone.


 **Important:** If you install additional apps, the telephone's functionality may be affected, including loss of use. When the Auerswald service team or Auerswald's specialised dealer checks the telephone, it is reset to its factory settings. This process removes any previously installed applications and data, so these must then be reinstalled separately.

Not every available app is compatible with your telephone.


Configuration

Directly on the phone:

- **Settings > Apps**

 Details about the settings are in [Apps](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Automatic call acceptance


This function defines the situations in which the telephone automatically accepts calls.

A typical example is dialling via CTI/TAPI. Here, call centre agents are automatically connected with the call you have initiated on the PC. There is no additional confirmation on the telephone.

Configuration

Web interface:

- **Telephony > Call settings > Automatic call acceptance**


 Details about the settings are in [Automatic call acceptance](#)

Phone:

- **Settings > Telephony > Automatic call acceptance**

 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Automatic start of call

When you finish typing a subscriber number, the call starts automatically in the receiver, headset or in hands-free calling mode, after the predefined time, depending on selected speech channel. You do not need to do anything else to start the call, such as pick up the receiver or press the OK button .

Configuration

Web interface:

- **Telephony > Dialed calls > Automatic start of call**


 Details about the settings are in [Dialed calls](#)

Phone:

- **Settings > Telephony > Automatic start of call**

 Details about the settings are in [Telephony](#)


Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Backup and restore

During a backup, a backup file is created that contains the configuration and other data for the phone. If required, this backup file can be uploaded to the phone again.


A data backup can, for example, be useful if the phone is reset to its factory settings and it is not planned to completely reconfigure it.

 **Note:** Uploading the backup file can involve a data migration. The phone cannot be used while this is happening. A message appears on the display to tell you a data migration is taking place.

 Further help under [Reset to default](#)

Requirement for use

- A data backup involves protected data. Before downloading starts, you must confirm that you want it to do so, in the dialogue window.

 **Important:** Comply with the legal notes below before backing up the data. The data backup includes these elements with special legal protection:

- The phone's configuration
- Names of internal subscribers
- Passwords set for the phone, subscribers, VoIP accounts and VoIP subscribers
- The phone's address books
- Connection data sets with the destination, source, and time information for a telecommunication connection.
- Potentially WLAN passwords
- VPN information and VPN credentials

Backup and restore

- Potentially webcam and access data
- LDAP information
- Potentially information about Sync accounts (CalDAV, CardDAV)

All the phone's users must be informed that this content will be transferred, and who will process the data obtained, before a backup is created. It is essential to store the data securely and in accordance with legal requirements. You must ensure that all legal requirements are met if you want to supply the data backup to your specialised dealer or the manufacturer for error analysis.

Configuration

Web interface:

- **Backup and restore**




Details about the settings are in [Backup and restore](#)

Bluetooth

A Bluetooth headset can be connected using wireless Bluetooth technology. The maximum range in the Bluetooth network is 10 m.

Connection

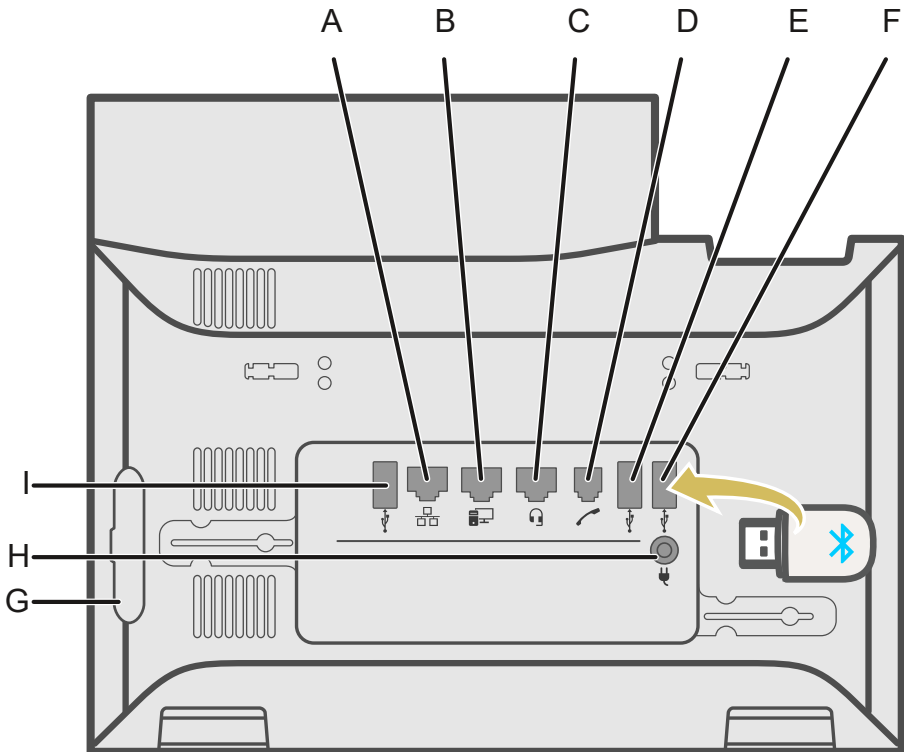

- A Network port
- B Direct PC connection via network cable
- C Headset socket
- D Receiver socket

Bluetooth


- E Connection for optional USB devices.
- F USB port for a COMfortel D-Wireless (EZC-5200BS) Bluetooth dongle.
- G Rubber cover: To connect a COMfortel D-XT20 or COMfortel D-XT20i key extension module, remove the cover and attach it to the extension module.
- H Power supply via COMfortel® D-XT-PS.
- I USB port, exclusively for connecting a COMfortel D-XT20 or COMfortel D-XT20i key extension module.


Configuration

Phone:

- **Settings > Bluetooth**

 Details about the settings are in [Bluetooth](#)

 **Note:** The Bluetooth menu option is displayed the first time you plug the COMfortel D-Wireless dongle (EZC-5200BS) in the device and is not removed if you unplug the COMfortel D-Wireless (EZC-5200BS).


 **Important:** The procedure described below ensures that all components react correctly:

- Plug in the COMfortel D-Wireless dongle (EZC-5200BS) when the device has no power supplied to it

or

- Reboot after plugging in the COMfortel D-Wireless dongle (EZC-5200BS) when the device is operating.

Process

1. Plug the COMfortel D-Wireless Bluetooth dongle (EZC-5200BS) in the USB port provided for that purpose.
2. The following option is then added to the menu: **Settings > Bluetooth**.
3. If you select the Bluetooth function, a list of all accessible Bluetooth devices is displayed.
4. Select the device to which a connection is to be set up.
5. When the connection has been established, the selected device is added to the list of paired devices.
 -  **Note:** If a Bluetooth headset is used, there must be no other pairings with other Bluetooth devices. Deactivate Bluetooth on devices in range.
6. To close a connection, select the paired device in the list and then select OK at the prompt to confirm.

Call


You can use the phone to make internal (on the PBX) and external calls.

Information about a Call

During a call, you see information about the call and your call partner on the screen, as well as general time information (date and time).


DTMF signals

The selected numbers and characters are displayed in the screen for some seconds and you can hear the associated sound.


 Description of the operation under [Call](#)

Accepting a call

A call that has been taken on a different internal phone can be picked up, provided that call pick-up has been permitted on the PBX for the subscriber that is being called.

 Description of the operation under [Pick-Up](#)


This function is useful, for example, in the case of answering machines.


 Description of the operation under [Call](#)

Ending a call

When your call partner ends the call, your phone goes into its idle state. If you hang up the receiver, you will hear the busy signal through the base unit loudspeaker if the receiver has been hung up incorrectly.


Call

 **Note:** If you want to end the current call, and then immediately make a new call, press the soft key **End** and then start dial the next number.

 Description of the operation under [Call](#)

Call bindings

Use call bindings to configure commands that are called directly from a call. For example, a call binding can be used to open a door or switch on a light. Two soft keys can be configured here.

 Link to video (only in German) <https://www.youtube.com/watch?v=8nx44UfFOG8>

Configuration

Web interface:

- **Telephony > Call bindings**


 Details about the settings are in [Call bindings](#)

Phone:

- **Settings > Telephony > Call bindings**


 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Call Completion

Call completion can be used to monitor a busy number.

 Link to video (only in German) <https://www.youtube.com/watch?v=Bi3rKTur028>

Requirement for use

- Both devices are connected to the same PBX
- The PBX supports SIP Subscribe (BLF)

Configuration

Web interface:

- **Telephony > Call signalling > Call Completion**


 Details about the settings are in [Call signalling](#)

Phone:

- **Settings > Telephony > Call Completion**

 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Process

1. You call a subscriber and hear the busy tone.
2. Press the appropriate soft key to activate the automatic callback.

Call Completion

3. A notification is displayed as soon as the called number is no longer busy.
4. Confirm the notification to call the subscriber, who is now free.
5. The callback process is then deleted in the PBX.

Call forwarding

Call forwarding

General

Immediately

On busy

On no reply

General

When call forwarding is used, internal and external calls to a single phone can be rerouted to other internal phones or external connections. This enables calls that arrive on this phone to be taken on another phone. Call forwarding ensures that the relevant subscriber can always be reached using their own phone number, even when they cannot take the call on their own phone.

You can make the following settings:

- Type of call forwarding (Immediately, On busy, By time)
- Call forwarding destination
- Waiting time before call forwarding

Immediately

If "Call forwarding immediately" is configured on the phone, the phone does not ring when there is an incoming call. The call is forwarded to the entered call forwarding destination. The call can be taken there.

Configuration

Web interface:

- **Telephony > Call forwarding > Immediately**

 Details about the settings are in [Call forwarding](#)

Phone:

- **Settings > Telephony > Call forwarding > Immediately**

 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

On busy

If "Call forwarding on busy" is configured on the phone, another incoming call during an active call is not signalled. The call is forwarded to the entered call forwarding destination. Even if call waiting (with or without audible indication) is configured on the phone, another incoming call during an active call is not signalled.

Configuration

Web interface:

- **Telephony > Call forwarding > On busy**



Details about the settings are in [Call forwarding](#)

Phone:

- **Settings > Telephony > Call forwarding > On busy**



Details about the settings are in [Telephony](#)

Provisioning:



Details about provisioning this function in the [Auerswald DokuWiki](#)

On no reply

If "Call forwarding on no reply" is configured on the phone, an incoming call that is not taken within the set signalling time is forwarded to the entered call forwarding destination.

Configuration

Web interface:

- **Telephony > Call forwarding > On no reply**


 Details about the settings are in [Call forwarding](#)

Phone:

- **Settings > Telephony > Call forwarding > On no reply**

 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Call type

During operation on a PBX:

- External call
- Internal call
- Group calling (a call made to a specific group)
- External recall
- Internal recall

Call waiting


Call waiting signals incoming calls during a call.

A call is signalled by

- a tone
- a message on the display

Requirements for use

- If only one identity is set on the phone, call waiting must be switched on, on the PBX, or enabled by the provider.
- Alternatively, you can set up several identities on the phone.

 Further help under [Identities](#)

Configuration

Web interface:

- **Telephony > Call signalling > Call waiting**


 Details about the settings are in [Call signalling](#)

Phone:

- **Settings > Telephony > Call waiting / Audible indication**

 Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Process

1. During a conversation, a call waiting call is signalled.

If the audible indication is switched, you hear a tone. Otherwise, you only see a message on the screen. The call waiting caller hears the ringing tone.

2. You can do one of the following:

- Reject the call waiting call.

The call waiting caller hears the busy signal.

- You take the call waiting call.

You are then connected with the call waiting call. The previous call partner is held.

- You disconnect the current call by hanging up.

Your phone rings. You can accept the call as usual.

- You forward the call waiting call.

The call waiting caller also hears the ringing tone until the called person lifts their handset. You are now connected to the first call partner.

Caller list

Caller list

[Overview of call lists](#)

[Redial List](#)


[Missed calls](#)

[Log calls](#)

Overview of call lists

Conversations (whether incoming, outgoing or missed) are stored in the caller list, with the call partner's phone number and the conversation's date and time.

A maximum of 100 phone numbers can be saved. If more than 100 calls from different phone numbers are received, the oldest entry is overwritten.

 **Note:** If several (incoming, outgoing or missed) calls with the same phone number occur one after the other, they are grouped and displayed as a single call.

 
 

Redial List

The last 50 phone numbers dialled are saved in the redial list. The phone numbers are saved with the date and time on which the user dialled them (or, in the case of multiple attempts to dial them, the date and time of the last attempt).


Accessing the redial list

- Redialling 
- or**
-  > List **OUTGOING**

Calling from the redial list

- Pick up the receiver
- or**
- OK 
- or**
- Headset 
- or**
- Loudspeaker 
- or**
- Touch entry

Deleting Entries from the Redial List

- Entire list: Clear 

Redial List

or

- ∨ Open list > × **Delete from list**



or

- Entire list: Clear  (approx. 2 seconds)

 


Missed calls

The "Only missed calls" list contains the last 50 missed phone numbers. The phone numbers are saved with the date and time on which the user dialled them (or, in the case of multiple attempts to dial them, the date and time of the last attempt).


Accessing the List of Missed Calls

- Messages 
- or**
-  > List **MISSED**

Calling from the List of Missed Calls

- Pick up the receiver
- or**
- OK 
- or**
- Headset 
- or**
- Loudspeaker 
- or**
- Touch entry

Deleting Entries from the List of Missed Calls

- Individual entry: Delete key 

Missed calls

or

- ∨ Open list > × **Delete from list**


or

- Entire list: Clear  (approx. 2 seconds)

i **Note:** You cannot use the Message button to display seen missed calls if the display has been set to Disabled in the **Display and LED > Seen missed calls** menu option.

Log calls

When this function is active, incoming and outgoing calls are saved in the Call history.

 **Note:** If the function is switched off, calls cannot be started by redialling the number.

A possible application for COMfortel D-series devices is in hotels: If the function is switched off, guests are prevented from seeing the phone numbers of calls made previously by other guests.

The Telephony Settings should be blocked, to prevent the function from being activated by unauthorised persons.

 Further help under [User roles and permissions](#)

Configuration


Web interface:

- **Telephony > Call settings > Call history**


 Details about the settings are in [Call history](#)

Phone:

- **Settings > Telephony > Log calls**

 Details about the settings are in [Log calls](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Cameras


The phone supports IP cameras which send single images in *.jpg file format directly via a static IP address/URL.


The image data must comply with these specifications:

- Max. file size 5 MB
- An image must not exceed the maximum size of 4 megapixels. No maximum X- or Y-dimension is set.

It does not support IP cameras that are embedded in websites, dynamic IP addresses/URLs or streaming formats.

Call binding is used to set up connections between the partner and the camera, e.g. to connect a door call with a camera.

 Link to video (only in German) <https://www.youtube.com/watch?v=8nx44UfFOG8>

 Further help under [Call bindings](#)

A configured camera can be set as the wallpaper for the idle screen. Use gesture control to switch between two different views.

- Left: standard view
- Right: view without widgets


Requirement for use

- You need to know the URL, user name and password of the camera to be connected

Configuration


Web interface:

- **Cameras**

 Details about the settings are in [Cameras](#)

Phone:

- **Cameras**

 Details about the settings are in [Camera](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Central caller list

"Central caller list" is a PBX COMtrexx function.

The following data for inbound and dialled calls is saved in the central caller list on the PBX:

- Name (Last name, First name) if known in the central caller list
- Subscriber number
- Identity (user: local phone number, groups: local group name)
- Date
- Time
- Conversation duration

The PBX stores up to 50 entries per user or group.

The PBX automatically updates this list of stored calls in the user's telephone.

The entries can be displayed in a sorted sequence (inbound, missed, all calls) in the telephone.

If this function was not enabled (or temporarily disabled) for the user, none of the calls made in this time period are saved in the list. They are not displayed on the telephone when the function is enabled again.

If this function is disabled, the telephone's local caller list is displayed. If this function is enabled, the local caller list is replaced by the central list, but is not deleted.

If the telephone is not registered when it receives an incoming call, or if an update is being performed, the list in the telephone is updated when the connection is restored.

Central caller list

If a user who is authorised to use the Roaming User function changes telephone, either the local caller list entries or the central caller list entries are displayed on the new telephone (if this function is enabled).

 Further help under [Roaming User](#)

Requirement for use



The function is enabled in the PBX.

Certificate



External connections are encrypted to prevent listening in. The processes used to set up and shut down a connection, and signalling, are all encrypted by SIPS.

Configuration


Web interface:

- **Identities > Options for experts > SIPS**
- **Identities > Options for experts > Certificate**
- **Network > Topology > Basic settings > Check hostname**
 -  Details about the settings are in [Options for experts](#)
 -  Details about the settings are in [Topology](#)

Phone:

- **Settings > Identities > Security > SIPS**
- **Settings > Identities > Security > Certificate**
- **Network > Topology > Check hostname**
 -  Details about the settings are in [Security](#)
 -  Details about the settings are in [Topology](#)

Provisioning:

-  Details about provisioning this function in the [Auerswald DokuWiki](#)


Codecs

A codec is used to code and decode data or signals. The purpose of codecs is to reduce the amount of data to be transferred. Different codecs have different characteristics. Using them, the bandwidth, voice quality or compression are synchronised between the VoIP provider/PBX and telephone. The codec used has a direct effect on call quality over VoIP.

Configuration


Web interface:

- **Identities > Codecs**

 Details about the settings are in [Codecs](#)

Phone:

- **Settings > Identities > Options for experts > Audio**

 Details about the settings are in [Audio](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Conference call

During a conference call you are talking with two subscribers at once.

All the options listed above are for a conference call that you have initiated yourself.


 Description of the operation under [Conference call](#)

Splitting a call

During a conference call, you can talk to one of the two subscribers in turn, and put the other subscriber on hold in the background. You do not have to end the conference call, to do so.

Connecting the other two conference call partners to each other

If you want to leave a conference call, but the conference call partners would like to continue talking with each other, you can connect the two parties with each other.

 **Note:** To enable you to connect two external subscribers with each other, "Transfer of external calls to external" authorisation must be granted on the PBX.

Splitting a conference call

The conference call is cancelled. One subscriber is put on hold and there is an active connection with the other subscriber. You can change between holding a call and an active call.

Holding a conference call and initiating an additional call

The entire conference call is held. The conference call partner hears music on hold. When the call ends, the conference call can be continued.

Ending a call with a conference call partner

You can end the call with a specific conference call subscriber and then keep talking to the remaining subscribers. This also applies if one of the conference call partners hangs up.

Ending a conference call completely

If you initiated the conference call, you can end the conference call completely.

Contact

Use the Contact key to display saved subscriber numbers with names.

If a subscriber number associated with a contact is transmitted during a call, the assigned name will be displayed (instead of the subscriber number).


Additional subscriber numbers and information can be saved for each contact.

In addition, the internal subscriber numbers (subscribers, groups, emergency call) are displayed.


All contacts are displayed in alphabetical order in the contact list.

Contacts to whom calls are made frequently can also be displayed in the Favorites list.

Contacts can be saved using backup.

 Further help under [Backup and restore](#)

OverviewContacts

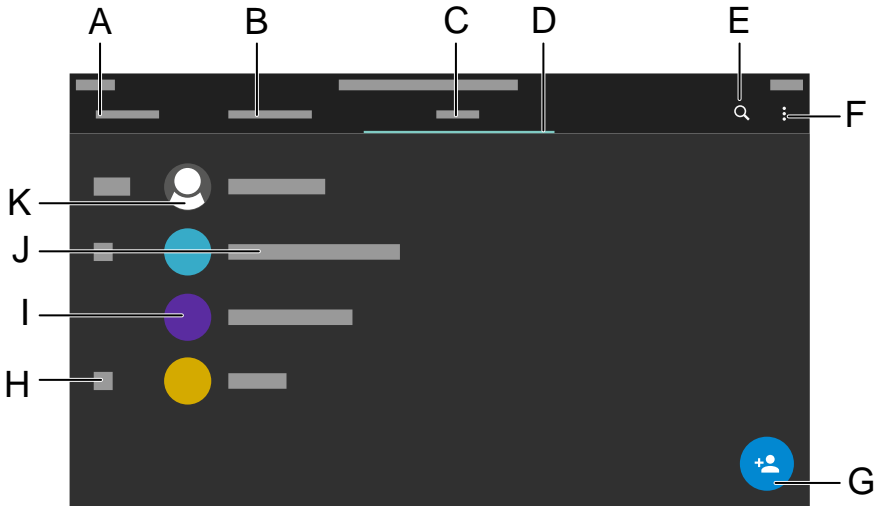


- A Title of the current application: **Contacts**
- B **Favourites:** Displays the contacts marked with a star.
- C **All:** Displays all saved contacts.
- D Displays the currently active list.
- E Displays the search window.
- F Displays more options.
- G Opens the menu **Add Contact**.
- H Alphabetical register
- I Contact profile consisting of a coloured circle and abbreviated name or contact photo, if selected.


Contact

J Displays the saved name.


K ME Contact, always in 1st place.

 **Note:** If the LDAP function is activated, the LDAP folder is displayed below the list of contacts that have been created locally. Special features of this service:

- An alphabetic register is not displayed.
- The number of displayed contacts differs according to the setting (**LDAP > Max. LDAP contacts**).
- You cannot delete or edit LDAP contacts, or mark them as a favourite.
- Calls the contact photos stored on the LDAP server and displays them in the corresponding contact profile.

 **Note:** The contact photos are called every time a call is made. There may be a slight delay in displaying them.

Edit Contact

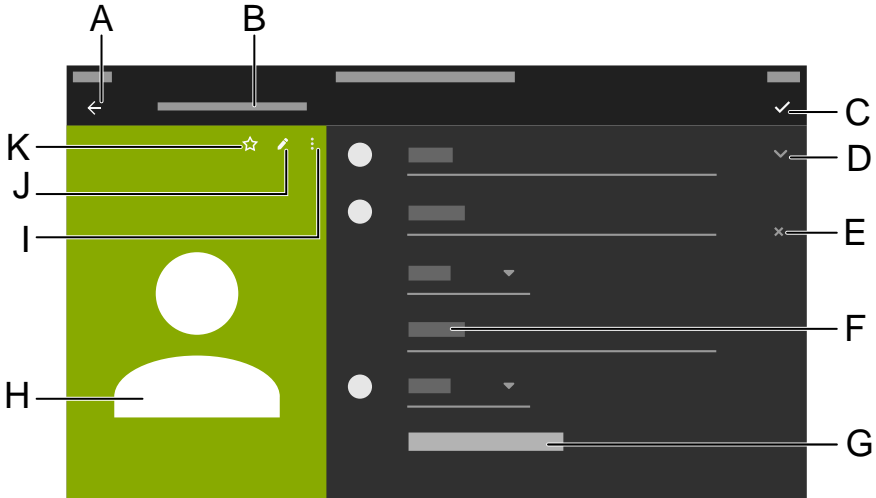

A Jumps to the menu **Contacts**.

B Title of the current application **Add Contact**.

C Saves all the entries for the contact.

D Displays options for the entries that have been made.

E Removes entries that have been made.

F Enables you to fill in the field using the keypad or screen keyboard.

G **Other fields**.


H Profile of the contact you have created.

Note: Options I, J and K are only displayed for an existing contact, not for a contact that has just been created.

Contact

- I **Delete** is displayed as an option.
- J Enable you to edit an existing contact.
- K Marks the selected contact as a Favourite.

 **Note:** LDAP contacts look different from locally created contacts:

- The background colour of an LDAP contact profile is uniformly grey.
- The options **Delete** , **Edit** or Mark as favourite are not available
-  An LDAP contact is copied and added to the list of locally created contacts.


CTI

CTI (Computer Telephony Integration) is a communication solution with which the phone can be controlled from a PC.

Coupling the phone and PC enables additional functions to be used. These improve the efficiency of communications in a company and ensure improved exchange of information.

With it, for example, contacts can be selected from a database and called directly by clicking with the mouse. Missed calls are displayed directly on the PC, and a recall can be triggered by clicking with the mouse.


The implementation of CTI takes place in the devices of the COMfortel D-series via Action-URL.

 Further help under [Action URL](#)

Date and time

The date and time are displayed in the phone's status line.

The date and time are needed to log incoming, outgoing and missed calls and to control various functions on the phone, such as automatic updates.

 **Note:** If you change the time zone, the time stamp assigned to all data on the phone is adjusted to suit the new time zone.

Configuration

Web interface:

- **Date and time > Basic Settings**



Details about the settings are in [Date and time](#)

Phone:

- **Settings > Date and time**



Details about the settings are in [Date and time](#)

Provisioning:



Details about provisioning this function in the [Auerswald DokuWiki](#)

Device Information

If required, you can display detailed information about the phone and assign a device name to it.

The device name you assign is:

- displayed in the browser tab after you enter the device type
- displayed in the phone's widget, unless a name with higher priority has been assigned (SIP display name (on which provisioning can be performed), display name from identities)
- used to manage the device for Bluetooth connections
- used as the identifier for a backup file.

Example: [Device name]_ [device type]_ config_ [date]_ [time].xml

Display Options





Web interface:

- **Dashboard**
 - Details about the settings are in [Status information](#)

Phone:

- **Settings > About phone**
 - Details about the settings are in [About phone](#)

 


Dial a Subscriber Number Manually

-  **Important:** Always enter external subscriber numbers with a leading exchange line access number. In the default settings, the PBX's exchange line access number is "0", but it can be changed in some PBXs (refer to Advanced Information of the PBX).
-  **Notices:** When dialling through a standard SIP account, you can prevent automatic output of the area code by entering a leading "#" and thereby reach for example the VoIP provider's voice mailbox. If you want to exit dial preparation without dial the subscriber number entered, press Back .
-  Description of the operation under [Dialled calls](#)

Direct call

The Direct call function supports people who need assistance or children who are unable to dial a specific number or perform other actions on the telephone. To use this function, both the Destination and the Waiting time before call starts in s must be defined. The function will not become active unless a Destination is entered. As soon as the receiver is picked up or placed next to the device, the Destination is called after the defined Waiting time before call starts in s has elapsed.

The direct call can be started immediately by pressing one of the following keys


- 
- 
- 

The Direct call countdown is cancelled if:


- a different phone number or digit is entered
- the receiver is hung up

Configuration

Web interface:


- **Telephony > Call settings > Direct call**
 Details about the settings are in [Direct call](#)

Phone:

- **Settings > Telephony > Direct call**
 Details about the settings are in [Direct call](#)

Direct call

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Display and LED

Settings in the Display and LED menu adjust the device to suit existing conditions at its place of use and your preferences. They affect the following:

- The device's potential idle state
- Phone display brightness
- The brightness on all connected key extension modules
- The way the message LED behaves
- Proximity sensor
- Ambient light
- Keypad brightness
- The way icons are displayed on connected key extension modules.

Configuration


Web interface:

- **Display and LED**

 Details about the settings are in [Display and LED](#)

Phone:


- **Settings > Display and LED**

 **Note:** To display the slider used to set the brightness, you can also drag the status bar out of the top display edge.

 Details about the settings are in [Display and LED](#)

Provisioning:

Display and LED

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Do not disturb

If Do-not-disturb is enabled, inbound calls are rejected.

The caller hears the busy tone.

The Do not disturb function has no effect on dialled calls and callbacks.

Configuration

Web interface:

- **Telephony > Call signalling > Do not disturb**


 Details about the settings are in [Call signalling](#)

Phone:


- **Settings > Telephony > Do not disturb**

 Details about the settings are in [Telephony](#)


Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Fallback identity

 Link to video (only in German) <https://www.youtube.com/watch?v=3aJlpAHd0Zg>

A configured fallback identity supports system operation. If the main identity fails, the fallback identity is automatically registered on the PBX/at the provider.

 **Note:** This process starts automatically and may take a few minutes.

The fallback identity only has reduced functionality. For example, functions cannot be assigned to some function keys.

When a fallback identity is active, the message key flashes and informs the user about the current status.

When the main identity is restored, the fallback solution is automatically disabled and operation starts again, as it was before.

Each main identity can only have one fallback identity and vice versa. You cannot set up a chain or ring.

Requirements for use

- The fallback identity must be configured on a different PBX or at a different provider.

Configuration

Web interface:

- **Identities > Options for experts > Fallback for**

Fallback identity

 Details about the settings are in [Options for experts](#)

Phone:

- **Settings > Identities > Options for experts > Fallback for**

 Details about the settings are in [Fallback for](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Process


You can decide whether a configured identity is to function as a main or fallback identity.

- No other settings are necessary for a main identity.
 - This setting is necessary for a fallback identity:
1. In the "Fallback for" list, select the identity that is to be covered by a second if it becomes necessary.
 2. **Save**


Function keys

The device has touch function keys which you can program to suit your needs. Each function key has a multi-colour display that indicates its status, based on its assignment.

The number of programmable function keys on the device can be extended by adding up to three COMfortel D-XT20 or D-XT20i key extension modules (not included in the scope of delivery). Modules are attached to the right-hand side of the phone.

 **Note:** If you connect more than one key extension module, use a COMfortel D-XT-PS power supply unit (not in the scope of delivery).

The programmable function keys on the key extension module can each be defined three times (on three levels).

 **Note:** New parameters have been defined for some function keys (e.g. Speed dial) from firmware version 1.10. If functionality is restricted following an update to a higher firmware version, it might be sensible to delete the particular key and then configure it again.

Configuration

Web interface:

- **Function keys**


 Details about the settings are in [Function keys](#)

Phone:

- **Settings > Function keys**

or

Function keys

- In the touch function keys area on the home screen >  **Add entry to list**

 Details about the settings are in [Function keys](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Procedure for assigning function keys using the phone

Setting up a new function key on the telephone:

-  **Add entry**

Assigning a function to a free position between 2 function keys on the telephone:


- Use the directional pad keys to navigate to the relevant position.
- **Insert**

The new key is inserted above the selected key.

The numbering of subsequent keys is adjusted.

Setting up a new function key on the COMfortel D-XT20/-XT20i key extension module:

- Press a key that is not assigned (keys that have a function assigned to them shine orange).

 **Note:** If a key to which a function has not been assigned is pressed for a longer time (long press), the menu for configuring the selected key opens automatically.

- If necessary, change between key levels by pressing the control rocker.

Selecting a Key Level (only extension module)

Change between key levels by pressing the **control rocker**.

On the key extension module, you can see the current key level on the horizontal scroll bar on the top and bottom edge of the display.

The display content changes according to the selected key level. The function key names are also displayed.

If no function keys have functions assigned to them, the display does not change.

Process for assigning function keys using the Web Interface

1. Select a button to which a function has not already been assigned.
2. Change to the right level, if required (**Level 1– 3 tab**, only extension module).
3. Select the function that is to be assigned to the key.
4. Set other necessary parameters, if necessary.
5. Save your settings.

The assigned key label is displayed on the display.

The key can be used with the function that has been assigned to it.

Extending the range of functionality using provisioning

You can use the templates in a provisioning file to extend the range of functions on the phone. These additional functions can be assigned to function keys.

Requirement for use

Function keys

- Provisioning from PBX search enabled
 - Further help under [Using provisioning](#)
- PBX firmware from Version 7.4
- Suitable template < > phone assignment on the PBX

During the next provisioning process, the configurations in the template file are loaded into the phone. The additional PBX functions are in the **Choose a function** (phone) or **Function** menu (web interface) and can be assigned to the function keys.

➤ Further help in the [Auerswald DokuWiki](#)

Configured speed dial number can have a picture assigned to it

You can assign a picture, e.g. of the contact person involved, to a configured speed dial number, making it easier to assign a subscriber number to a contact.

Requirement for configuration:

- The URL of the external server on which the picture is stored
or
- picture with Base64 encoding
- Speed dial number is configured

➤ Further help under [Speed dial](#)

➤ Further help in the [Auerswald DokuWiki](#)


Function key icons can have a picture assigned to them

You can assign a different image to a function key, via provisioning or in the web interface, enabling you to create a personalised user interface.

Requirement for configuration:

- Image file in one of these formats
 - .jpg
 - .png
 - .bmp
 - .gif (animations are not displayed)

 Link to video (only in German) <https://www.youtube.com/watch?v=bYMfJZkbuyU>

 Details about provisioning this function in the [Auerswald DokuWiki](#)


Function templates

If a device in the COMfortel® D-series is used on an Auerswald/FONtevo PBX, this function is used to provide access to templates and scripts that are specially designed for running on Auerswald/FONtevo PBXs. It is not necessary to have correctly configured provisioning to use it.

Configuration

Web interface:

- **Using provisioning > Additional function templates**

 Details about the settings are in [Additional function templates](#)

Phone:

- **Settings > Using provisioning**

 Details about the settings are in [Using provisioning](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Hands-free calling mode

During hands-free calling, the loudspeaker and microphone on the device are switched on. This enables you to phone if you don't have a hand free. Other people in the room can take part in the call.


 Details about the settings are in [Hands-Free Calling](#)

Headset mode

A headset enables you to participate in calls without actually holding the receiver, unlike when you use a receiver. Corded and cordless headsets are supported. Headsets that are connected to the telephone are prioritised as follows:

1. Bluetooth headsets
2. USB headsets
3. Headsets with a DHSG interface

 **Note:** Only connect one USB headset.

 **Caution:** Disconnect the telephone from the power supply before plugging in a USB headset.

A headset must be plugged in for these functions to work:

- Initiating headset calls
- Transferring an active call to the headset
- Ending a call in headset operation
- Initiating the listen-in function on the receiver
- Ending the listen-in function through the receiver

 Description of the operation under [Headset Call](#)

Identities

Identities

General

PBX


VoIP provider


General

An identity contains all the configuration data needed to register on a PBX/ with the provider and to enable telephoning. Up to 6 identities can be configured for the phone. One of these identities is the default identity.

The following applies to the default identity:

- There is only one default identity.
- The default identity is automatically used for dialled calls.
- If only one identity has been configured, it is automatically the default identity.
- If more than one identity has been set up, you can configure an Identity function key for each identity. If necessary, (e.g. if there is a problem with the default identity), you can simply press the appropriate function key to set another current identity as the default identity.

 **Note:** The exception to this are the fallback identities. Fallback identities inherit their status from the main identity.

 **Caution:** The default identity does not switch automatically. If a default identity fails, the LED on the appropriate function key lights up red.

PBX

Requirements for configuration



- You need to know the internal subscriber number for the phone entered in the PBX configuration
- You need to know the password entered in the PBX configuration
- You need to know the IP address set for the phone on the PBX
- The PBX must support the different codecs.

 Further help under [Codecs](#)


Configuration

1. Enter the data specified by the PBX and make settings
SIP Username = internal number as assigned on the PBX
SIP Registrar = The PBX's IP address
2. Enable an identity


Web interface:

- **Identities** > Display settings 
 Details about the settings are in [Identities](#)


Phone:

- **Settings** > **Identities**
 Details about the settings are in [Identities](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

VoIP provider

 Link to video (only in German) <https://www.youtube.com/watch?v=v5v923ASa2M>

Requirements for configuring an identity

- You need to know the user name assigned by the VoIP provider
- You need to know the password assigned by the VoIP provider
- You need to know the Authentication ID assigned by the VoIP provider
- You need to know the IP address assigned by the VoIP provider
- The VoIP provider must support the different codecs.

 Further help under [Codecs](#)

Configuration

1. Enter the data specified by the PBX and make settings
SIP Username = internal number as assigned on the PBX
SIP Registrar = The PBX's IP address
2. Enable an identity

Web interface:


- **Identities** > Display settings 

 Details about the settings are in [Identities](#)


Phone:

VoIP provider

- **Settings > Identities**

 Details about the settings are in [Identities](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Idle state

The telephone enters its idle state if it is not used before the time set here elapses.

The idle state display is displayed when the phone is in its idle state.

When the screen is in its idle state, it has:


- reduced brightness
- time display
- date display

To cancel the idle state, you can:

- press any key
- pick up the receiver
- use gesture control if the proximity sensor is switched on.

Tapping the display does not bring the phone out of its idle state.

If you want to make a call to a particular phone number while the phone is in idle state, the first digit key you press will bring the phone out of the state. You must then enter the first digit again to make the call.

 **Note:** "No automatic" is set as the default value.

Configuration

Web interface:

- **Display > Basic Settings > Idle state**

 Details about the settings are in [Display and LED](#)


Phone:

Idle state

- **Settings > Display and LED > Idle state**

 Details about the settings are in [Display and LED](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

InterCom


The InterCom function enables an audio connection to be established to a phone without someone having to actively take a call (for example, in a medical practice). Communications takes place bi-directionally so that a person who is close by can use the intercom created to talk to the caller.

Requirement for use


- PBX firmware from Version 8.2 with activation for **D-series convenience package**
- For the InterCom destination:
 - InterCom permission granted in the PBX
 - Activated function: **Automatic call acceptance > On SIP request**
 - Optional: **Beep when connecting, Interrupt active calls**
- For the InterCom source:
 - Configured speed dialling key with **InterCom** parameter activated

Configuration (InterCom destination)


Web interface:

- **Telephony > Call settings > Automatic call acceptance**
 -  Details about the settings are in [Automatic call acceptance](#)

Phone:

- **Settings > Telephony > Automatic call acceptance**
 -  Details about the settings are in [Telephony](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Configuration (InterCom source)

Web interface:

- **Function keys** > new function key > **Speed dial**

 Details about the settings are in [Function keys](#)

Phone:

- **Settings** > **Function keys** > new function key > **Speed dial**

 Details about the settings are in [Function keys](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Process

1. Press a speed dialling key configured for InterCom.
The function key's LED flashes red. If a call connection has been made, the LED starts shining red.
2. If the **Beep when connecting** setting is activated, a short signal tone is output at the InterCom destination.
3. A bi-directional connection is then present between the InterCom source and InterCom destination without a call being actively taken.

Jitter buffer

Specifies how many RTP packets can be cached to buffer or compensate for disruptions.

Configuration


Web interface:

- **Network > Topology > Jitter buffer**


 Details about the settings are in [Jitter buffer](#)

Phone:

- **Network > Topology > Basic Settings**

 Details about the settings are in [Topology](#)

Provisioning:


 Details about provisioning this function in the [Auerswald DokuWiki](#)

Language and location


You can configure the phone to suit the particular locale by setting the language for the screen and the keyboard.

Configuration


Web interface:


- **Start > Language and location**
 -  Details about the settings are in [Language and location](#)

Phone:

- **Settings > Language and location**
 -  Details about the settings are in [Language and location](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

 **Note:** In the web interface, you can set both the language and location, both for the web interface and for the phone.

LDAP

Using LDAP (Lightweight Directory Access Protocol), you can, for example, make phone books on a PBX available to the phone. Stored contact information is called and displayed in

- All call lists
- contact lists
- calls
- suggestions lists in dial preparation.

None of the information for a contact is stored on the device.


Requirement for configuration


- An LDAP server (for example, a PBX) and a minimum of one configured LDAP account.

Configuration

Web interface:

- **LDAP**

 Details about the settings are in [LDAP](#)

 **Note:** The settings under **LDAP > LDAP filter** should only be carried out by experts. LDAP filter syntax is used. RFC 2254 and RFC 4515 are used.


Phone:

- **Settings > LDAP**

 Details about the settings are in [Contacts/LDAP](#)

LDAP

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

LLDP

IP phones use LLDP to collect and query device-specific information from devices that are directly connected in the network. This automatically updates the VLAN configurations contained in the LLDP packages. The VLAN configurations are uploaded from the switch to the IP phone. An IP phone can therefore be connected to any LLDP-enabled switch, receive its VLAN configurations (internal port) and then start communications via the VLAN (plug and play networks). To do this, the IP phone sends its device information using the LLDP-MED software upgrade.


Requirements for use

- Devices that are directly connected in the network must also use LLDP.

Configuration

Web interface:

- **Network > Topology > Basic Settings**

 Details about the settings are in [Topology](#)

Phone:

- **Network > Topology > Basic Settings**

 Details about the settings are in [Topology](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Logging

The logging process records all important events, errors and warnings.

A difference is made between:


- logging (errors and warnings) and
- extended logging (debug info).

To display the logged data, press **Web interface > Dashboard > Status Info > **.

Configuration


Web interface:

- **Access > Logging**

 Details about the settings are in [Logging](#)

Phone:

- **Settings > Access**

 Details about the settings are in [Access](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)


Loudspeaker listening mode

In loudspeaker listening mode, both the loudspeaker in the receiver and the loudspeaker in the device are switched on. This enables other people in the room to listen in on the call. The call is continued using the microphone in the receiver (not hands-free operation).

 Description of the operation under [Loudspeaker listening](#)

Music on hold

When an incoming call is on hold, the "music on hold" is played.

 **Note:** If "Music On Hold" has already been enabled on the PBX/at the provider, no additional settings are necessary here.

Configuration


Web interface:

- **Identities > Options for experts > Music on hold**

 Details about the settings are in [Options for experts](#)

Phone:

- **Settings > Identities > Options for experts > Audio > Music on hold**

 Details about the settings are in [Audio](#)


Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

NAT


NAT (Network Address Translation) converts an IP address, for example of a private network, into an IP address on the public network. This gives all computers that communicate with each other in the private network access to the Internet via a single IP address. However, the internal IP addresses on the private network are not accessible for the Internet.

Requirements for configuration


- Configured DNS server
 - When selecting the option **Active**: the STUN server set up for the provider/PBX
-  **Important:** Every open port on the NAT router is a security risk. Apply the appropriate security measures.

Configuration


Web interface:

- **Identities > NAT**
 -  Details about the settings are in [NAT](#)

Phone:

- **Settings > Identities > Options for experts > NAT**
 -  Details about the settings are in [NAT](#)

Provisioning:

-  Details about provisioning this function in the [Auerswald DokuWiki](#)

Network

Network

General

IPv4

IPv6

VLAN

VPN

Topology

General

A network is a group of more than one computer and other communication devices, which are connected together. It provides a way for multiple users to access shared resources.

These protocols can be set up for the device:

- IPv4
- IPv6
- VLAN
- VPN

IPv4


A minimum of one IPv4 address and one subnet mask is required, to enable a device to communicate on the network.

Requirement for configuration


- There must be a connection to the network

Configuration


Web interface:

- **Network > IPv4**
 -  Details about the settings are in [IPv4](#)

Phone:

- **Settings > Network > IPv4**
 -  Details about the settings are in [IPv4 settings](#)

Provisioning:

-  Details about provisioning this function in the [Auerswald DokuWiki](#)

IPv6

A minimum of one IPv4 address and one subnet mask is required, to enable a device to communicate on the network.

Thanks to the longer IPv6 addresses, IPv6 offers a greater number of possible IP addresses than IPv4.

An IPv6 address is 32 characters long and consists of 8 blocks, each containing 4 characters.

Example: 2001:0db8:85a3:08d3:1319:8a2e:0370:7344


Requirement for configuration

- There must be a connection to the network

Configuration

Web interface:

- **Network > IPv6**


 Details about the settings are in [IPv6](#)

Phone:

- **Settings > Network > IPv6**

 Details about the settings are in [IPv6 Settings](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

VLAN

A VLAN (Virtual Local Area Network) is a logical network within a physical network.


Requirements for configuration

- VLAN is provided in the network
- The network interface type is "Enable LAN Port VLAN"

Configuration


Web interface:

- **Network > VLAN**


 Details about the settings are in [VLAN](#)

Phone:

- **Settings > Network > VLAN**

 Details about the settings are in [VLAN](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

VPN

A VPN is a logical private network on a publicly accessible infrastructure. Only communications partners that are on this private network can exchange data and information. Data is exchanged via the VPN tunnel, where the tunnel acts as the envelope in which the data is transported.


Requirement for use

- Each end point must support the specific tunnelling protocol that is being used.
- You need to know the access data required to configure a VPN connection.

Configuration


Web interface:


- **Network > VPN**

 Details about the settings are in [VPN](#)


Phone:

- **Settings > Network > VPN**


 **Note:** The VPN can merely be enabled/disabled on the phone. It can only be configured in the web interface or by provisioning.

 Details about the settings are in [VPN](#)

Provisioning:

 **Note:** An example configuration, for a FRITZ!box (a German DSL modem/router), is described in the Auerswald DokuWiki. This

configuration cannot be applied to VPN connections that are to be set up in a company environment.

 Details about provisioning this function in the [Auerswald DokuWiki](#)



Process


1. Activate **VPN** by dragging the slider to the right.
VPN can alternatively be enabled on the phone.
2. Select the VPN type.
3. Enter the following parameters:
 - **Name**
 - **Server**
 - **User name**
 - **Password**
 - **DNS server**
 - **Search domain**
 - **IPsecIdentifier**
 - **Forwarding routes**
 - **preinstalled IPsecSecret**
4. Load files for these parameters:
 - **IPsecUserCert**
 - **IPsecUserPrivateKey**
 - **IPsecCaCert**
 - **IPsecServerCert**

– OpenVPN Config

Follow these steps: Via **Browse** select the corresponding file > **Save**.

Other options in the upload fields and in the context menu which is now displayed are:

- **View file**
- **Download**
- **Close**
-  **Delete**
-  **Copy**

 **Caution:** Settings for VPN connections of the type **IPsec Xauth RSA** and **IPsec Hybrid RSA** can vary greatly, depending on which server is in use. The network administrator must predefine the configuration.


Topology

Topology settings are non-identity-specific.

Configuration


Web interface:

- **Network > Topology**


 Details about the settings are in [Topology](#)

Phone:

- **Network > Topology**

 Details about the settings are in [Topology](#)


Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Notifications

The descriptions of particular events, such as healthcare-related alarm messages, can be displayed as popup messages. In addition, new popup messages can be announced with an audible tone. The following functions are available for popup messages:

- **Clear**
- **Ignore**

Hides the popup message. Press  to display previous notifications and delete them if required.

Requirement for use

- Device must be operating on a PBX/provider with a connected alarm server
- Optional: The **Play popup notification sound** setting can be selected.

Configuration

Phone:

- **Settings > Identities > select an identity > Options for experts > Audio**

 Details about the settings are in [Identities](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Outbound proxy

The outbound proxy is an intermediate server that processes all VoIP requests and connections going to the provider (except for registration).

You must make settings in the outbound proxy range if:

- the IP address cannot be resolved
- an outbound proxy is present in your own network
- the provider requires an outbound proxy

Requirements for configuration

- Data provided by the VoIP provider/administrator for the **Outbound Proxy host** and **Outbound Proxy port**

Configuration

Web interface:

- **Identities > Options for experts > Outbound proxy**


 Details about the settings are in [Outbound proxy](#)

Phone:

- **Settings > Identities > Options for experts > Outbound proxy**

 Details about the settings are in [Outbound proxy](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Park position

If a park position key has been configured, press this key to park a call or unpark it again. By default, you can configure up to ten park position keys.

i Note: By activating specific extra features the system, it can be extended to 30 park positions for specific countries.


The hold time is configured in the PBX and displays the maximum number of minutes that a call can be held in the internal park zone.

Requirement for use

- **Call parking** configured on the PBX
- Configured park position key

Configuration

Web interface:

- **Function keys > Park position**
 - i Note:** The phone number/URI to be assigned consists of the internal base phone number assigned in the PBX for the open query call and the park position (0 to 9).
 -  Details about the settings are in [Park position](#)

Phone:

- **Settings > Function keys > Park position**
 - i Note:** The phone number/URI to be assigned consists of the internal base phone number assigned in the PBX for the open query call and the park position (0 to 9).

Park position

 Details about the settings are in [Park position](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Process


- An active call is in progress.
- Press a free park position key to park the call (LED stops shining on the key).

No music on hold is played.

The LED on the park position key shines red.

- Press an in-use park position key (key's LED is shining red) to unpark a call from that park position.

The park position key's LED then stops shining.

 **Note:** If the call is parked for longer than the hold time specified in the PBX, you have these options:


- A signal is sent to the user who parked the call in the parking zone.
- If this user is busy, the call is kept in the park zone again for the set time.
- If the hold time expires a second time, without the call being taken, the connection is disconnected and the caller hears the busy signal.

Passwords

Passwords are used for authentication. The user uses the agreed character string to log on to the web interface.

When you set a new password, comply with the conventions below. The password should:


- be different from the previous one used
- contain at least one number
- contain at least one capital letter
- contain at least one lower case letter
- contain at least one special character
- be at least 9 characters long
- be different from the user name

 **Note:** In general: If the password is complicated, it can be shorter. If a password is longer, it can use simpler character strings. Coloured bars provide direct visual feedback about the password strength when a password is entered.

Configuration

Web interface:


- From the factory settings: Password dialogue is displayed when user enters phone's IP address in web browser
- **User**

 Details about the settings are in [User](#)


Phone:

Passwords

- **Settings > Access > Password web interface**

 Details about the settings are in [Access](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Pick-Up


Pick-Up

Pick-up in idle state


Pick-up during a call

Pick-up in idle state

During a pick-up in idle state, you can take a call on your own phone that was being made to another internal phone.


 Description of the operation under [Pick-Up](#)

Requirements for use:


- Permission granted in the PBX for **Pick-Up**
- Pick-up is performed on the PBX and triggered with the sequence **##06**
 -  **Note:** To perform a pick-up using the speed dial button, you must enter the pick-up code.
- Function key with the speed dial for the internal phone that is to be called configured on it

Pick-up during a call

During an active call, you can take a call on your own phone that was being made to another internal phone.

 Description of the operation under [Pick-Up](#)

Requirements for use:


- Permission granted in the PBX for **Pick-Up**
- Pick-up is performed on the PBX and triggered with the sequence **##06**
 -  **Note:** To perform a pick-up using the speed dial button, you must enter the pick-up code.
- Function key with the speed dial for the internal phone that is to be called configured on it


Query Calls

During a query call you are talking with one subscriber while the previous call partner is put on hold by the PBX in the background, and hears the on-hold music.

The phone supports 3 call channels. When the channels in the phone are put on hold in the PBX, they become inactive, so up to 2 calls can be on hold in addition to one active call.

A query call is initiated either by calling a query call subscriber, by picking up during a call, or by accepting a call signalled by the audible indication.

 Description of the operation under [Pick-Up](#)

 Further help under [Call waiting](#)

Options during a query call

- **Splitting a call**

You can use the transfer function to alternate between the call partners.

 Description of the operation under [Query Calls](#)

- **Ending one of the two calls**

When you end a query call and would like to continue talking with one of the call partners, you can end the call with the other call partner separately.

Alternatively, one of the call partners can simply hang up so that you can continue talking with the other call partner.

 Description of the operation under [Query Calls](#)

Query Calls

- **Connecting the two call partners to each other**

If you would like to let your call partners speak with each other, you can connect them.

 Description of the operation under [Query Calls](#)

Redial List

Redial List

 Description of the operation under [Redial List](#)

Reset to default

If you reset the phone to default settings, you can delete any data and settings saved on it. This includes, for example, deleting personal data (such as your contacts), function key assignments and identities.

The phone is shut down and then restarted. This can take some time.

i Note: If you reset the phone to its factory settings, you can delete any data and settings saved on it. All personal data is deleted. You cannot undo this action. To save particular settings such as a configured identity, you can first perform a data backup.

 Further help under [Backup and restore](#)


Requirement for use

- If needed: Back up your personal data and settings

Configuration

Web interface:

- **Update > Restart and factory reset > Reset to default**


 Details about the settings are in [Update](#)

Phone:

- **Settings > Update > Reset to default**

or

- Follow the instructions in **Procedure directly on the device**


 Details about the settings are in [Update](#)

Procedure directly on the device

1. Disconnect the network cable that supplies the phone with current.

The power supply is no longer provided.

2. Press and hold these two buttons at the same time:

- Hold 

- Directional pad 




3. Plug the network cable in again.

The power supply is restored.

The housing LED first flashes quickly, then more slowly.

4. As soon as the casing LED is flashing more slowly, release both buttons.


You have reset the phone to its default settings.

 **Note:** If you do not release the Hold button  and the directional pad  in the predefined time window, the phone boots in the normal way. The phone is not reset to its default settings.

Reverse search

During inbound and outbound calls, the name for the subscriber number is searched for in the locally and non-locally saved contacts on the phone.

If inbound and outgoing calls are made with an unknown subscriber number, "unknown" is displayed in the screen, instead of the name if the caller does not transmit a subscriber number or number transmission is suppressed. However, if the called calls with a subscriber number that is not in any phone book, the transferred subscriber number is displayed instead of the name, unless the central ICT system has already transmitted its own designation instead of the name.

 **Note:** If you deactivate the reverse search, this only affects the device phone book and LDAP. Information that comes from the PBX is not affected and is still displayed, despite this.

Configuration

Web interface:

- **Telephony > Reverse search**


 Details about the settings are in [Call signalling](#)

Phone:

- **Settings > Telephony > Reverse search**

 Details about the settings are in [Reverse search](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Roaming User

Roaming User is a PBX COMtrexx function.

This function enables users who work, for example, in a large office with workplaces that are not assigned to specific people (i. e. "free seating" or "hot desking") to access any telephone that is configured in the PBX. In this way, the user can access the telephone system in the usual way, with their personal settings and authorisations.

Large office use case

The office has workplaces (with telephones) that are not assigned to specific people. These telephones are not assigned to a particular user or roaming user. A roaming user can now log on to one of these telephones. When they change workplace, they simply need to log on to a different telephone.

Office/home office use case


A roaming user has a telephone that is configured in the PBX at their office workplace and in their home office. To move from their office to their home office, the roaming user simply has to log on to their home office telephone.

Requirement for use

Roaming User authorisation must be assigned to the user in the PBX.

Process for logging onto/logging off the telephone

1. The function key →| Login / ←| Logout is provisioned by the PBX.


 **Note:** If the user is logged out, the PBX provisions the Login function key →|. After the user logs in, the PBX uses provisioning to replace the Login function key with the Logout function key.

2. →| Login: The user uses the Login function key to log on to the required phone with their PIN and user phone number.
3. All the user needs to do is log on to a different telephone.

The following regulations/restrictions apply:

- When the user starts using a different telephone, they are automatically logged out of the telephone they were using previously.
- A user can only ever use one telephone at once.
- If a user who is authorised to use the Roaming User function changes to a different telephone, they will either find the entries for the local caller list or the central caller list on it, as before (if the corresponding function is enabled).

 Further help under [Central caller list](#)

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Silent Alert

The silent alarm function makes it possible to send an emergency call immediately, without attracting attention, if a dangerous situation, an escalating call, a medical emergency or a hostage-taking situation occurs.

Configuration

Web interface:

- **Function keys > Silent Alert**
 - Details about the settings are in [Silent Alert](#)

Phone:

- **Settings > Function keys > Silent Alert**
 - Details about the settings are in [Silent Alert](#)


Provisioning:

- Further help in the [Auerswald DokuWiki](#)


Process

- A dangerous situation has occurred and the silent alarm function key must be pressed.
- Depending on the predefined delay, a number of different scenarios are possible:
 - Delay 0 sec: The silent alarm is sent immediately.
 - Delay min. 1 sec: A countdown counter appears on the display. The following options are also available
 - Dismiss:** Cancels the silent alarm.

Start immediately!: Cancels the countdown counter and the alarm is sent immediately.

 **Note:** The notification can be hidden by gesture control. The countdown counter continues running in the background.

- Depending on which URL has been entered, an action is triggered at the destination (a different telephone, a server, an alarm server etc.).
- Alternatively, a warning can be sent as a SIP message to a stored number. You will find the Lua template required to provision the function key in the Auerswald Dokuwiki.

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Silent Call

In a silent call, you can trigger a function by pressing the key to which it has been assigned without displaying the call on the telephone display.

Requirement for configuration

- PBX's valid known URI
- Provisioning from PBX search is enabled
 - Details about the settings are in [Using provisioning](#)
- adapted .xml file with which the PBX function can be triggered.

Configuration

Via provisioning:

- Further help in the [Auerswald DokuWiki](#)

Process

1. Provide a suitable provisioning file.
2. Activate **Provisioning from PBX search**.
3. Enter the relevant Provisioning server URL.
4. Set up a function key with the extended function provided by provisioning.

SIP

The Session Initiation Protocol (SIP) network protocol sets up a communication session between two or more subscribers. SIP is only used to negotiate the communication conditions. Other protocols such as RTP are responsible for actual data transfer.

Session Timer, Session Timeout and Protocol type settings must be made, for problem-free communication.

You can select protocol type UDP or TCP.


- **UDP:** (the User Datagram Protocol) is used to send data packet over connectionless non-secure communication lines. UDP itself does not verify whether data has been transmitted successfully. When a UDP packet is sent, the sender cannot assume that the packet will definitely arrive at the recipient. This particular protocol only needs a small amount of additional information, which results in a better data throughput rate in a well-functioning network such as a LAN. UDP is used, e.g., for the DNS (Domain Name Server).
- **TCP:** TCP (Transmission Control Protocol) is a transport protocol that segments data into packets up to a specified size and reliably sends these individual data packets to the recipient address, in the correct sequence. In this process, every data packet sent must be resent until it has been confirmed as arrived. To ensure this happens, a large amount of information is sent along with the actual payload data. Most Internet services are implemented with TCP, e.g., HTTP (WWW), SMTP/POPS (e-mail), etc.

Configuration

Web interface:


- **Identities > Options for experts**

SIP


 Details about the settings are in [Options for experts](#)

Phone:

- **Settings > Identities > SIP**

 Details about the settings are in [SIP](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

SIPS

SIPS are SIP data encrypted using the TLS protocol. The network protocol sets up a communication session between two or more subscribers.

The provider encrypts external connections to prevent listening in. The processes used to set up and shut down a connection, and signalling, are all encrypted by SIPS.

Requirement for configuration

- The phone's certificate must be known on the PBX.

Configuration


Web interface:

- **Identities > Options for experts > SIPS**


 Details about the settings are in [Options for experts](#)

Phone:

- **Settings > Identities > Options for experts > Security > SIPS**

 Details about the settings are in [Security](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Sound


Sets the sounds for signalling

- inbound calls
- Notifications
- Alarms
- ringtones by call type

Additional ringtones can be added to the device. The number of ringtones is only limited by the amount of memory. Supported file formats:

- .wav
- .mp3
- .ogg.

Maximum music file size: 5 MB. Personalised ringtones will not be backed up.

 Link to video (only in German) <https://www.youtube.com/watch?v=rgZLN7u7jEU>

Priority for defining ringtones

1. A contact/group with a configured ringtone is present locally for a subscriber number. The contact melody defined in the telephone is used first.
2. The alert info in the SIP Invite has a valid URL for a ringtone that can be downloaded externally.


Sound

3. The alert info in the SIP Invite has a pseudo URL or an info field that matches one of the predefined designations, e.g. for group calls, internal calls, external calls, alarm calls, door calls or “mute” calls).
4. The identity has a specific ringtone.
5. A defined default ringtone is used.
6. The Android fallback ringtone is used.

Configuration


Web interface:

- **Sound**


 Details about the settings are in [Sound](#)

Phone:

- **Settings > Sound**

 Details about the settings are in [Sound](#)

Provisioning:


 Details about provisioning this function in the [Auerswald DokuWiki](#)

Process

1. All available sounds are listed.
2. A plying of the tone is achieved by
 - navigation in the list using the directional pad keys
and
 - hovering over the selected entry

Sound

3. When you confirm your ringtone selection, the menu closes.
The selected sound is then used as the default for incoming calls.

 Link to video (only in German) <https://www.youtube.com/watch?v=DtrNdzMUOBQ>

Speed dial

With the "speed dial" function, you can not only assign internal and external subscriber numbers to a function key, but also PBX programming sequences.

Speed dial keys can be used in the following ways:

To Dial a Subscriber Number

The subscriber number will be dialled immediately when a speed dial button is pressed. If a speed dial button is pressed during a call, a query call is placed and the saved subscriber number is dialled immediately.

Assignment Overview

Speed dial buttons assigned to internal subscriber and group subscriber numbers provide a way for the user to view the LEDs and see which subscribers and groups are active or busy.

Pick-Up and Call Pick-Up

Speed dial buttons defined with internal subscriber and group subscriber numbers enable pick-up for these subscribers and groups. If the LED next to the button is blinking red because the saved subscriber number is being called, you can take the call on your phone by pressing the speed dial button and then confirming. If a subscriber allows call pick-up (for example on an answering machine), you can still take the call on your phone in the same manner, even after it has already been accepted.

Configuration

Web interface:

- **Function keys > Speed dial**

Speed dial

 Details about the settings are in [Speed dial](#)

Phone:

- **Settings > Function keys > Speed dial**


 Details about the settings are in [Speed dial](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Assigning a picture to a configured speed dial number


Requirements for use:

- The URL of the external server on which the picture is stored
or
 - picture with Base64 encoding
-  A suitable tool for converting pictures to Base64 standard is provided at [Image2Base64-Converter](#)

To assign a picture to a configured speed dial number, do this:

1. Use the web interface to backup and restore your phone's current configuration: **Backup and restore > Create backup > Save.**
2. Open the backup file in a suitable editor.
3. In the code, find the place where the speed dial number is configured:

```
<key keyNumber="" icon="" info="" label="">
```


 **Note:** The values assigned during configuration for keyNumber, info and label are displayed.


4. In icon="", enter this data between the two quotation marks:

Speed dial

- the external server's URL
- or
- the character string output by the Converter.

5. Save the backup file.
6. Using the web interface, upload the backup file back into your phone:
Backup and restore > Restore backup > Browse > choose stored file > Import.

The icon for  is replaced by the selected picture.

 Link to video (only in German) <https://www.youtube.com/watch?v=ICEt-9Za3MA>

 Further help in the [Auerswald DokuWiki](#)

SRTP

SRTP (Secure Real-Time Transport Protocol) is used to encrypt call data.

- ! **Important:** If you are using this on a PBX, the PBX specifies the encryption method. In contrast, you must adjust the encryption settings on the phone.

Configuration

Web interface:

- **Identities > Options for experts > SRTP**
 - Details about the settings are in [Options for experts](#)

Phone:

- **Settings > Identities > Options for experts > Security > SRTP**
 - Details about the settings are in [Security](#)

Provisioning:

- Details about provisioning this function in the [Auerswald DokuWiki](#)

Sync

Use the Sync app to configure other cloud services. Most importantly, contacts and calendar entries from a cloud provider are synchronised with the telephone.

Requirement for use

Information needed to set up an account:

- Provider's name
- E-mail address or username
- Password

Also needed, in the case of manual configuration:


- Server name or address

 **Note:** The particular provider's CardDAV address is also required.

Configuration

Phone:



 Details about the settings are in [Sync](#)

Process

1. Before you can start configuring an account, you must assign the authorisation to synchronise calendar entries and contacts.

Sync

2. Add a new account to the Sync app. You can configure an account manually if the required provider is not in the list.

– **Choose provider**

To do so, follow the instructions on the device display. To configure the account, you need the e-mail address or username, the name of the provider and the associated password.

– **Manual setup**

Enter the data required to configure the account. Press **Sign In** to end configuration.



Note: If you configure an account manually, a new entry with this account is automatically added to the provider's list.

3. Adjust the Sync Interval if necessary.

4. Import the contacts and calendar entries.

When the new account has been successfully configured, the contacts and calendar entries for the synchronised account are displayed on the device. Synchronisation is performed in both directions. Entries created on the device are also visible, and can be used, on other end devices.

Trace

If the phone malfunctions, a log can be recorded. It can then be sent to the technical departments (Service, Development) so that the cause of the fault can be investigated.

Requirement for use

- Protected data is logged when a trace recording is produced. Before recording starts, you must confirm that you want it to do so, in the dialogue window.

! **Important:** Comply with the legal notes below before recording a network data stream. The recorded data includes, amongst other things, the following elements, which have special legal protection:

- Data streams from other computers in the network
- Connection data sets with the destination, source, and time information for a telecommunication connection.
- The spoken words from both ends of a telecommunication connection
- Phone configuration data, along with the associated PINs and passwords
- Directory data with names and phone numbers

All the phone's users must be informed that this content will be transferred, and who will process the data obtained, before the data is recorded. It is essential to store the recorded data securely and in accordance with legal requirements. If you want to provide your specialised dealer or the manufacturer with the recorded data, for error analysis, you must ensure that the legal requirements are fulfilled.

Configuration


Web interface:

- **Dashboard > Status information**

 Details about the settings are in [Status information](#)

Process

Requirements:

- Pop-up blocker has been disabled in the browser or an exception rule has been defined.
1. Start recording the trace by selecting **Dashboard > Status information > Start trace**.
 2. If it is easy to reproduce the faulty behaviour, try to trigger it now.
 3. Stop the recording.
 4. The file is saved automatically and displayed in the browser's downloads list.
-  Contact [Auerswald Support/ FONtevo Support](#), to arrange for it to be analysed.

Transferring calls

Call transfer types

Transfer the call with an announcement

Transferring a call without an announcement

Calling a 3rd internal subscriber

Call transfer types

A call partner can be transferred (connected) to an internal or external subscriber.

During an existing call, you can perform a call transfer in these ways:

- Transfer the call with an announcement
- Transfer the call without announcement (blind transfer)
- Calling a 3rd internal subscriber and connecting them to an active call partner

Transfer the call with an announcement

Requirement for use

- Initiated query call

Process

To transfer a call, a query call is placed.

The call is announced.

The two call partners are connected with each other.

 Description of the operation under [Transferring calls](#)

Transferring a call without an announcement

Also called blind transfer.

Requirements for use

- Initiated query call
- To connect two external communication partners, the following is required: Permission granted in the PBX for **Transfer of external calls to extern**
- Internal transfer destination

Process

If an external call partner is to be transferred to another internal subscriber, there is no need to wait until the subscriber called in the query call picks up. The receiver can be put down during calling.

The call to the internal subscriber will be forwarded.

If the subscriber accepts the call, the connection is established.

If the called subscriber does not pick up, the call returns to the caller's own phone (the phone rings) after 2 minutes (or as set on the PBX or at the provider).

 Description of the operation under [Transferring calls](#)

Calling a 3rd internal subscriber

Calling a 3rd internal subscriber and connecting them to an active call partner

Requirements for use

- Initiated query call
- To connect two external communication partners, the following is required: Permission granted in the PBX for **Transfer of external calls to extern**

Process

An additional call is added to a existing call (for example, when a call waiting call is accepted).

This second subscriber is to be transferred to another subscriber.

To do so, a third call is triggered and the second subscriber is connected to the third subscriber.

The original, existing call continues.

Update


An update involves updating the firmware to add new features and resolve any problems that might exist. Here, the device sets up a connection with an update server, from which it downloads the latest firmware. (The settings on the device remain unchanged). There are three ways of carrying out an update:


- Manual update
- Automatic update
- Provisioning

 Further help under [Using provisioning](#)

If the "Check for updates" function is activated, the device searches for updates at these times:

- Update attempt when the phone is restarted
- Update attempt after provisioning
- Update attempt according to the schedule

 **Note:** An update can trigger a data migration. The phone cannot be used while this is happening. A message appears on the display to tell you a data migration is taking place.

 **Important:** If the updater fails to boot the device (e.g. because there is a defective hard disk partition), the system informs you in an error message. Pass the content of this message on to the Service team if requested.

Requirements for configuration

- Address of the update server

Manual Update

During a manual update, the downloading of the update is triggered manually. After the update, the phone restarts automatically.


Configuring a manual update

1. Enter the Update server URL

In the default settings: <https://update.auerswald.de>


Web interface:

- **Update**


 Details about the settings are in [Update](#)

Phone:

- **Settings > Update**

 Details about the settings are in [Update](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Manual update process

1. **Web interface:** Press **Start update**

Phone: Press the Install soft key as soon as the message that a new firmware version is available is displayed on the screen.

Automatic update

In the case of an automatic update from the update server, a regular (e.g. weekly) automatic update can be configured. You can set the weekday and time.

Configuring an automatic update

1. Enable Automatically install updates
2. Enter the Update server URL


In the default settings: <https://update.auerswald.de>

3. **Web interface:**

Set the weekdays and time.


Web interface:

- **Update**


 Details about the settings are in [Update](#)

Phone:

- **Settings > Update**

 Details about the settings are in [Update](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Automatic update process

It can take up to 60 minutes to perform an automatic update.

Update

When you set the Weekday/Clock Time for an automatic update, the system checks for new firmware during this time period and downloads and installs it if necessary.

If automatic update is not enabled, the system only checks for a newer version of the firmware during this time period.

If there is a newer version of the firmware, you are informed in a message on the screen.

User roles and permissions

Roles can be assigned to ensure that only particular functions are made available for use by specific users. The configuration can be restricted to just a few functions.

Access is subdivided into two permission levels:


	Admin	User
Web interface	Password protection	Password protection
	Unrestricted use.	Restricted use. The following options are not possible: Reset the device to the factory settings. Add or delete users. Trace log recording if an error occurs. Restrict the configuration for displaying and removing menu options.
	Display all menus.	Displays menu options selected by the administrators. Exception: Permanent summary display of: Dashboard , Network .


	Admin	User
phone	Authorisation to add or delete users or administrators.	Only one's own user settings (username, password) can be edited.
	The phone does not distinguish between authorisation levels. The displays are the same for all users.	
	Displays menu options selected by the administrators. Exception: Permanent summary display of: About phone , Network.	


Configuration

Web interface:


- **User**

 Details about the settings are in [User](#)


 **Note:** By default, one administrator is configured.

 **Caution:** Passwords that are unchanged from the factory settings are a security risk. Change the password without delay.

- **Access**

 Details about the settings are in [Access](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Using provisioning

Provisioning involves automatically configuring one or more phones using a provisioning server URL. Here, the phone sets up a connection with a provisioning server, over which it receives the necessary configuration data. An update is then carried out.

i Note: To ensure interference-free operation, some local functions are not available on the terminals after provisioning by a cloud PBX (e.g. COMuniq ONE). Data stored locally on the phone can be deleted or reset.

Provisioning options

- **Provisioning with DHCP data**

The phone obtains the provisioning server's URL from a DHCP server. Additional data for controlling provisioning can also be transferred along with the URL.

- **Provisioning using a redirect server**

The phone obtains the provisioning server's URL from the redirect server.

- **Provisioning from PBX search**

The phone is configured automatically via the PBX.

i Note: Activate **Provisioning from PBX search**, for example, if you want to add PBX functions to the function key assignments.

- **Provisioning using the provisioning server URL**

The URL is required if provisioning is not performed using DHCP data or a redirect server.

- **SIP provisioning**

Using provisioning

The phone is configured using incoming SIP messages.

Requirements for configuration

- The PBX or phone must be connected to a broadband Internet connection.
- Network access with valid settings
 - Further help under [Network](#)
- Valid time

➤ Further help under [Date and time](#)

Configuration

Web interface:

- **Using provisioning > Basic Settings**
- **Using provisioning > Schedule**
- **Using provisioning > SIP provisioning**
 - Details about the settings are in [Using provisioning](#)

Phone:

- **Settings > Using provisioning**
 - Details about the settings are in [Using provisioning](#)

Provisioning:


➤ Details about provisioning this function in the [Auerswald DokuWiki](#)

Automatic provisioning process

1. Enable Automatic provisioning.
2. Select one of these:
 - Provisioning with DHCP data
 - Redirect Server
 - Provisioning from PBX search
 - Provisioning server URL

You can select combinations of these options.

3. Configure the schedule.

 **Note:** You can only configure the schedule in the web interface.

Automatic provisioning is performed as set in the schedule and also each time the device is restarted.

Manual provisioning process (only on the phone)


1. Select one of these:
 - Provisioning with DHCP data
 - Redirect Server
 - Provisioning from PBX search
 - Provisioning server URL

You can select combinations of these options.

2. Select **Start provisioning**.

Provisioning is performed.

SIP provisioning process (only in the web interface)

- Switch on SIP provisioning.
-  You will find more information on configuration via SIP messages and also the provisioning process in the [Auerswald DokuWiki](#).

Voicemail App

The Voicemail app can be used with release version 2.4A and above (COMfortel D-400 devices and above).



The Voicemail app can be used to retrieve and organise fax and voicemail messages. The Voicemail app communicates directly with the ICT system if the ICT system being used is integrated in the network and can be accessed over the Internet. Users of a provisioning PBX do not need to enter any credentials. The app is self-provisioning.

Requirement for use

- ICT system is integrated in the network and can be accessed over the Internet, by VPN if necessary.

Configuration

Phone:

-  Voicemail App
 -  Details about the settings are in [Voicemail App](#)

Process

1. Accept the terms and conditions
2. Create a new ICT system

Enter this information:

- **Name** (freely definable)
- **IP Address**


– **Port**

You can test the connection to the ICT system, and correct the settings if necessary, before saving it.

3. Create new subscriber:

– **Username** (subscriber's phone number)

– **Password**

 **Note:** A password can only be assigned if the option for saving the credentials has been enabled.

– The app opens after you Save and log in.

4. If all the settings have been entered and are complete, simply select the ICT system and appropriate subscriber the next time you log in.

VoiceMail number

A voice mailbox acts as an answering machine. Depending on the setting, it accepts incoming calls and stores recorded messages as audio files (.wav).

Messages and announcements are not stored on the phone, but on the PBX.

The size of the voice mailbox and the authorisation to use it are set on the PBX. A voice mailbox can be assigned to an individual subscriber or to a group. A subscriber can be given the authorisation to use several voice mailboxes.

You can link a configured voice mailbox with the selected identity by entering the associated voicemail number.

! **Important:** The voice mailbox is only available during operation on the following PBXs:

- COMpact 4000
- COMpact 5010 VoIP
- COMpact 5020 VoIP
- COMpact 5000/R
- COMpact 5200/R
- COMpact 5500R
- COMmander 6000/R/RX
- COMtrexx VM
- COMtrexx Advanced
- COMtrexx Business

In some PBXs, you will need to install another module (available as an optional extra) to run a voice mailbox:

Voicemail number

- COMmander 6000/R/RX: COMmander VMF module
- COMpact 5010 VoIP: COMpact 2VoIP module
- COMpact 5020 VoIP: COMpact 2VoIP or 6VoIP module

Requirement for use

- A configured and assigned voice mailbox

Configuration

Web interface:

- **Identities > Options for experts > Voicemail number**


 Details about the settings are in [Options for experts](#)

Phone:


- **Settings > Identities > Options for experts > Function codes > Voicemail number**

 Details about the settings are in [Function codes](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Wallpaper

 Link to video (only in German) <https://www.youtube.com/watch?v=sAu2iLfv3P8>

You can change the normal wallpaper used on the telephone's home screen. This enables you to customise it to match your company's corporate design or your own preferences.

There are the following ways to change the home screen:

- Using provisioning
 - Provide the image in the form of a Base64 string
 - Provide a link to an image file on a web server
- Set an image in the Android Gallery as the wallpaper for the home screen



If an image does not have the set dimensions, it is scaled and trimmed.

Requirement for use

- Image files with file format .png or .jpg
- Max. file size 5 MB

Configuration

Phone:

- Gallery app  > picture ⋮ > **Set picture as**
 -  Details about the settings are in [Gallery](#)

Provisioning:


➔ Further help in the [Auerswald DokuWiki](#)

Display screen layout

Screen size:

- 1024 x 570 px
- 175 dpi

The following pixel values are intended as a guide when creating personalised wallpapers.

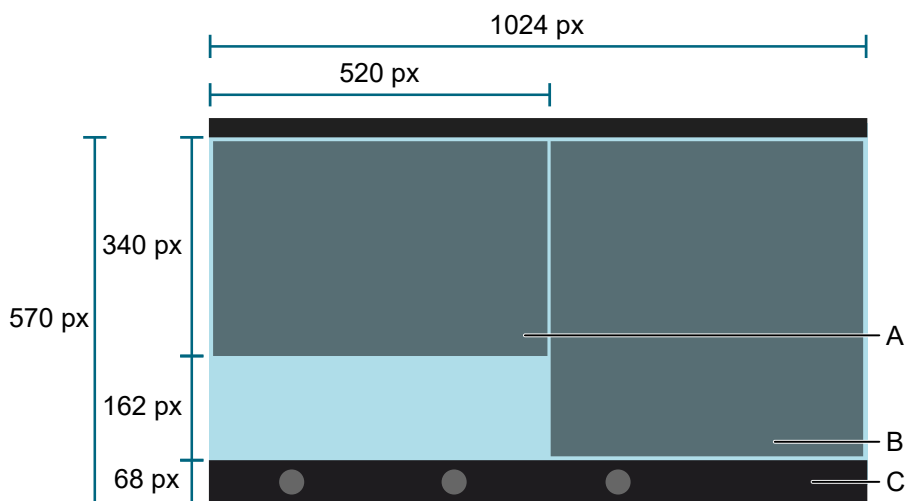

- A Status widget
- B Functions widget
- C Soft key bar: Covers the wallpaper image at a height of 68 px.


Wi-Fi

Using the COMfortel D-Wireless Bluetooth/Wi-Fi dongle, you can also operate the device on the Ethernet network without a physical connection.

Requirement

- COMfortel D-Wireless (EZC-5200BS)
- Access data for a Wi-Fi network

Connection

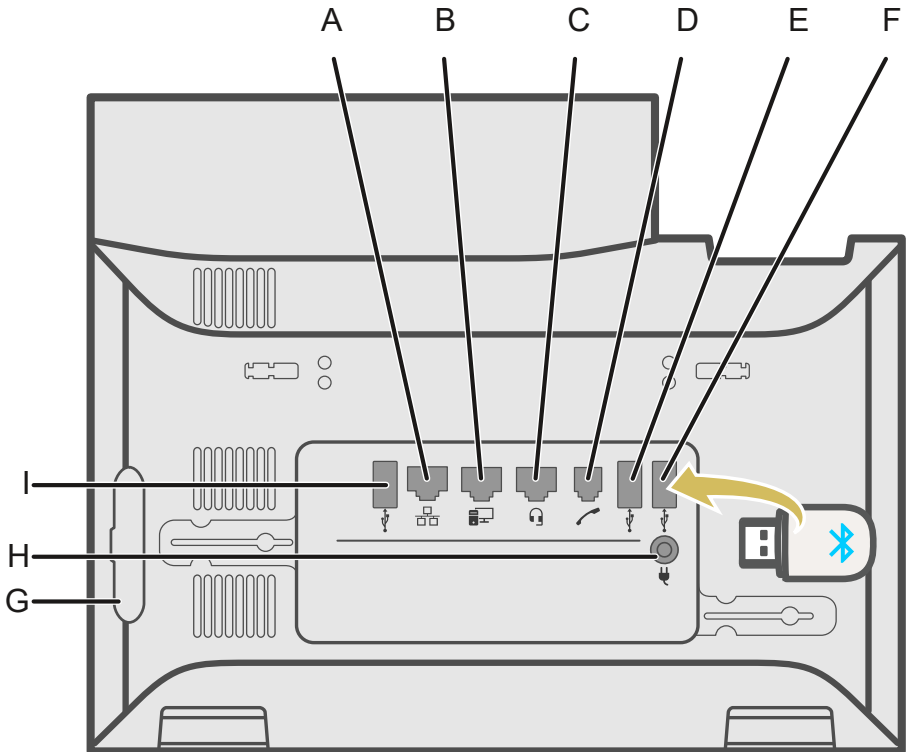

- A Network port
- B Direct PC connection via network cable
- C Headset socket
- D Receiver socket
- E Connection for optional USB devices.
- F USB port for a COMfortel D-Wireless (EZC-5200BS) Bluetooth dongle.

- G Rubber cover: To connect a COMfortel D-XT20 or COMfortel D-XT20i key extension module, remove the cover and attach it to the extension module.
- H Power supply via COMfortel® D-XT-PS.
- I USB port, exclusively for connecting a COMfortel D-XT20 or COMfortel D-XT20i key extension module.

Configuration

Phone:

- **Settings > Wi-Fi**

i Note: The Bluetooth menu option is displayed the first time you plug the COMfortel D-Wireless dongle (EZC-5200BS) in the device and is not removed if you unplug the COMfortel D-Wireless (EZC-5200BS).


! Important: The procedure described below ensures that all components react correctly:

- Plug in the COMfortel D-Wireless dongle (EZC-5200BS) when the device has no power supplied to it


or

- Reboot after plugging in the COMfortel D-Wireless dongle (EZC-5200BS) when the device is operating.


i Note: The Wi-Fi connection is automatically closed if the device is rebooted with an Ethernet cable plugged in.

 Details about the settings are in [Wi-Fi](#)

Provisioning:

 Details about provisioning this function in the [Auerswald DokuWiki](#)

Process

1. Plug the COMfortel D-Wireless dongle (EZC-5200BS) in the USB port provided for that purpose.
2. The following option is added to the menu: **Settings > Wi-Fi**
3. When the Wi-Fi function has been activated, a list of all accessible Wi-Fi networks is displayed.
4. Select the network to which a connection is to be set up.
5. Enter the relevant password.
6. The device is connected using Wi-Fi. The Wi-Fi icon is displayed in the status bar.
 -  **Note:** If you change between Wi-Fi and Ethernet, the IP address changes.
7. To close the link, deactivate the Wi-Fi connection.

XML Minibrowser

The XML Minibrowser is a feature of COMfortel D-series.

The browser enables menus and dialogs that you have created yourself, in XML, to be displayed. You can upload the XML documents from a normal web server, using http, provided they have been stored there.

You can use this function to display menus and dialogs that you have created specially for that purpose.

You can display and modify apps such as phone books created to meet your own special requirements, lists of missed calls, settings on the PBX on the own needs (for example, Do not disturb, Call forwarding etc.).

Requirement for use

- .XML files stored on a web server

Configuration

Web interface:

- **Function keys > XML Minibrowser**

 Details about the settings are in [XML Minibrowser](#)

Phone:

- **Settings > Function keys > XML Minibrowser**

 Details about the settings are in [XML Minibrowser](#)

Provisioning:

 Further help in the [Auerswald DokuWiki](#)

Process

- Press the key with the function **XML Minibrowser**.

After you press that button, the phone sends an HTTP(s) GET command to the server, waits for the reply, and then decodes and displays this reply just like a normal web browser would.



Further help in the [Auerswald DokuWiki](#)

Telephoning

Information about the section

Incoming calls

Call-Waiting Calls

Dialled calls

Call

Query Calls

Transferring calls

Conference call

Hands-Free Calling

Loudspeaker listening

Headset Call

Calls

Pick-Up

Information about the section

This section describes the different ways that you can use the phone for telephoning.

- !** **Important:** The functions described in these instructions have been tested and in operation on PBXs produced by Auerswald/FONtevo, and then described. If the phone is operated on other PBXs or VoIP providers, functionality may be partially or completely restricted.
- i** **Note:** There are alternatives to the functions below. These alternatives have not always been listed:

To create/end a connection

Pick up the receiver

or

Loudspeaker 

or

Headset 

or

OK 

or



reject a call

Back 

or



Holding a call/Reconnecting from a call that is on hold

Hold 

or

OK 

Incoming calls

Accepting a call

Pick up the receiver

or

OK 

or

Headset 

or

Loudspeaker 

or



Rejecting a call



Putting an accepted call on hold

Hold 

Reconnecting an on-hold call

Hold 

or

OK 

Call-Waiting Calls

Accepting a call

Pick up the receiver

or

OK 

or


Headset 

or

Loudspeaker 


or



 Further help under [Call waiting](#)

Rejecting a call

 



 Further help under [Call waiting](#)

Forwarding



Transfer  > Enter destination number > Loudspeaker 


or

Transfer  > Enter destination number > 

or

 Call-Waiting Calls

Transfer  > Select a saved contact > 

 Further help under [Call waiting](#)

Dialled calls

Dial a Subscriber Number Manually

Pick up the receiver > dial a phone number


 Further help under [Dial a Subscriber Number Manually](#)

Dial preparation

Dial the phone number > pick up the receiver

 Further help under [Dial a Subscriber Number Manually](#)

Dialling from within the call history (all calls)


 > **ALL** > All > Select phone number/contact


 Further help under [Overview of call lists](#)

Dialling from within the call history (missed calls)

 > **MISSED** > All > Select phone number/contact

or

Messages  > **You have missed calls.** Select from the displayed status bar > Select phone number/contact.

 Further help under [Missed calls](#)

Dialling from within the redial list (outgoing)


 > **OUTGOING** > All > Select phone number/contact


Dialled calls


or

Redialling  > All > Select phone number/contact

Dialling from the contacts list


 > select contact > confirm selection or pick up the receiver

 **Note:** If more than one number is stored for a contact, you can select the number to call before you pick up the receiver.

 Further help under [Contact](#)

Call

Putting a call on hold


Active call > Hold 

 Further help under [Call](#)

Reconnecting an on-hold call

To do this, press Hold again 

or

 tap it on the display

or


OK .

 Further help under [Call](#)

Accepting a call

During an active call, the LED on the key with the Speed dialling function assigned to it shines red. Press the key with the Speed dialling function assigned to it to pick up the call.

Muting a call

Microphone 

Switching off muting

To do this, press Microphone again 

Ending a call

To do this, hang up the receiver

or



 Further help under [Call](#)


 
Sending a DTMF signal during a call

To do this, enter digits and special characters



 
 Further help under [Call](#)

Query Calls

Initiating a query call (during a call)

Hold  > enter destination number/contact (keypad) > OK 

or


Hold  >  > enter destination number/contact > OK 

When you connect a COMfortel[®] D-XT20:

Hold  > Speed dial key (key extension module)

or

press the speed dial button (key extension module)


 Further help under [Query Calls](#)

Ending the query call and returning to the previous call


Hold 


or



 Further help under [Query Calls](#)

Splitting a call (during a query call)


Select the call partner to whom you want to change > 


 Further help under [Query Calls](#)

Ending one of the two calls

Either one of the call partners hangs up the receiver

or

you can select the call partner for whom you want to end the call > 


 Further help under [Query Calls](#)

Connecting the two call partners to each other

To do this, hang up the receiver

or




 Further help under [Query Calls](#)

Transferring calls

Transfer the call with an announcement

Requirements:

- Initiated query call

 Further help under [Query Calls](#)


 

Proceed as follows::



 Further help under [Transfer the call with an announcement](#)

Transfer the call without announcement (blind transfer)

Proceed as follows:

Hold  > enter destination number/contact > OK  > 

 Further help under [Transferring a call without an announcement](#)

Conference call

All the options listed above are for a conference call that you have initiated yourself.

Initiating a call


Scenario:

- there is an existing connection between you and at least two other subscribers.



 Further help under [Conference call](#)

Splitting a call


Select subscriber > 

 **Note:** Press again  to restore the conference.

 Further help under [Conference call](#)

Connecting the other two conference call partners to each other



 Further help under [Conference call](#)

Splitting a conference call




Conference call

One subscriber is put on hold and there is an active connection with the other subscriber. You can change between holding a call and an active call.


Press Hold to do this .


 Further help under [Conference call](#)

Holding a conference call and initiating an additional call


Select Conference > Hold  >  > OK 

The conference call partners are put on hold and hear music on hold.

When the call ends, you can continue the conference call by pressing Hold again .

 Further help under [Conference call](#)

Ending a call with a conference call partner

Select the subscriber for whom you want to close the connection > 

Then, there will only be a connection with the remaining subscriber.

 Further help under [Conference call](#)

Ending a conference call completely

To do this, hang up the receiver

or



 Further help under [Conference call](#)

Hands-Free Calling

Accepting a call in hands-free calling mode

Incoming call 

or

Incoming call > Loudspeaker 

or

Incoming call > OK 

 Further help under [Hands-free calling mode](#)

Initiating a call in hands-free calling mode

Select contact > tap on receiver

or

Select the phone number > loudspeaker 

or

Select the phone number > wait for a short while

Requirement: Automatic start of call activated.

 Further help under [Automatic start of call](#)

 Further help under [Hands-free calling mode](#)

Ending a call in hands-free calling mode



or

Hands-Free Calling

Loudspeaker 

 Further help under [Hands-free calling mode](#)

Loudspeaker listening

Switching on during a call through the receiver

Loudspeaker 

 Further help under [Loudspeaker listening mode](#)

Switching off and returning to a normal call

Loudspeaker 

 Further help under [Loudspeaker listening mode](#)

Ending a call in loudspeaker listening mode

To do this, hang up the receiver

 
or



 Further help under [Loudspeaker listening mode](#)


Headset Call

Personally initiating a call when headset operation is switched off (headset LED is not shining)

Headset 

or

EHS

 Further help under [Headset mode](#)

Personally initiating a call when headset operation is switched on (headset LED is shining green)

Headset 

or



or


OK 

or

EHS

 Further help under [Headset mode](#)

Transferring an active call to the headset

Headset 

or

Headset Call

EHS

 Further help under [Headset mode](#)

Ending an active call in the headset

Headset 

or




or

EHS

 Further help under [Headset mode](#)

Initiating the listen-in function on the receiver during a headset call

Pick up the receiver > press Headset 

 Further help under [Headset mode](#)

Cancelling the listen-in function on the receiver during a headset call


To do this, hang up the receiver

 Further help under [Headset mode](#)

Calls

To open the call history



 Further help under [Caller list](#)


To list missed calls



> **MISSED**

or

Messages  > **You have missed calls.**

 Further help under [Caller list](#)

To list outgoing calls



> **OUTGOING**

or

Redialling 


 Further help under [Caller list](#)

Options for displaying entries in an active list

∨


or

OK  (hold down the key for approx. 2 sec. .)

 Further help under [Caller list](#)


Editing an entry in the call history before making a call

 > ∨ >  **Edit number before call**

 Further help under [Caller list](#)

Adding an entry in the call history to the contacts

 > ∨ >  **Add contact**


 Further help under [Caller list](#)

Deleting entries from the call history


 > ∨ >  **Delete from list**


or

Delete 

 Further help under [Caller list](#)

Deleting an entire call history

Delete  (hold down the key for approx. 2 sec. .)

 Further help under [Caller list](#)

Calling from an opened call history


Pick up the receiver

or


Calls


OK 

or

Loudspeaker 


or

Headset 

 Further help under [Caller list](#)

To leave the call history

Back 

 Further help under [Caller list](#)

Pick-Up

Pick-up in idle state

When speed dialling is set up

The LED on the button with the speed dial function assigned to it flashes red.

When you press the flashing function key, you pick up the call.

When speed dialling is not set up

enter pick-up code and phone number of the internal phone >

Pick up the receiver

or

OK 


or



 Further help under [Pick-up in idle state](#)


Pick-up (during a call of your own)

When speed dialling is set up

Home  > the LED on the button with the speed dial function assigned to it flashes red.

When you press the flashing function key, you pick up the call.

When speed dialling is not set up

Home  > enter pick-up code and phone number of the internal phone >

Pick-Up

Pick up the receiver

or

OK

or



 Further help under [Pick-up during a call](#)

Device Overview


[Front View](#)

[Rear View](#)

Front View

Each device has a touch display and different keys (some of which have LEDs). You can operate it using the keys or touch controls.


Keys and LEDs on the basic unit

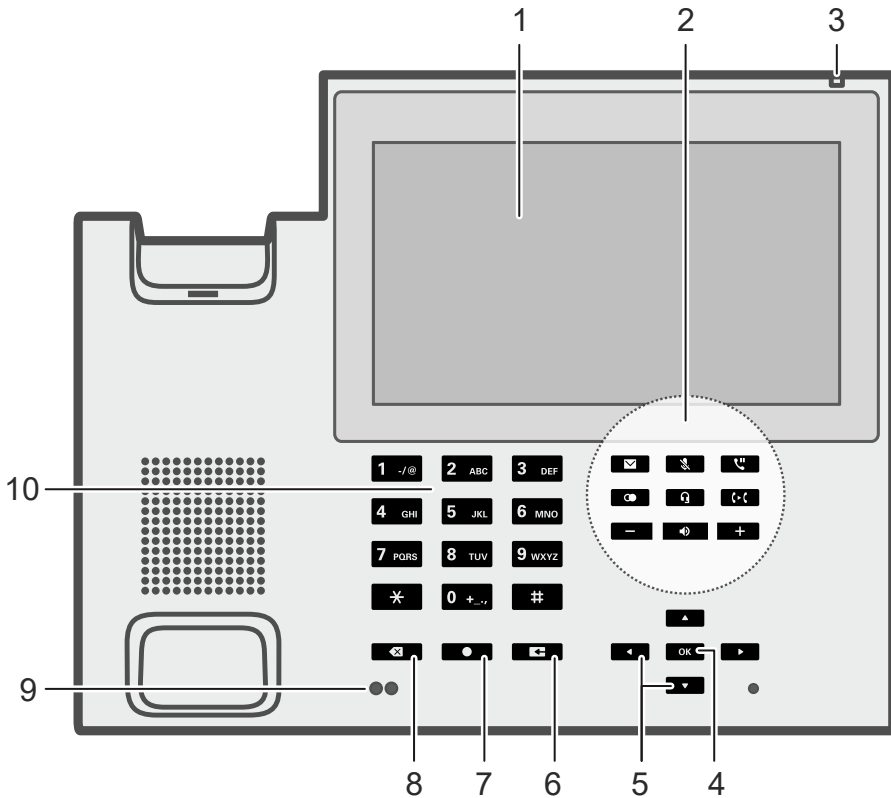

1. Touch display
2. Dedicated function keys
3. Casing LED

Front View

4. OK
5. Directional pad keys (Up, Down, Right, Left)
6. Back
7. Home
8. Delete
9. Proximity sensor, Brightness sensor
10. Keypad

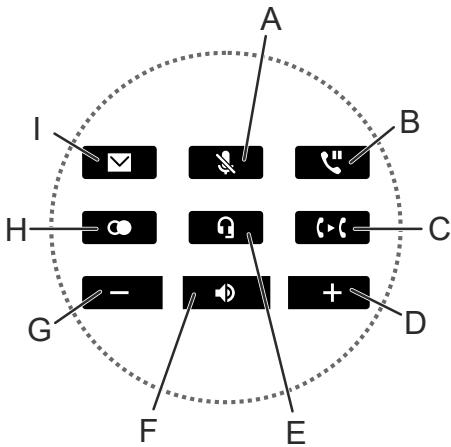


- A Microphone
- B Hold
- C Transfer
- D plus
- E Headset
- F Loudspeaker
- G minus

Front View

H Redialling

I Messages

Keys and LEDs on the key extension module

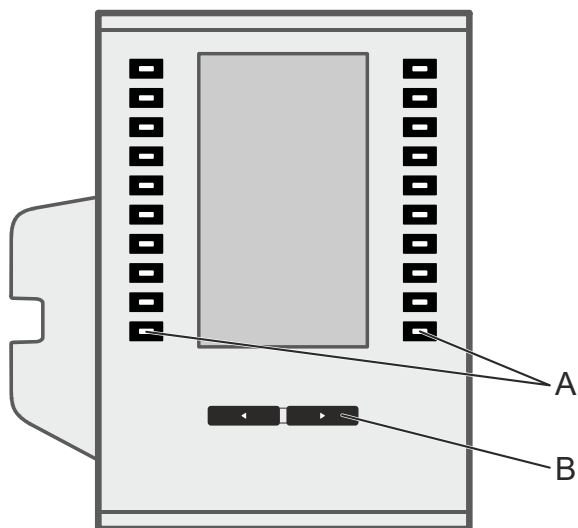


A Function keys (10x on each side)

B control rocker

Rear View

The next figures show the connections on the bottom of the different devices.

COMfortel® D-600

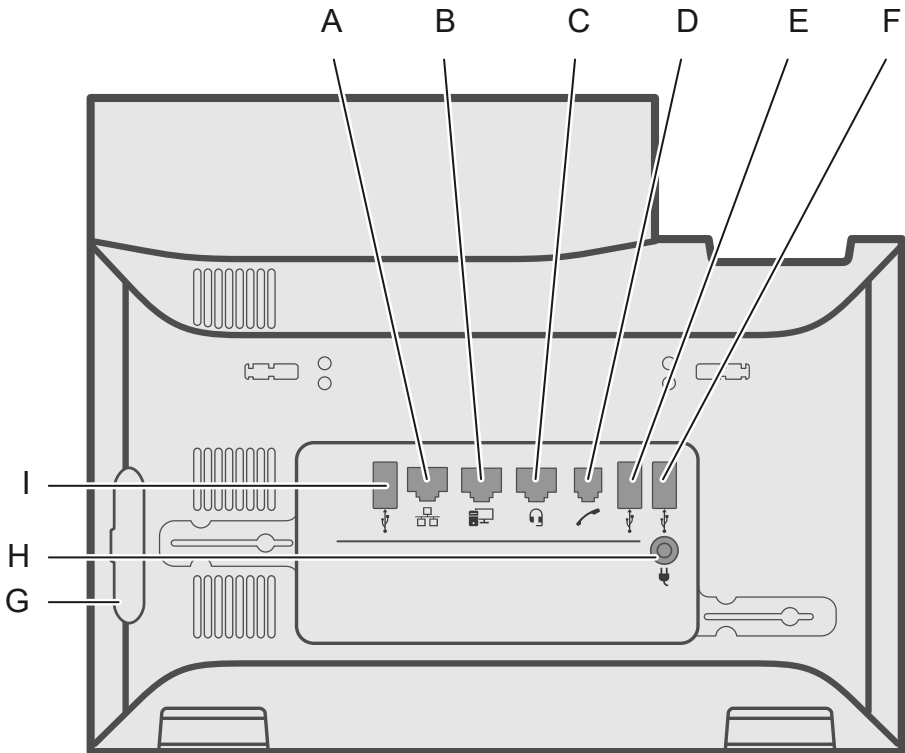


- A Network port
- B Direct PC connection via network cable
- C Headset socket
- D Receiver socket

Rear View

- E Connection for optional USB devices
- F USB port for a COMfortel D-Wireless (EZC-5200BS) Bluetooth dongle.
- G Rubber cover: to connect a COMfortel D-XT20/D-XT20i key extension module, remove the cover and attach it to the extension module.
- H Power supply via COMfortel® D-XT-PS
- I USB port, exclusively for connecting a COMfortel D-XT20/D-XT20i key extension module.

COMfortel® D-XT20/D-XT20i

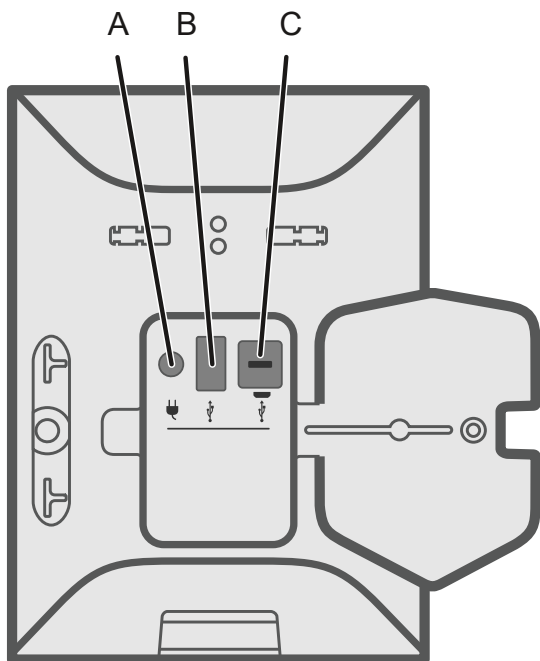

- A Socket into which you plug the COMfortel D-XT-PS wall-mounted power supply (if you connect two or more key extension modules)
- B USB port (e.g. for connecting another COMfortel D-XT20/D-XT20i key extension module)
- C Micro-USB port: use this to connect the telephone to the key extension module

Using the Web Interface

Basic Knowledge

Dashboard

Display and LED

Function keys

Using provisioning

Identities

Cameras

Update

Network

LDAP

Telephony

Sound

Date and time

User

Backup and restore

Access

Basic Knowledge

[Opening the web interface](#)

[Operating Instructions](#)

Opening the web interface

You must log in with the administrator authorisation level the first time you log in or after the device has been reset to its factory settings. When you log in again in the future, the authorisations are linked to the credentials (user/administrator).

Requirement:

- Recommended browsers: Mozilla Firefox, Google Chrome. (current version)
- – You need to know the phone's IP address (you can check it on the phone by selecting **Settings > Network**)
- There must be an existing network connection between the PC and phone.

Proceed as follows:


1. Enter the phone's IP address in the browser address line (e.g. <http://192.168.178.4>).

The login window opens.

2. Enter your Username and Password access data.

If you are running the web interface for the first time, enter the following access data:

- **Username: admin**
- **Password: admin**

 **Caution:** Passwords that are unchanged from the factory settings are a security risk. Change the password in the dialogue without delay.

3. Click on **Login**.

Opening the web interface

You are now logged into the web interface and can make settings.

Operating Instructions


[Overview](#)

[Fields and User Elements](#)

[Appearance](#)

Overview

The web interface is divided into several areas:

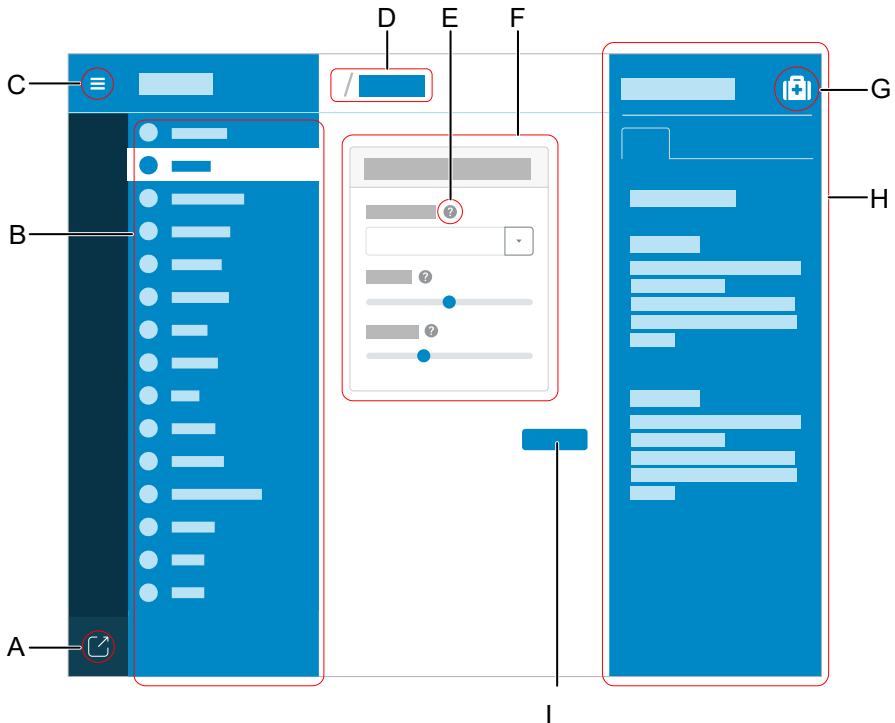

A Log out user

B Vertical navigation

Here, click on the required topic to select it.

C Display or hide vertical navigation.

If the menu structure on the left is being displayed, a vertical navigation is displayed.

D Breadcrumb navigation

Overview

Display the branching within the web interface.

Select the "house" icon to return to the home screen.

E Context-sensitive help

F Content area

The topic selected using the vertical navigation is displayed here.

G Displays or hide the help system.

H Help system

I Save

Fields and User Elements

Element

Function



List field: enter settings in it to configure particular functions. The selected setting is displayed in the list field. Click on the arrow on the right of the list field to display possible options.



Empty field: enter a name, value or web address in it. Click in the entry field and enter the text.

The following characters must not be used:

" " quotation marks

\$ dollar sign

% percent sign

< pointy bracket - less than

> pointy bracket - greater than

\ backslash

^ caret

[] square brackets

 
{ } curly brackets



Active text input field.



Text input field that is already filled.



Text input field that is locked for processing.

Element

Function



Form field for incrementally increasing/reducing a value.



You can use a toggle button to enable some functions (move one point to the right) or disable them (move one point to the left). Click on an option to activate it. The previous selection is disabled at the same time.




Use sliders to make infinitely variable settings (e.g. contrast settings). The position of the slider identifies where the setting is. Drag the slider to the left to reduce the value. Drag the slider to the right to increase the value.

Appearance

The display/legibility of the web interface may be affected by browser settings, e.g.:

- Scale/zoom browsers (e.g. hold down Ctrl + scroll (mouse wheel))

 **Note:** If the web interface is not legible because of scaling/zooming of the browser, you can restore the original view (e.g. Mozilla Firefox under **View > Zoom > Normal** or Ctrl + 0).

Dashboard


Dashboard

[Status information](#)

[Language and location](#)

[Device name](#)

Status information

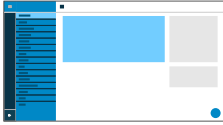


Type

Displays the phone model used.

Firmware version

Displays the firmware version currently in use on your device.

 Further help under [Update](#)

Update system version

Displays the update system version in use on your device.

Bootloader version

Displays the bootloader version in use on your device.

Serial number

Displays your device's serial number.

MAC address

Displays your device's physical address on the network.

Network chip

Model of the network chip integrated in the phone.

Logcat

Records all important events, errors and warnings and displays them in the browser. They are only recorded if the developer has implemented logging of errors or events.

Clipboard

Copies status information to the clipboard, so you can access it easily, for example, to make a request for support.

Online help

Displays the online help in your browser.

Start trace

If the phone malfunctions, a log can be recorded. It can then be sent to the technical departments (Service, Development) so that the cause of the fault can be investigated.


 Further help under [Trace](#)

Legal

Here, you can display the following license information:

- **End User License Agreement for Software (EULA)**
- **Data protection**
- **Open source licenses**
- **Licenses system webview**

Language and location

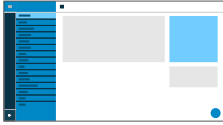

Language web interface

Changes the language used on the web interface.

➤ Further help under [Language and location](#)

Phone language

Changes the language used on the phone user interface.

➤ Further help under [Language and location](#)

Location


Sets the phone's actual or required location.

Audio frequencies (pitches, pulse/pause characters and/or ringing tones), and also the time and time format, are different for each selected location.

➤ Further help under [Language and location](#)

Device name

Device name

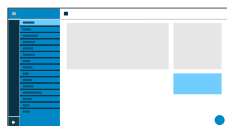

Device name

The name you assign to the device.

 Further help under [Device Information](#)

Display and LED


Basic Settings

Key extension modules

Options for experts

LED notifications

Basic Settings

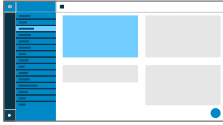

Idle state

After the selected time, the phone is automatically returned to the idle state.

- **Not automatically**

The phone is not automatically returned to the idle state.

 Further help under [Idle state](#)


Brightness sensor

Switches on display brightness adjustment to ambient light.

 Further help under [Display and LED](#)


Brightness

Sets the brightness.

 **Note:** Any changes you make to the brightness affect on all key extension modules that are connected.

 Further help under [Display and LED](#)

Key extension modules

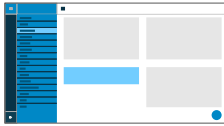


Show icons on D-XT20(i)

Switches on the display of icons and images on all connected key extension modules.

 Further help under [Display and LED](#)

Options for experts

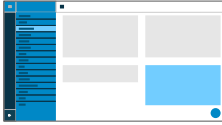

Proximity sensor

Enables the brightness sensor.

➤ Further help under [Display and LED](#)

Proximity sensor minimal distance

Sets the proximity sensor's sensitivity.

The slider sets the distance after which the device reacts to movement and gestures. The further the slider is to the right, the greater the sensor's sensitivity.

➤ Further help under [Display and LED](#)

Keypad brightness

Sets the brightness of the illuminated keypad if "Manually" mode is selected.

➤ Further help under [Display and LED](#)


Keypad backlight mode

Manually


Use a preset brightness.

Ambient light

Adjusts the keypad brightness to suit ambient light conditions. The brighter the ambient light, the brighter the keypad brightness. Conversely, the darker the ambient light, the darker the keypad brightness. If the ambient light is very bright, the keypad brightness is switched off.

 Further help under [Display and LED](#)

LED notifications

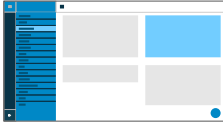

Seen missed calls

Sets the message key LED's reaction to seen missed calls.

- **LED lights up**

The message key LED shines and a text message is displayed in the Notifications menu.

- **LED is flashing**

The message key LED flashes and a text message is displayed in the Notifications menu.

- **LED off**

The message key LED does not flash and a text message is displayed in the Notifications menu.

- **Disabled**

The message key LED does not flash and no text message is displayed in the Notifications menu.

 Further help under [Display and LED](#)

Heard voice messages

Sets the message key LED's reaction to heard voice messages.

- **LED lights up**

LED notifications

The message key LED shines and a text message is displayed in the Notifications menu.

- **LED is flashing**

The message key LED flashes and a text message is displayed in the Notifications menu.

- **LED off**

The message key LED does not flash and a text message is displayed in the Notifications menu.

- **Disabled**

The message key LED does not flash and no text message is displayed in the Notifications menu.

 Further help under [Display and LED](#)

Message key LED

Controls the behaviour of the message key LED. If this option is deselected, the message key LED are switched off permanently.

 Further help under [Display and LED](#)

Function keys


[Overview](#)

[Edit function keys](#)

[Edit parameters](#)

[Edit Icon](#)


Overview

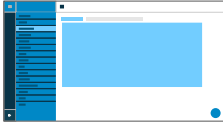


Function keys

You can see the interface in which you configure the function keys for the phone in the Function keys tab.

Phone user interface

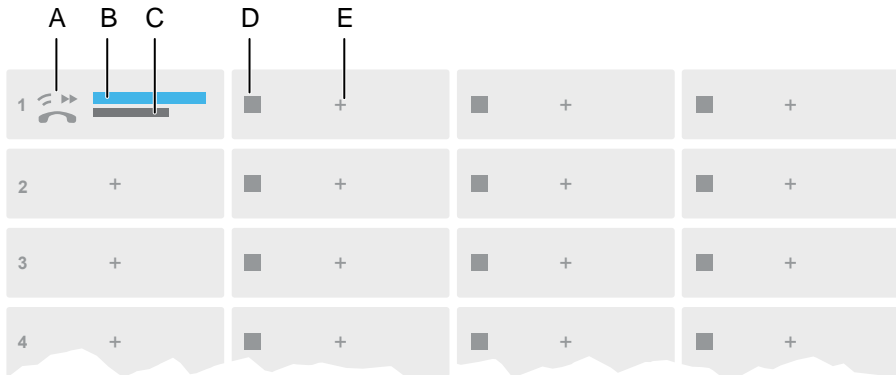

A Function keys icon

 Further help under [System icons](#)

B Enter text such as under **Edit function keys > Key label**

C Function selected as under **Edit function keys > Function**

D Seq. Number


E Opens the dialogue box **Edit function keys**

i Note: If a key already has a function assigned to it, the LED shines orange. You can assign a different function.

Key extension module (1 – 3)

You can see the interface in which you configure the function keys for the selected module in Key extension module tab 1 – 3. Up to 3 key extension modules can be connected.

Phone user interface key extension module

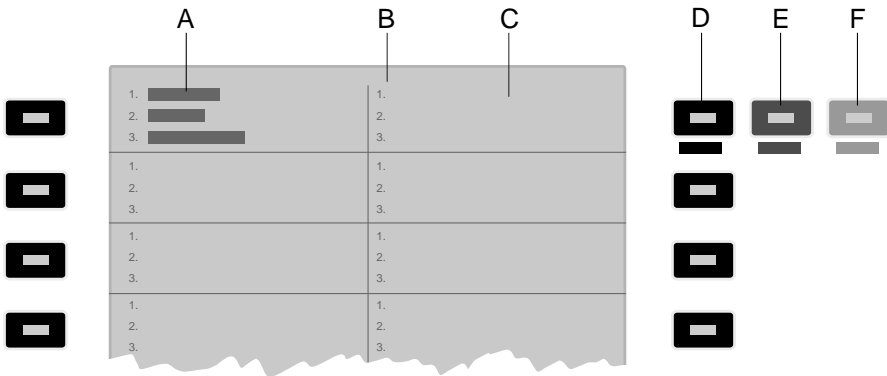

A Shows that the phone's top left function key has had a function assigned to it on all 3 levels.

B Lists all 3 possible levels to which a function can be assigned

C Display

D **Level 1** (always visible)

Click on the selected key to open the Edit function keys window


Overview

E **Level 2** (opens when you pass over it with the mouse)


Click on the selected key to open the Edit function keys window

F **Level 3** (opens when you pass over it with the mouse)

Click on the selected key to open the Edit function keys window

 **Note:** If a key already has a function assigned to it, the LED shines orange. You can assign a different function.

Edit function keys

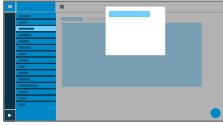

Level (1 – 3)

Click on one of the Level tabs (1 – 3) to jump between the 3 different key levels.

Function

Selects the function and displays the necessary parameters.

Note: To use additional function templates, activate the Auerswald/ Fontevo templates.

Further help under [Function templates](#)

Details about the settings are in [Edit parameters](#)

Edit Icon

Displays the menu in which you select and adjust the required image file for use as an icon for the function key.

Details about the settings are in [Edit Icon](#)

Key label

Displayed beside each function key on the screen.

Reset level

Removes the function assigned to the key on the current level.

Reset all levels

Deletes the functions assigned to the key on all levels.

Cancel

Closes the menu without adopting changes.

Save

Saves the entered parameters and close the window.

Edit parameters

Speed dial

Identity

Activate config

Anonymous call

Automatic configuration switching

Bluetooth

Browser

Call forwarding immediately

Call forwarding on busy

Call forwarding on no reply

Call waiting

CF ext. calls: Immediately

CF ext. calls: On busy

CF ext. calls: On no reply

Do not disturb

DTMF-Relay

Group

Group (incoming)

Group (outgoing)

Park position

Relays

Silent Alert


VPN

XML Minibrowser

Speed dial


Number/URI

Enter a phone number or address such as 198@192.168.XX.YY or 198@company.com, here.

 Further help under [Speed dial](#)


Identity

Identity for which this function is set up.

 Further help under [Identities](#)


Subscription


Activates the sending of BLF subscriptions to the PBX.


 **Note:** It may be a good idea to deactivate subscriptions in situations when it is necessary to prevent the PBX from being overloaded by high volumes of transmitted data.

Pickup

Activates the Pickup function.


 **Note:** Pickup only works if the Subscription function is activated.

 **Note:** Pickup should not be used if the key is only used to switch functions in the PBX using a programming code. Deactivate Pickup in that case.

 Further help under [Pick-Up](#)


InterCom

Enables the InterCom function. The connection with the destination number is established directly. No ringing or active call acceptance.

 Further help under [InterCom](#)

Signalise missed call


If this function is enabled, missed calls associated with the speed dial number are signalled with flashing green LEDs.

 Further help under [Speed dial](#)

Identity

Identity


Identity used to trigger subsequent calls.

 Further help under [Identities](#)

Activate config

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Configuration id

The PBX assigns the configuration ID automatically.

 Further help under [Function templates](#)

Anonymous call

Anonymous call


No parameters necessary.

 Further help under [Anonymous call](#)

Automatic configuration switching

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

ID


Identification number for system relay with Automatic configuration switchover operating mode (900, in the factory settings).

 Further help under [Function templates](#)

Bluetooth

Bluetooth

No parameters necessary.

 Further help under [Bluetooth](#)

Browser

Number/URI

Web server address


 Further help under [Apps](#)


Call forwarding immediately

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination

Call forwarding destination


 Further help under [Call forwarding](#)


Call forwarding on busy

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination


Call forwarding destination


 Further help under [Call forwarding](#)

Call forwarding on no reply

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination


Call forwarding destination

 Further help under [Call forwarding](#)

Call waiting

Call waiting

No parameters necessary.

 Further help under [Call waiting](#)

CF ext. calls: Immediately

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination


Call forwarding destination

 Further help under [Function templates](#)

CF ext. calls: On busy

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination

Call forwarding destination

 Further help under [Function templates](#)

CF ext. calls: On no reply

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination

Call forwarding destination

 Further help under [Function templates](#)

Do not disturb

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 Further help under [Do not disturb](#)

DTMF-Relay

DTMF sequence


Numbers needed to perform the required function.

 Further help under [Function templates](#)

Group

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number


 Further help under [Function templates](#)

Group (incoming)

Group (incoming)

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number


 Further help under [Function templates](#)

Group (outgoing)

Group (outgoing)

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number

 Further help under [Function templates](#)


Park position

Number/URI

Phone number of the park position.

Identity


Identity for which this function is set up.

 Further help under [Park position](#)

Relays


Identity

Identity for which this function is set up.

 Further help under [Identities](#)

ID

Relay ID number according to PBX.


 **Note:** The Relay function key is for relays with light, door opener or calculator operating mode. This function key is not suitable for manual relays. For additional Information, refer to the Advanced Information about the PBX.

 Further help under [Function templates](#)

Silent Alert


URL

Required for forwarding the alarm message.

 **Caution:** The function can only be executed if the appropriate URL has been entered.

Delay


Countdown counter. The alarm is triggered after the countdown reaches zero.

 Further help under [Silent Alert](#)

VPN

VPN


No parameters necessary.

 Further help under [Network](#)

XML Minibrowser

Number/URI


Web server address

 Further help under [XML Minibrowser](#)

Edit Icon

Browse

Displays a dialogue in which you can select a previously saved image file in the appropriate folder on the data storage device.

 Further help under [Function keys](#)

Close

Closes the menu without adopting changes.

 Further help under [Function keys](#)


Delete

Deletes the user-defined icon. The default icon for the selected function is displayed.

 Further help under [Function keys](#)

Download

Saves the icon locally with a size of 64 x 64 px as `icon.png`.


 Further help under [Function keys](#)

Set

Applies the icon for these views:


Edit Icon

- Edit function keys menu, web interface
- Function keys list, web interface
- Home screen function keys, telephone
- Edit function keys menu, telephone

 Further help under [Function keys](#)


Adjustment tool

Tool for adjusting the icon's image size and screen window.

 Further help under [Function keys](#)

Icon Preview

Displays a preview of the final icon.

 Further help under [Function keys](#)

Using provisioning

Using provisioning


[Basic Settings](#)

[Schedule](#)

[SIP provisioning](#)

[Additional function templates](#)

Basic Settings

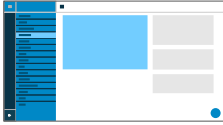

Automatic provisioning

Automatic provisioning is performed according to the schedule and each time the phone is switched on.

➤ Further help under [Using provisioning](#)

Provisioning with DHCP data

The phone obtains the provisioning server's URL from a DHCP server. Additional data for controlling provisioning can also be transferred along with the URL.

➤ Further help under [Using provisioning](#)

Redirect Server

The phone obtains the provisioning server's URL from the redirect server.

➤ Further help under [Using provisioning](#)

Provisioning from PBX search

Automatic provisioning of the phone is performed via the PBX.


➤ Further help under [Using provisioning](#)

Provisioning server URL

This URL is required if it is not obtained via DHCP or a redirect server.


 Further help under [Using provisioning](#)

Schedule

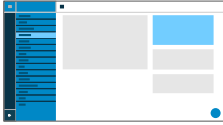


Weekdays

The weekdays on which automatic provisioning is carried out.

 Further help under [Using provisioning](#)


Time

Time at which automatic provisioning is carried out. The time window is 60 minutes.

 **Note:** After a reboot, a random time between 00:00 and 05:00 is entered for provisioning. This prevents load spikes on the server.

 Further help under [Using provisioning](#)

SIP provisioning

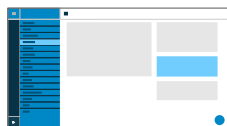


SIP provisioning

Starts remote configuration using SIP messages.


 Further help under [Using provisioning](#)

Additional function templates

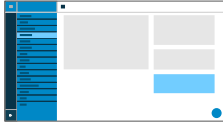

Vendor templates

Activates templates and scripts that are specially designed to run on Auerswald/FONtevo PBXs.

 Further help under [Function templates](#)

Identities

Managing Identities

Basic Settings

Options for experts


Codecs

Registrar

NAT


Outbound proxy

Managing Identities

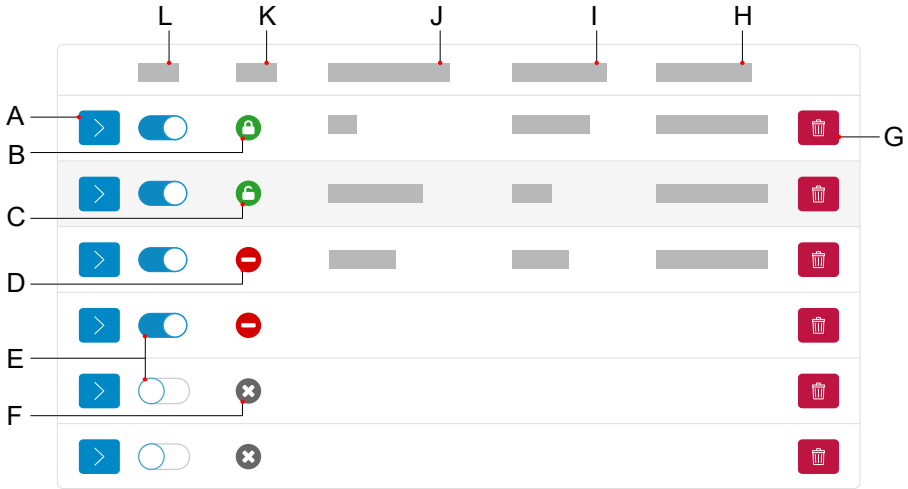


- A Displays the settings for an identity
- B Identity correctly configured, registered and encrypted
- C Identity correctly configured, registered and unencrypted
- D Identity incorrectly configured, unregistered and unencrypted
- E Activate/deactivate an identity
- F Identity deactivated
- G Resets the selected identity
- H **SIP Registrar**
- I **Display name**
- J **SIP Username**
- K **Status**
- L **Active**

Basic Settings

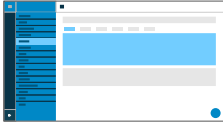


Active

Press this to switch the selected identity on.

 Further help under [Identities](#)


SIP Username

Used to identify the device to the VoIP provider or in the PBX. Identical to the user name assigned by the VoIP provider or the internal phone number registered in the PBX.

 Further help under [Identities](#)

Password

Used to verify the user name. Identical to the password assigned by the VoIP provider when the identity was being created or the password entered in the PBX.

 Further help under [Identities](#)

Display name

Freely selectable name.

Basic Settings

The display name is displayed both in the web interface, under the display name, and on the phone, below the status bar.

If you do not set a display name, the display on the phone contains these elements: SIP user name@SIP registrar.

 Further help under [Identities](#)

Authentication name

Enter the authentication username provided by the VoIP provider.

You need the authentication username when you register with a VoIP provider. If you connect to an Auerswald PBX, you do not need to enter the authentication ID.

 Further help under [Identities](#)

SIP Registrar

This tells the phone where it can register itself. The information given here is the URL set by the VoIP provider on the IP address on which the registering PBX can be accessed.


 Further help under [Identities](#)

Ringer Tone

Assigns a ringtone to the identity.

 Further help under [Sound](#)

Options for experts

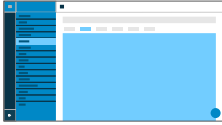

Fallback for

No fallback

No fallback is possible for the current identity.

Configured/Unconfigured identity

Sets the main identity for which the fallback identity applies.

Configured identity: displays **Display name**

Configured identity: displays **Identity** + seq. no.

i Notices: In the case of a main identity, the field is greyed out and displays the entered fallback identity. A fallback identity can also be created for identities that have not yet been configured.

↗ Further help under [Fallback identity](#)

CLIR type

(Number suppression)

Area in the From header in which the VoIP provider expects to receive number presentation suppression. Selection as set in the PBX/at the provider.

Anonymous

The sent display text in the From header is "anonymous".

User anonymous

Both the display text and the User name section in the From header is "anonymous".

 Further help under [Anonymous call](#)


Voicemail number

Enter the voicemail number assigned by the VoIP provider or the voicemail number entered in the PBX.

 Further help under [Voicemail number](#)


Pick-up code

This is required to perform a call pick-up. Enter the character string stored on the PBX/at the provider, e.g. **##06** for Auerswald PBXs.

 Further help under [Pick-Up](#)

Music on hold

If a connection or call is on hold, the "music on hold" is played.

 Further help under [Music on hold](#)

IP version

IPv4

Sets IPv4 for the registrar.

IPv6

Sets IPv6 for the registrar.

Auto

Automatically sets the protocol used by the registrar.

 Further help under [Identities](#)

SRTP

Transport protocol for encrypted connections.

Mandatory

This setting forces voice encryption to be on. If the voice partner (VoIP provider, PBX, external VoIP subscriber) does not support SRTP, the connection is not established.

Preferred

Switches on negotiation for the encryption of call data via SRTP. When a call is made, the call partner will be asked if encryption is possible. If selected, voice data is transmitted in encrypted form. If not selected, it is not encrypted.

Disabled


This setting forces voice encryption to be off. If the voice partner (VoIP provider, PBX, external VoIP subscriber) does not support encryption, the connection is not established.

 Further help under [SRTP](#)


SIPS

Activates the transmission of encrypted SIP messages over TLS for connections with this identity.

The destination in the invite package header is contacted with an encrypted transmission.


 **Note:** To create a successful, secure connection, a certificate must be provided for the provided host, if necessary.


 Further help under [SIPS](#)

 Further help under [Certificate](#)

Peer-to-peer TLS


Forces the encryption of SIP messages over the entire route to the destination.

 **Note:** The call is not made if TLS is not available on the entire connection.

 Further help under [Identities](#)


Certificate

If the SIPS function is activated, the system checks whether the certificate belongs to the domain/IP.

 Further help under [Certificate](#)

Session timer

Switches on the check after a connection for a call that is still in existence.

 **Note:** When the SIP session timer is switched on, this may result in the call being interrupted more frequently after the specified interval, if

Options for experts

a VoIP provider has not implemented session renewal properly. In this case, set a different session timeout or disabled the session timer.

 Further help under [SIP](#)

Session timeout (in min.)

2 ... 255 minutes, default: 15 minutes


Specifies the number of minutes after which the SIP session timer is to check a call's connection.

 Further help under [SIP](#)

Protocol type

UDP


(User Datagram Protocol). Used to send data packets over connectionless non-secure communication lines.

 **Note:** If very large data packets are present, TCP is used instead of UDP. The maximum size of a data packet can vary according to the network. (RFC 3261 > TCP)

TCP

(Transmission Control Protocol). Segments data into packets, from a specified size, and sends these individual data packets to the recipient address until receipt has been confirmed.

 Further help under [SIP](#)

 **Important:** If encryption using SIPS is enabled, the TCP transport protocol is used. Manual settings are overwritten.

Subscription interval (min)

This sets the frequency at which the status of potential changes are queried on the PBX. Default: 45 minutes

The value you enter here should be a compromise between a short interval (which generates traffic) and rapid updates.

 Further help under [SIP](#)

Retry subscriptions

Sets the interval at which attempts are made to configure a subscription on the PBX/provider, if an error occurs.

- **1x**

The device sends exactly one subscription to the PBX/provider. No other subscriptions are sent.

- **Fixed interval**

Attempts to subscribe on the PBX/provider are made at the specified interval.

- **Redouble interval**

The set number of seconds doubles after each attempt to subscribe on the PBX/provider.

 Further help under [SIP](#)

Retry subscriptions: Interval in seconds

Sets the time gap between two subscription attempts.

Minimum: 10 sec

Default: 180 sec

 Further help under [SIP](#)

Retry register

Sets the interval at which attempts are made to register on the PBX/provider, if an error occurs.

- **1x**

The device makes exactly one attempt to register on the PBX/provider. There are no more registration attempts.

- **Fixed interval**

Attempts to register on the PBX/provider are made at the specified interval.

- **Redouble interval**

The set number of seconds doubles after each attempt to register on the PBX/provider.

 Further help under [SIP](#)

Retry register: Interval in seconds


Sets the time gap between two subscription attempts.

Minimum: 1 sec

Default: 10 sec

 Further help under [SIP](#)

Codecs

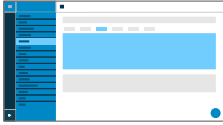

Codecs

Active

Best available quality: G.711, G722

Best available compression: G.726, G.729, iLBC


The sequence in which the active codecs are displayed in the list sets the sequence in which they are applied.

Inactive

You can select inactive codecs and drag & drop them in the "Active" list to arrange them, or remove them from the list.


 Further help under [Codecs](#)

Registrar

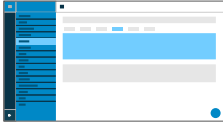


Send SIP REGISTER

Switches the registrar on.

 Further help under [Identities](#)


SIP domain


Name space that contains all the entries within one directory, specified by the VoIP provider/PBX operator.


 Further help under [Identities](#)

Port

The registrar's port. The (recommended) default value is 5060.

 **Caution:** Different entries can cause malfunctions if the provider makes changes. An SRV query is only possible with the default value.

 **Caution:** Each time a port is opened on the router, this creates a potential security risk. It is essential you put additional protective measures in place.


 Further help under [Identities](#)

Time lapse registration (min.)

5 ... 60 minutes

The registration time is the number of minutes that must elapse before the telephone reregisters itself with the VoIP provider.

The value you enter here should be a compromise between a short timespan (which generates traffic with the provider) and a long re-registration period.

 Further help under [Identities](#)

NAT



SIP NAT traversal

Requirements:

- Configured DNS server
- If the option "active" is selected: **Registrar** enabled for the phone

Active

NAT traversal is performed by the telephone. To do this, you must also specify a STUN server.

⚠ Caution: Each time a port is opened on the NAT router, this creates a potential security risk. Implement appropriate security measures.

Inactive

NAT traversal is not performed by the telephone. The SIP request also contains an "rport" part in which the IP addresses used here (local, public) are transported. The router which connects the local area network with the Internet should be a properly functioning SIP-aware router which performs NAT traversal.

 Further help under [NAT](#)

RTP NAT traversal


Requirement:


NAT

- Configured DNS server

Active

NAT traversal is performed by the telephone. To do this, you must also specify a STUN server.

 **Caution:** Each time a port is opened on the NAT router, this creates a potential security risk. Implement appropriate security measures.

 **Note:** If there are problems with unilateral call connections, a STUN server should be used.


Inactive


NAT traversal is not performed by the telephone. The router which connects the local area network with the Internet should be a properly functioning SIP-aware router which performs NAT traversal.

 Further help under [NAT](#)

NAT Keep-Alive Interval (sec.)


After the time specified here has passed, NAT Keep-Alive packets are sent to the firewall to maintain the NAT mapping.

 **Note:** Some providers lock accounts if the NAT Keep-Alive Interval is too short. As a rule, this is reported with error message 503 during SIP registration. If this problem occurs, it is recommended to raise the value (e.g. to 180).

 Further help under [Identities](#)

Use ICE

Enable the best possible transmission route to be found between the phone and PBX/provider.

 **Note:** ICE must only be activated if the other end supports ICE.

 Further help under [Identities](#)

Outbound proxy



Mode

Inactive

Deactivate this function if

- the registrar can be accessed without outbound proxy
- no outbound proxy is available

Automatically

The PBX automatically determines an outbound proxy.


Manually

The outbound proxy is a fixed default setting. Enter this data as an IP address or a URL.

 Further help under [Outbound proxy](#)

URL


Server address for the outbound proxy.

 **Note:** The **URL** must be filled out if mode **Manually** is selected.

 Further help under [Outbound proxy](#)

Port

Port for the outbound proxy.

 **Note:** The **Port** must be filled out if mode **Manually** is selected.

 Further help under [Outbound proxy](#)

Alternative URL

Alternative server address for the outbound proxy.

 Further help under [Outbound proxy](#)

Alternative port

Alternative port for the outbound proxy.

 Further help under [Outbound proxy](#)


Cameras

Cameras

Camera management

Settings

Camera management

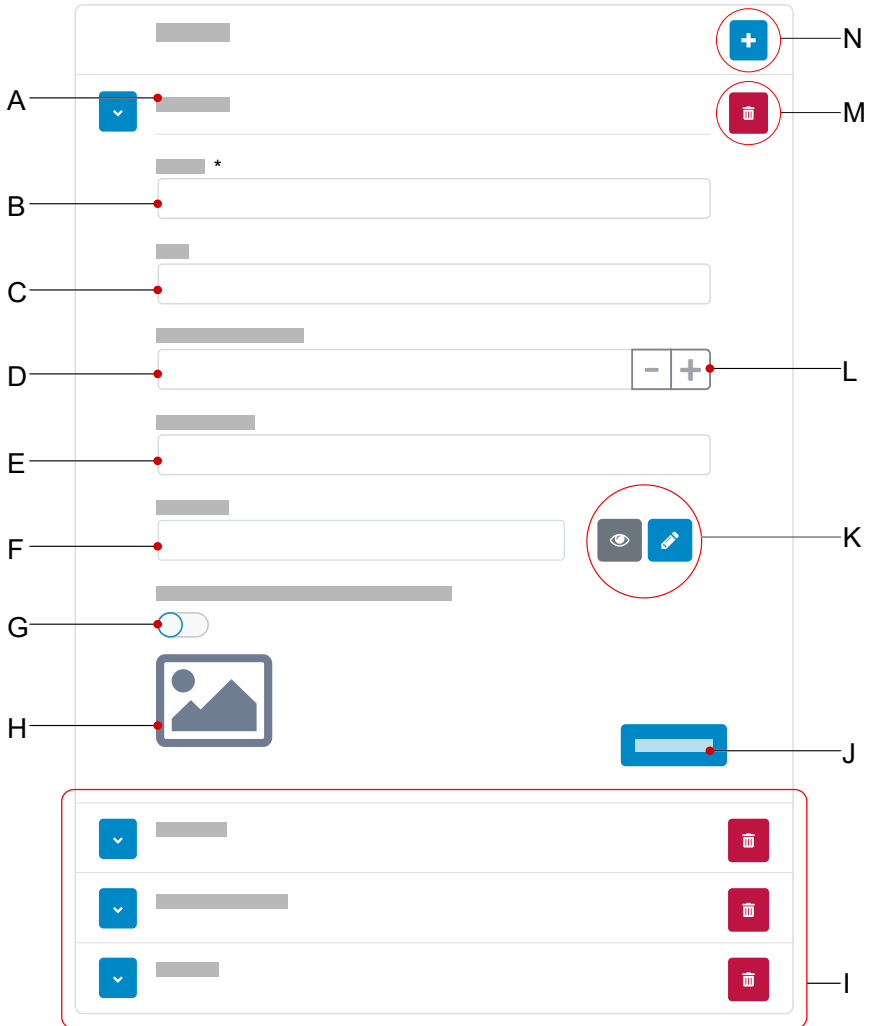


A Unique name, as assigned under **Name**

B **Name**, entry required

Camera management

- C **URL**
- D **Refresh rate in ms**
- E **Username**
- F **Password**
- G Only transfers the camera image for incoming calls
- H Preview of the configured camera (only if the URL is valid. If not, a placeholder is displayed.)
- I List of other configured cameras
- J Saves the settings.
- K View and edit the password
- L Changes the refresh rate settings in increments of 10 ms
- M Deletes the camera from the list
- N Adds a new camera to the list

Settings

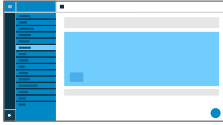

+ Add camera

Adds another camera to the list. The list is dynamic. You can make settings for any number of cameras.

 Further help under [Cameras](#)

Name

Freely selectable name. The name is used to identify the camera within the telephone.

 Further help under [Cameras](#)


URL


Address from which the camera images are fetched.

 Further help under [Cameras](#)

Refresh rate in ms


Select the refresh rate: at least 100 ms.

 **Note:** The value for the images actually transferred depends on which type of camera is used.

 Further help under [Cameras](#)


Username

Enter the user name, if necessary.

 Further help under [Cameras](#)


Password

Enter the password, if necessary.

 Further help under [Cameras](#)

Use for incoming calls only

The camera image display is only activated for incoming calls.

 Further help under [Cameras](#)

Update


Update

Basic Settings

Restart and factory reset


Schedule

Basic Settings

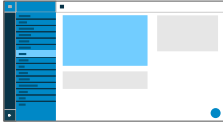


Check for updates

If selected, the phone automatically checks for current updates.

 Further help under [Update](#)


Automatically install updates

If selected, available updates are installed automatically.

 Further help under [Update](#)


Update server URL

In the default settings: <https://update.auerswald.de>


 Further help under [Update](#)

Start update

Starts installation of a new firmware version.

 Further help under [Update](#)


Restart and factory reset

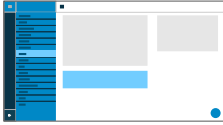

Restart phone

Restarts the telephone.

i Caution: This interrupts all connections, all calls and data services.
Unsaved data is lost!


 Further help under [Update](#)

Reset to default

Resets the telephone to the factory settings. Any saved data and settings are deleted. The phone is shut down and then restarted.


 Further help under [Reset to default](#)

Schedule

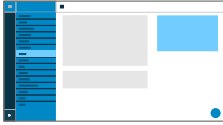


Weekdays

The weekdays on which the phone checks for available updates and installs them.

 Further help under [Update](#)

Time

Time at which the phone checks for available updates and installs them.

 Further help under [Update](#)

Network

Current Settings

IPv4


IPv6

VLAN

VPN

Topology

Current Settings

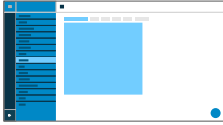

Lists all the network settings made on the phone.

DNS

IP address of the DNS server used here.

 Further help under [IPv4](#)

IP addresses

Protocol

Shows which network protocol is in use.

IP address

Displays the phone's IP address.

Prefix

Different subnet mask notation.

Example: 24 corresponds to 255.255.255.0

Forwarding routes

Protocol

Shows which network protocol is being used by the forwarding route.

Gateway

Displays the IP address of the forwarding route.

If only one router is in use, the DNS's IP address is the same as that of the gateway. If more than one server is being used to handle these tasks, the IP addresses will be different.

IPv4



IPv4 mode

DHCP

The phone obtains its IP address automatically from a DHCP server.

Static

The telephone uses a fixed IP address (supplied by the system administrator).

 Further help under [IPv4](#)

IP address

If you select **DHCP**: the phone's IP address is displayed

If you select **Static**: you can enter/change the phone's IP address

In the factory settings: 0.0.0.0.

 Further help under [IPv4](#)

Subnet mask

Example: 225.255.255.0

 Further help under [IPv4](#)

Gateway

Example: 192.168.178.1

The gateway provides interoperability between networks, so data can pass from one to another. The provider or the network system administrator provide the gateway.

 Further help under [IPv4](#)

DNS 1

The DNS server is needed for Internet access. The provider or network system administrator sets the DNS server. The provider or network system administrator sets the DNS server.


 Further help under [IPv4](#)

DNS 2

Optional

 Further help under [IPv4](#)

IPv6

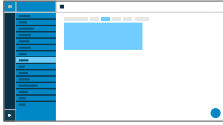

IPv6 mode

Auto

The phone obtains its IP address automatically from a DHCP server.

Disabled

Disables IPv6 mode. IPv4 over DHCP is used.

 Further help under [IPv6](#)

Privacy Extensions

If this function is activated, IPv6 addresses that do not allow the user to be identified are created. The host part of the IPv6 address is anonymised.

 Further help under [IPv6](#)

DNS 1

The DNS server is needed for Internet access. The provider or network system administrator sets the DNS server. The provider or network system administrator sets the DNS server.


 Further help under [IPv6](#)

DNS 2

Optional

 Further help under [IPv6](#)

VLAN

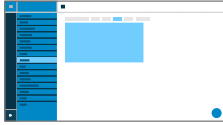

Phone VLAN

Switches on VLAN for the phone.

➔ Further help under [VLAN](#)

Phone VLAN ID

Enter the phone's VLAN ID: 1 ... 4094

The associated data packets are tagged with this ID.

➔ Further help under [VLAN](#)

Phone VLAN priority

0 (lowest priority) to 7 (highest priority)

➔ Further help under [VLAN](#)

PC port VLAN

Switches on VLAN for the PC port.

➔ Further help under [VLAN](#)

PC port VLAN ID

Enter the PC port's VLAN ID: 1 ... 4094

The associated data packets are tagged with this ID.


 Further help under [VLAN](#)

PC port VLAN priority

0 (lowest priority) to 7 (highest priority)

 Further help under [VLAN](#)

VPN

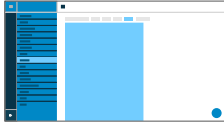

VPN

Switches on VPN for the phone.

 Further help under [VPN](#)

VPN type

IPsec Xauth PSK

Authentication is performed using a shared secret and a personal secret.

IPsec Xauth RSA

Authentication is performed using a key pair: one private key and one public key.

IPsec Hybrid RSA

Mixed form **IPsec Xauth PSK** and **IPsec Xauth RSA**

Open VPN

OpenVPN libraries are used to set up a VPN over an encrypted TLS/SSL connection.

L2TP IPsec PSK

IPsec variant performed using the Layer 2 Tunneling Protocol.
Authentication is performed using a shared secret and a personal secret.

L2TP IPsec RSA

IPsec variant performed using the Layer 2 Tunneling Protocol. Authentication is performed using a key pair: one private key and one public key.

 Further help under [VPN](#)

Name

Freely selectable name for the VPN connection.

 Further help under [VPN](#)

Server

Server address for the VPN connection.

Your network administrator will give you the server address.

 Further help under [VPN](#)

User name

User name for the VPN connection.

Your network administrator will give you your user name.

 Further help under [VPN](#)

Password

Password for the VPN connection.

VPN

Your network administrator will give you the password.

 Further help under [VPN](#)

DNS server

Address of the DNS server used for the VPN connection (e.g. 8.8.8.8).

Your network administrator will give you the DNS server address.

 Further help under [VPN](#)

Search domain

Search domain addresses for the VPN connection.

Your network administrator will give you the search domain addresses.

 Further help under [VPN](#)


Forwarding routes

Settings for the network, IP address range (e.g. 10.0.0.0/8).

Your network administrator will give you the IP address range for the forwarding routes.

 Further help under [VPN](#)

IPsecIdentifier

 **Caution:** IPsecIdentifier settings can vary greatly, depending on which server is in use. The network administrator must predefine the configuration.

 Further help under [VPN](#)

preinstalled IPsecSecret

Authentication key.

 Further help under [VPN](#)

IPsecUserCert

This is generated by the system administrator or by the user.

The IPsecUserCert must fulfil these criteria:

- X.509 standard
- .pem format

 Further help under [VPN](#)

IPsecUserPrivateKey

This is generated by the system administrator or by the user.

The private key must fulfil these criteria:

- X.509 standard
- .pem format

 Further help under [VPN](#)

IPsecCaCert

Acts as a "trust anchor" for the connection.

VPN

The IPsec CA certificate (IPsecCaCert) must fulfil these criteria:

- X.509 standard
- .pem format

 Further help under [VPN](#)

IPsecServerCert

Server-side certificate.

The IPsec CA certificate (IPsecCaCert) must fulfil these criteria:

- X.509 standard
- .pem format

 Further help under [VPN](#)

OpenVPN Config

Contents of a configuration file (openvpn.cfg). Component part of setting up an open VPN.

 Further help under [VPN](#)

Topology

Topology

Basic Settings

Jitter buffer


STUN server

Basic Settings



Check hostname

Checks whether the certificate belongs to the domain/IP.

 Further help under [Certificate](#)

FrameSize

Sets the RTP packet size (msec Audio/RTP package).

Local SIP port

1024 ... 65535


Default: 5060


Sets the outgoing port for SIP messages.

 Further help under [SIP](#)

RTP off when silent

Ends the sending of RTP packets if no active conversation is taking place.

 **Note:** If this function is switched on, parts of the call can seem like breaks in the connection because background noises are cut off sharply.

 Further help under [Topology](#)

LLDP

If this function is enabled, LLDP packages are sent regularly to the directly connected LLDP-enabled switch.

 Further help under [LLDP](#)

LLDP: Interval in seconds

LLDP package sending frequency

30 to 3600 sec

Minimum: 30 sec

Default: 30 sec

 Further help under [LLDP](#)


Jitter buffer



Initial value

Initial prefetch delay value (msec).


i Note: The value must lie between Min. prefetch and Max. prefetch. If the Initial value = 0, prefetch is deactivated.

 Further help under [Jitter buffer](#)

Min. prefetch

Minimum prefetch delay (msec).


Default: 60 msec

 Further help under [Jitter buffer](#)

Max. prefetch

Maximum prefetch delay (msec).


Default: 240 msec

 Further help under [Jitter buffer](#)

Maximum

Delay that can be set for the jitter buffer (msec).

Default: 360 msec

 Further help under [Jitter buffer](#)


STUN server

STUN server

STUN server management

Settings

STUN server management

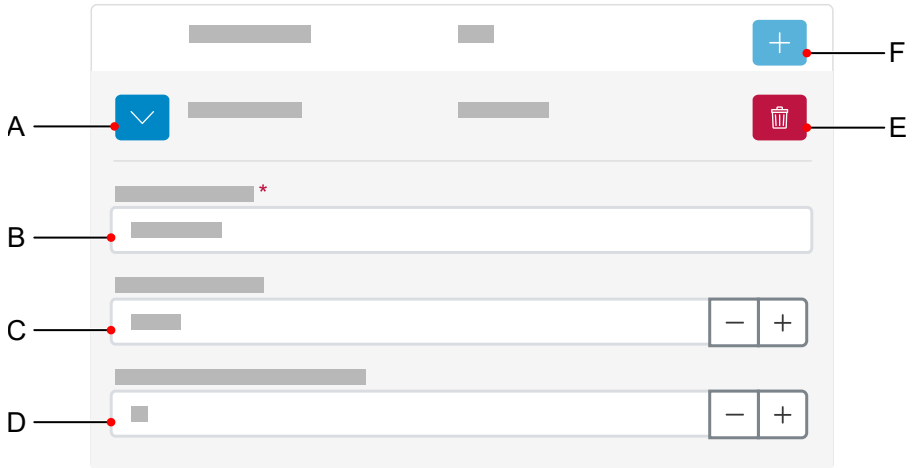

- A Displays/hides all settings for a STUN server.
- B **STUN server URL** field, entry mandatory
- C **STUN server port** field, 1 ... 65535.
- D **Registration time lapse (min.)**, 5 ... 60 minutes.
- E Deletes the selected STUN server.
- F Adds another STUN server to the list. The list is dynamic. Settings can be made for up to eight STUN servers.

Settings



STUN server URL

Requirement:


- Configured DNS server


Enter the STUN server URL.

 Further help under [Topology](#)

STUN server port

1 ... 65535

 **Important:** Every time port forwarding is performed, there is a security risk. For this reason, we recommend you use port forwarding as little as possible.

 **Note:** If you encounter problems with half-open (dropped) call connections, enabling the RTP port might help.

 Further help under [Topology](#)


Time lapse registration (min.)

5 ... 60 minutes

Settings

The registration time is the number of minutes that must elapse before the telephone reregisters itself with the VoIP provider.

The value you enter here should be a compromise between a short timespan (which generates traffic with the provider) and a long re-registration period.

 Further help under [Topology](#)


LDAP

LDAP

Basic Settings

LDAP filter

Basic Settings

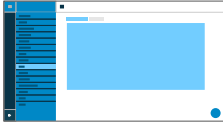

LDAP-Protocol

Protocol used on the LDAP server

LDAP

By default, unencrypted data traffic, Port 389.

LDAP StartTLS

Data traffic encrypted using Transport Layer Security, Port 389.

LDAPS

LDAP via SSL technology, Port 636.

Active

Switches on the directory service request.

 Further help under [LDAP](#)

Server

The LDAP server's domain name or IP address

 Further help under [LDAP](#)

Port

The LDAP server's port. On PBXs, use the preset port.

LDAPS (recommended): Port 636


LDAP StartTLS: Port 389

LDAP: Port 389

 Further help under [LDAP](#)

User name


User name assigned when the LDAP server was being configured. Used for identification to the LDAP server.

 **Note:** You can find the user name in the web interface of your PBX under **User data > Address Books > Settings** in the row **Simplified user name** next to **User name**(e.g. cn=auerswaldschandelah,dc=auerswald).

 Further help under [LDAP](#)

Password

This is the password assigned when the LDAP server was being configured. It is used for identification to the LDAP server.

 **Note:** You can find the password in the web interface of your PBX under **User data > Address Books > Settings** in the row **Simplified user name** next to **Password**.

 Further help under [LDAP](#)


Search area


Point in the folder from which the LDAP search starts.

Example: BaseDN dc=auerswald

 Further help under [LDAP](#)

LDAP filter

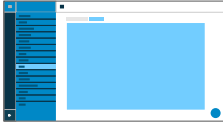

-  Only experts should make the settings available in the **LDAP > LDAP filter** area. LDAP filter syntax is used. RFC 2254 and RFC 4515 are used.

To enable contact data to be transferred from the LDAP server, enter the following values, listed below, in the end device.

Name filter

Sets the name filter used for the LDAP search.

 Further help under [LDAP](#)

Number filter

Filter for assigning numbers to names for incoming and outbound calls.

 Further help under [LDAP](#)

Number filter dial preparation

Filter for displaying the suggestions list in dial preparation.

 Further help under [LDAP](#)

Max. LDAP contacts

Sets the max. number of contacts that the LDAP server is to output.

 Further help under [LDAP](#)

Max. matches

Sets the max. number of search results that the LDAP server is to output.

 Further help under [LDAP](#)

Name attributes

Relevant name attributes.

 Further help under [LDAP](#)

Phone number attributes

Relevant phone number attributes.

 Further help under [LDAP](#)

Sort by

Sorting algorithm (by First name, by Last name)

 Further help under [LDAP](#)

Name format

Defines the format in which names are displayed (First name first, Last name first).

 Further help under [LDAP](#)

Number search incoming

If "Number search incoming" is enabled, the display name is searched for via LDAP, for incoming calls.

 Further help under [LDAP](#)

Number search outgoing

If "Number search outgoing" is enabled, the display name is searched for via LDAP, for outgoing calls.

 Further help under [LDAP](#)

Telephony

Telephony

Call settings

Call bindings

Call settings

Call settings

Call signalling

Direct call


Dialled calls

Call forwarding

Call history

Automatic call acceptance

Call signalling

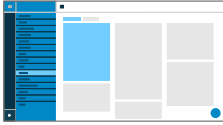

Reverse search

For incoming and outbound calls, this option displays the names of saved contacts that are suitable for the phone number.

Call waiting

Indicates an incoming call during a call.

Audible indication

This acoustic signal indicates that there is an incoming call during a call.

If this option is disabled, incoming calls are only signalled by a change in the display content during a call.

Do not disturb


Rejects calls to the phone.

Call Completion

The callback is triggered automatically by the PBX.

 Further help under [Call Completion](#)

Direct call

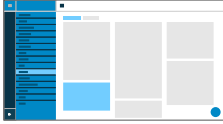

Destination


Enter the phone number that is to be called after the specified waiting time has elapsed.

i **Notes:** The function is only active if a destination has been entered. Comply with the phone number format set for the PBX when entering external phone numbers.


 Further help under [Direct call](#)

Waiting time before call starts in s

Shows the number of seconds the device will wait before starting the call to the specified destination.

 Further help under [Direct call](#)

Dialled calls

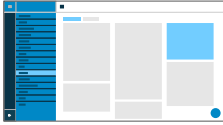

Anonymous call

Stops your phone number from being displayed to the person you are calling


Automatic start of call

The call starts automatically after the predefined time.

Seconds until start of call

You can use the sliding adjuster to set the number of the seconds that the phone waits before making the automatic call.

Call forwarding

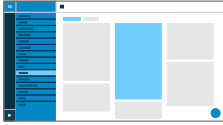

Immediately

Forwards incoming calls to the set destination number immediately.

 Further help under [Call forwarding](#)

On busy

Forwards incoming calls to the set destination number if the subscriber is busy.

 Further help under [Call forwarding](#)

On no reply

Forwards incoming calls to the set destination number if these calls have not been taken within a set time.

 Further help under [Call forwarding](#)


Call forwarding destination

Enter the destination number here.

 Further help under [Call forwarding](#)

Waiting time before call forwarding

Sets the number of the seconds that the phone waits before activating call forwarding.

 Further help under [Call forwarding](#)


Call history




Log calls

Activates the logging of incoming and outgoing calls.

i Note: If the function is switched off, calls cannot be started by redialling the number.

 Further help under [Log calls](#)

Automatic call acceptance

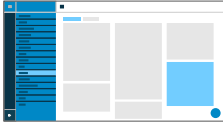

On SIP request

Received calls use an Alert Info header containing `info=alert-autoanswer` to request immediate call acceptance.

➤ Further help under [Automatic call acceptance](#)

After timeout

Sets the number of seconds that the phone waits before automatically taking an incoming call. Automatic call acceptance is prevented by selecting the setting **Not automatically**.

➤ Further help under [Automatic call acceptance](#)

Beep when connecting


Uses a tone to signal incoming calls.

➤ Further help under [Automatic call acceptance](#)

Interrupt active calls


Active calls are put on hold when InterCom calls are received.

Automatic call acceptance

 **Note:** For active calls to be interrupted, the Call waiting function must be enabled.


 Further help under [Automatic call acceptance](#)

Call bindings

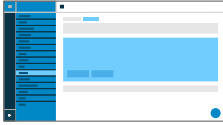

Name

Freely selectable name.

 Further help under [Call bindings](#)

Remote party

Select a remote party with whom the shortcut is to be set up.

To prevent interruptions in the camera image display when phone numbers change, you can also use regular expressions (regex) to represent a greater range of phone numbers.

Example 1: The camera is connected with remote party 55. As the door bell button "55(4)" was being pressed when the call was displayed, there is no camera image. This situation can be prevented in 2 ways:

1. Configure another call binding with remote party 554
2. Enter this regular expression `55[1-4]?@.*`

When you enter this regular expression, these phone numbers are recognised as valid: 55, 551, 552, 553 and 554.

A camera image would not be displayed for:


- phone numbers with more than 3 digits
- phone numbers that do not start with 55


Call bindings

- phone numbers with digits outside the range 1 to 4 after 55

Example 2: Call binding in connection with an AVM FRITZ!box


The camera is connected to an AVM FRITZ!box with the internal remote party `**620.*`. In regular expressions, the star key has a function assigned to it and must therefore be marked as a digit by adding escape characters to it. The correct entry is: `**620@fritz.box`.

 **Note:** The AVM FRITZ!box sends internal phone numbers as `xxx@fritz.box`.

 Further help under [Call bindings](#)


Camera

Select the camera whose images are to be displayed.

 Further help under [Cameras](#)

Softkeys | key 1/2

Selects a configured function key.

 Further help under [Call bindings](#)


Sound

Sound

[Ringtones by call type](#)

[Ringtone management](#)

Ringtones by call type

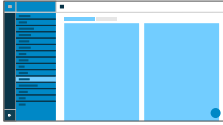

#Numbering

Displays the sequential number within the list.

 Further help under [Sound](#)

Search term

Assigns the selected ringtone to the alert info from the PBX/provider's SIP Invite. Six names are predefined by default.

 Further help under [Sound](#)

Ringtones by call type

List of possible ringtones. Assign a ringtone to a call type here.

 Further help under [Sound](#)


Ringtone management

Ringtone management

[Upload ringtone](#)

[Settings](#)

Upload ringtone

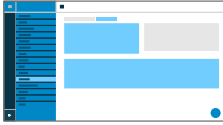

Import

Uploads the selected audio file to the device.

There are two steps in the procedure:

- **Browse:** Displays a dialogue in which you select the required file.
- **Import:** Uploads the selected audio file to the phone.

 **Note:** Max. permitted file size per file: 5 MB.


 Further help under [Sound](#)

Memory utilisation

Displays how much memory is occupied by imported ringtones.


 Further help under [Sound](#)

Settings

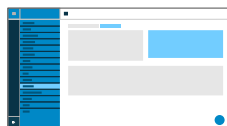


Silence on user proximity

Switches Silence on user proximity on.

 Further help under [Gesture control](#)


Date and time

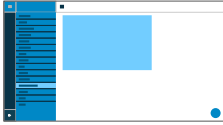

Automatic time (NTP)

The time is automatically transferred from the NTP server.

If NTP is not enabled, there is no synchronisation between the phone and the time server. It is possible that the date and time may be displayed incorrectly.

 Further help under [Date and time](#)

NTP server


The time server that supplies the time stamp. Use the address of a time server that is geographically close by, to achieve maximum accuracy.

Example: pool.ntp.org

 Further help under [Date and time](#)

Time zone

Data on the phone that has a time stamp (such as call history entries, calendar entries and e-mails) is displayed with the correct time.

 Further help under [Date and time](#)

Time format

12 h: time display in 12-hour format. In addition, the time range AM/PM is displayed.

24 h: time display in 24-hour format.

 Further help under [Date and time](#)


User

User

User administration

Settings

User administration

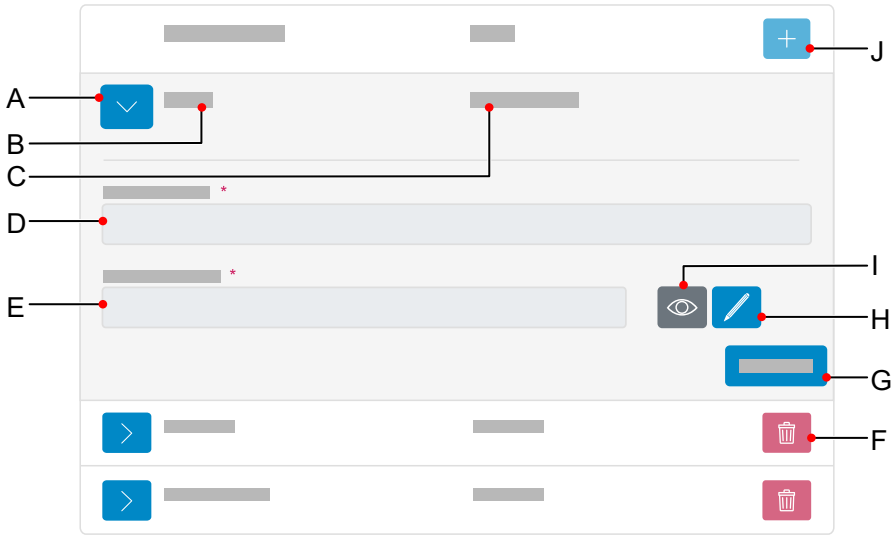

A Displays/hides the settings for a user

B Displays username as assigned in D.

C Displays the role as assigned when the new user was created.

Note: Administrator rights can only be assigned when a new user is created.

D **Username** field

E **Password** field

F Deletes a user.

G Stores all settings for a user.


H Click on the Edit icon to assign a new password.

I Displays/hides the currently set password (only in Edit mode).

User administration

J Adds a new user to the list.

Settings

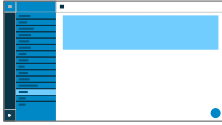

User name

Press this to display the user name.

i Note: Do not enter colons ": In the user name:


 Further help under [User roles and permissions](#)

Password

Enter/change the password here.


When you set a new password, comply with the conventions below. The password must:

- be different from the previous one used
- contain at least one number
- contain at least one capital letter
- contain at least one lower case letter
- contain at least one special character
- be at least 9 characters long
- be different from the user name

 Further help under [Passwords](#)


Admin

Assigns administrator rights to the user.

 **Note:** Administrator rights can only be assigned when a new user is created.

 Further help under [User roles and permissions](#)

Backup and restore

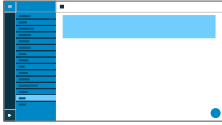

Create backup

Exports all phone settings to an .xml file.

A copy of the file will be saved on the PC.

Note: Depending on the setting for your browser, when you export the file, you will either be prompted to specify where the file will be stored or the file will be saved to your PC's Downloads folder. Example, Mozilla Firefox: **Settings > Files and applications > Downloads**.

Further help under [Backup and restore](#)

Restore backup

Uploads all settings in the saved .xml file to the phone.

There are two steps in the procedure:

- **Browse:** Displays a dialogue in which you can select a previously saved copy of the phone settings in the appropriate folder on the data storage device.
- **Import:** Uploads the settings from the selected .xml file to the phone.

Further help under [Backup and restore](#)

Access

Access

General settings

Telephone menu

General settings


General settings

[Developer options](#)

[Action URL](#)

[Logging](#)

Action URL

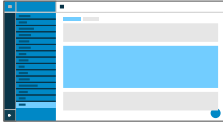

Evaluate action URLs

Triggers running of action URLs. The device receives HTTP requests from the PC and executes them.

Note: Activating **Evaluate action URLs** is not possible if the function **Web administration (https)** is inactive.

Further help under [Action URL](#)

Action URL server

Required to send events. No entry required if only commands are received.


Further help under [Action URL](#)

Generate new token

Provides a static password for the phone interface.

Further help under [Action URL](#)


Logging

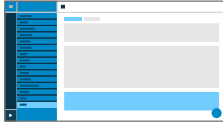


Extended Logging

Enables debug info recording.

i Note: In some situations, extended logging can have a negative impact on system performance.

 Further help under [Logging](#)

Telephone menu

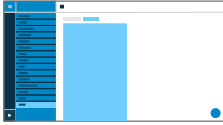

Filter settings

Limits the number of menu options are displayed. For administrators, the reduced display is applied to the phone. For users, the reduced display is applied both to the phone and the web interface.

Note: Only administrators can see this page.

Further help under [User roles and permissions](#)

Using the Phone

Basic Knowledge

Calls

Contacts

Gallery

Voicemail App

Sync

Settings

Basic Knowledge

Gesture control

Display

Notifications

Keys and LEDs

Apps

Gesture control

You can use gesture control to operate the device. This is an alternative to pressing keys, for some functions.

Tapping

Briefly tap the appropriate place on the display with the fingertip to perform one of these functions, depending on the element:

- Select
- Open
- Start
- Mark
- Switch on/off

Dragging/sliding

Vertically (scrolling)

Drag or slide from top to bottom, or from bottom to top, with the fingertip (without letting go)

- to scroll a list quickly
- to scroll web pages.

In some alphabetically sorted lists (e.g. Contacts), a vertical scroll bar is displayed on the right. Drag or slide the scroll bar upwards or downwards to scroll to the required letter.

Drag from the top edge of the display to display notifications. If you drag again, the brightness adjustment slider is displayed.

Diagonally (zoom in/out)

Gesture control

Drag two fingers apart or slide them together to increase or decrease the size of

- web page contents
- images in the Gallery app.

Swipe

Swipe left to right, or right to left, with the fingertip, to

- adjust settings such as for brightness, using the slider
- move between different call lists (all, missed, outgoing)
- delete messages in the notification window.

Proximity

The device is equipped with an integrated proximity sensor. When the user comes close to the device, they can control these functions:

- The device awakes from idle state.
- Silence the ring signal for an incoming call.
- Silence the call waiting tone during an active call.

 Further help under [Display and LED](#)

Display

Display

[Display overview](#)

[Status Line](#)

[Status widget](#)

[Status bar](#)

[Function keys](#)

[System icons](#)

[Entry and Selection Fields](#)

[Virtual keyboard](#)

[Navigation in menus](#)

Display overview

[Home](#)

[Varying display names](#)

[All call lists](#)

[Incoming calls](#)

[Active conversation](#)

[Putting a conversation on hold](#)

[Call forwarding](#)


[Conference call](#)

[Transfer](#)

[Call bindings](#)

Home

The next figure shows the telephone display with the Home screen open.

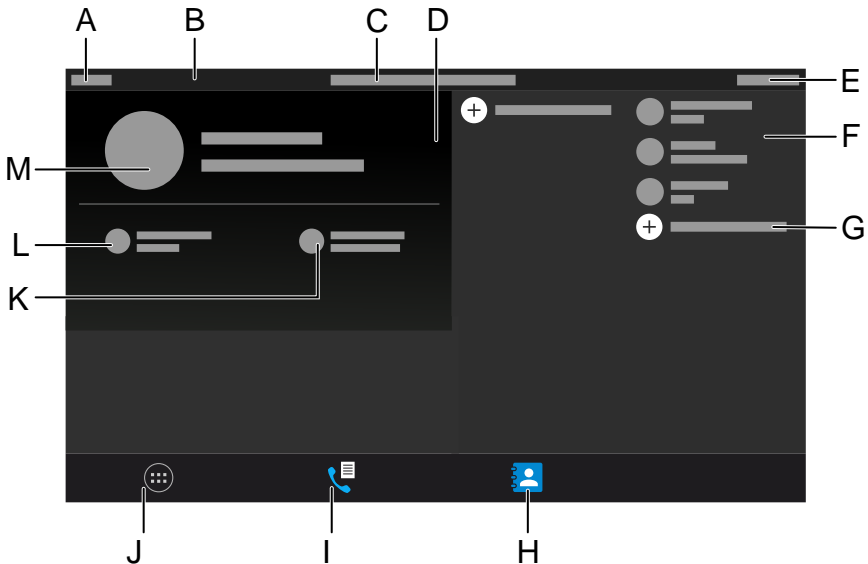

- A Calendar week
- B Status Line
- C Date
- D Status widget
- E Time, system icons
- F Touch function keys
- G Add additional touch function keys
- H Soft icon **Contacts**


Home

- I Soft icon **Call list**
- J Soft icon **Menu**
- K Soft icon **New messages**
- L Soft icon **New Calls**
- M ME Contact

Varying display names

Different display names can be sent. The display names will be used both on your own device and when SIP messages are sent.

Display names on the home screen

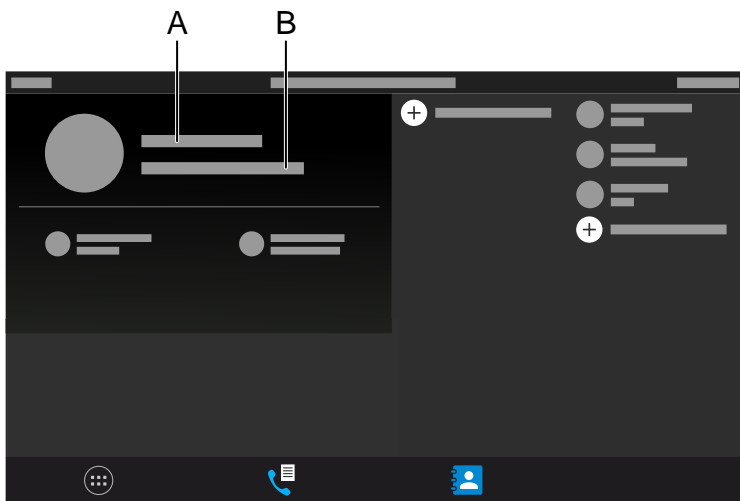


- A Possible displays (sequence indicates priority):
- Primary username = ME contact
 - Device name
- B Possible displays (sequence indicates priority):
- Display name as assigned in Identities
 - SIP username@SIP registrar (xxxx@xxx.xxx.xxx.xxx)

Varying display names

- No WebUI (if web administration (https) is deactivated and no identity has been configured)
- IP address (if device is connected but not registered)

All call lists

Overview of call lists

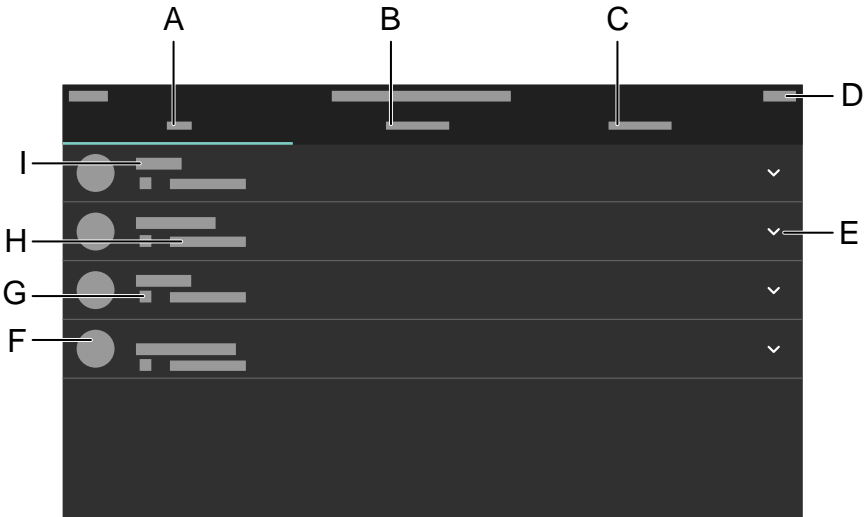

- A Caller list **ALL**: Lists all calls by how recent they are.
- B Caller list **MISSED**: Lists all calls, sorted chronologically.
- C Caller list **OUTGOING**: Lists all outgoing calls, sorted chronologically.
- D Status bar: Displays the date, time and, if required, other system icons
- E Displays a list containing these options:
 - **Call details**
 - **Edit number before call**

All call lists





- **Add contact**
- **Clear entry**


F Profile picture

G Call type icon

H Call time and date


I Phone number/Contact

 **Note:** Tap on an entry in the list to dial it. To remove an entry from a call list, use the arrow keys to navigate to the entry and then press Delete . To delete the entire list contents, press Delete  for approx. 2 seconds and confirm the screen message you see next with **OK**. Press Back to leave the call history .


 Details about the settings are in [Display](#)

Incoming calls

The following information is displayed when incoming calls are received by a COMfortel D-series telephone:


- the destination that has been called
 - the caller
 - the person being called
 - the call path
-  **Important:** The call paths are only displayed if the telephone has Feature level 2 or above (device is operating on a COMtrexx) or after the D-series convenience package has been activated (device is operating on an Auerswald/FONtevo PBX).

Internal

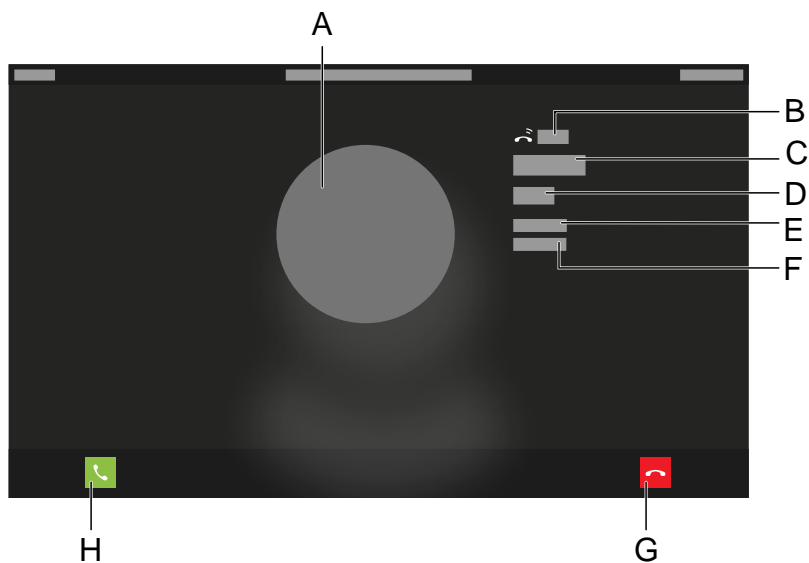

- A Contact profile
- B Call duration
- C Caller name
- D Caller phone number
- E **Identity**
- F Own called identity
- G Reject
- H Accept

External

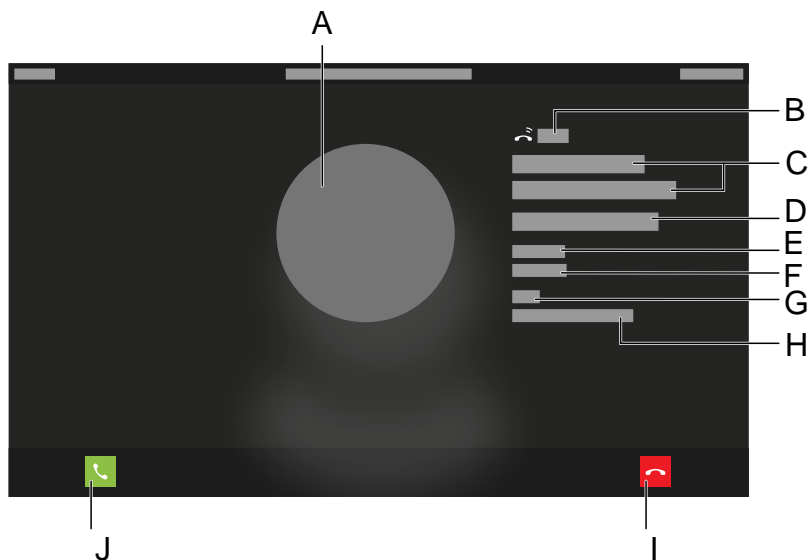

A Contact profile

B Call duration

C Caller name

D Caller phone number

E **Identity**

F Own called identity

G **Exchange**

H Name of the called exchange line number


If no name has been assigned: Display the called number.

I Reject

Incoming calls

J Accept

Group call

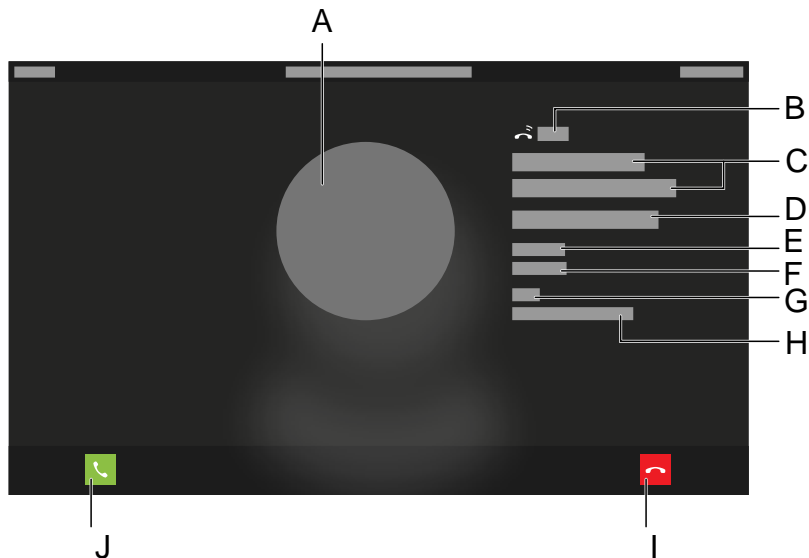

- A Contact profile
- B Call duration
- C Caller name
- D Caller phone number
- E **Group**
- F Name of the called group
- G **Exchange**
- H Name of the called number


If no name has been assigned: Display the called number.

Incoming calls

I Reject

J Accept

Door call

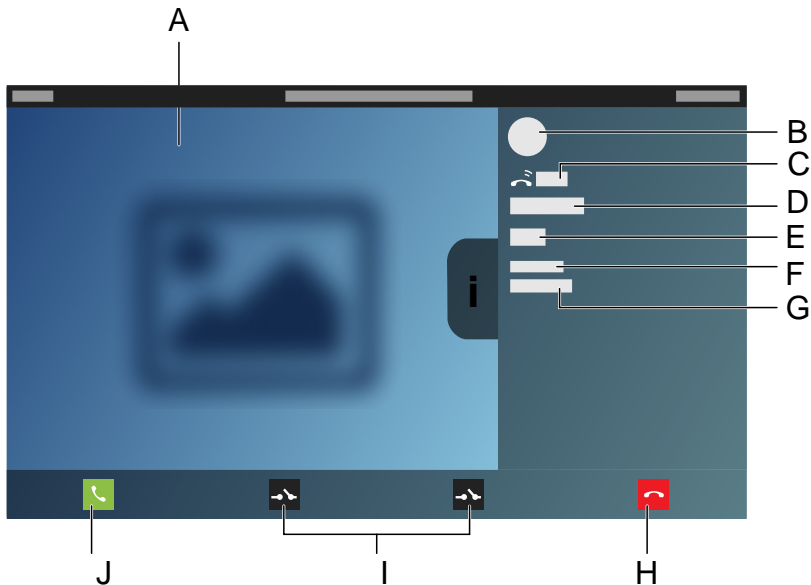

A Displays the camera image that is transferred from the door terminal

B Contact profile

C Call duration

D Door name

E Door phone number


F **Identity**

G Own called identity

Incoming calls

- H Reject
- I For the relay function key, set up for the door call (e.g. Open the door, switch on light)
- J Accept

Forwarded call

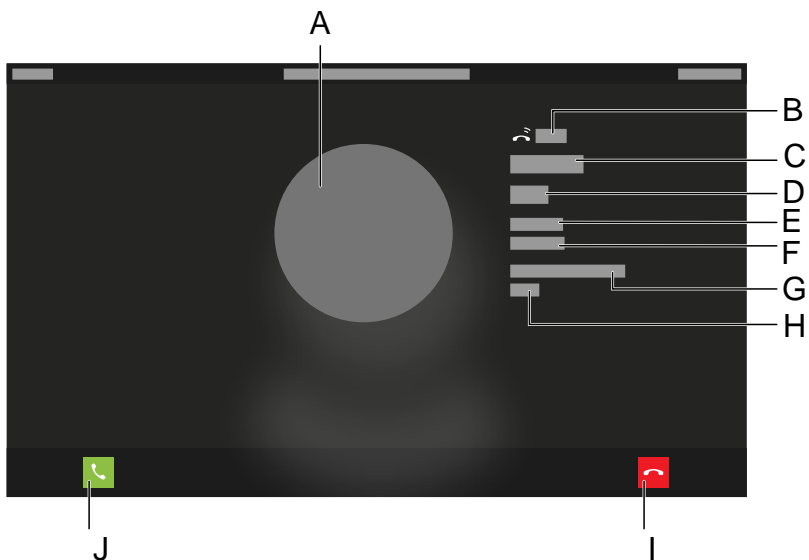


- A Contact profile
- B Call duration
- C Caller name
- D Caller phone number
- E **Identity**
- F Own called identity

Incoming calls

- G **Redirected via**
- H Internal phone number
- I Reject
- J Accept


Call waiting

Use the Call waiting function to signal incoming calls during an on-going conversation.

 Further help under [Call waiting](#)


Do not disturb

Use the Do not disturb function to switch off incoming calls if necessary.

 Further help under [Do not disturb](#)

Pick-Up

Use the pick-up function to take a call, originally sent to another internal telephone, or your own voice mailbox, on your own phone.

 Description of the operation under [Pick-Up](#)


Call forwarding

Use the Call forwarding function to forward calls independently of the current situation (immediately, on busy or on no reply).

 Further help under [Call forwarding](#)

Active conversation


Active conversation between 2 SUBs

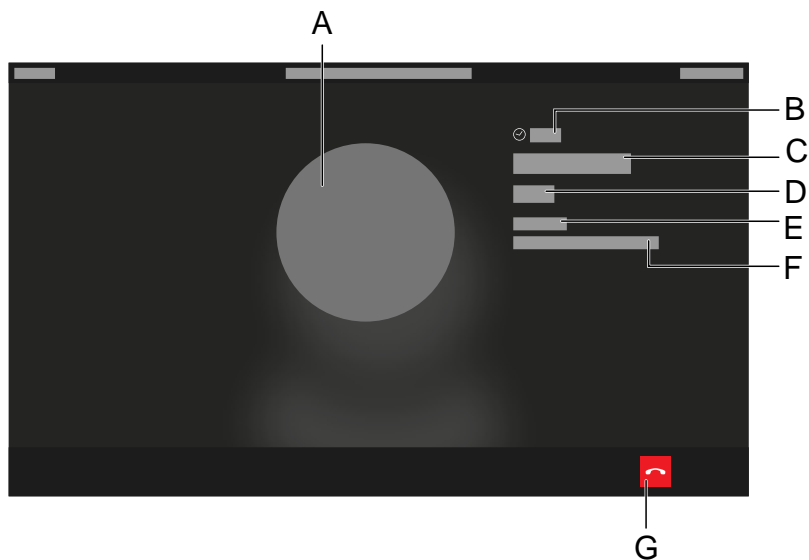

- A Contact profile
- B Conversation duration
- C Identity SUB 1
- D Subscriber number SUB 1
- E **Identity**
- F Identity 2
- G Hang up


Putting a conversation on hold

Put subscriber 1 on hold

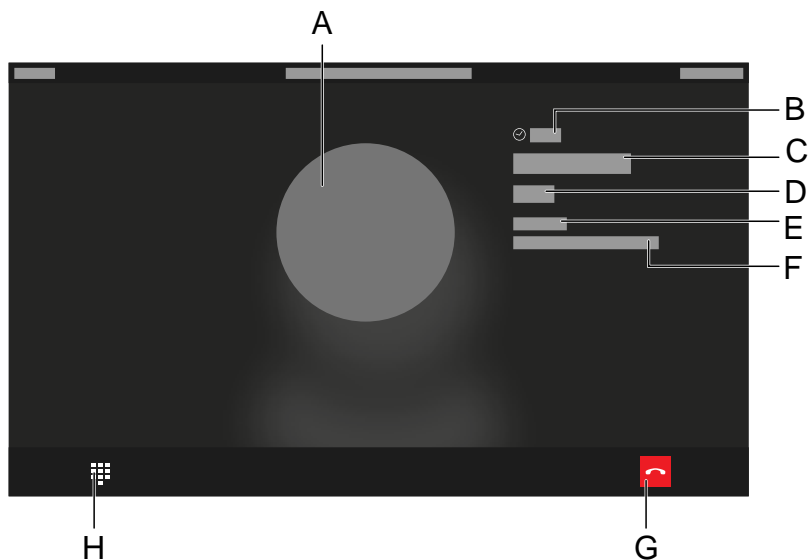

- A Contact profile
- B On-hold duration
- C Identity of SUB put on hold
- D SUB subscriber number put on hold
- E **Identity**
- F Own identity
- G Hang up
- H Changes to the view from which another SUB can be called


Put participant 2 on hold, participant 1 in call

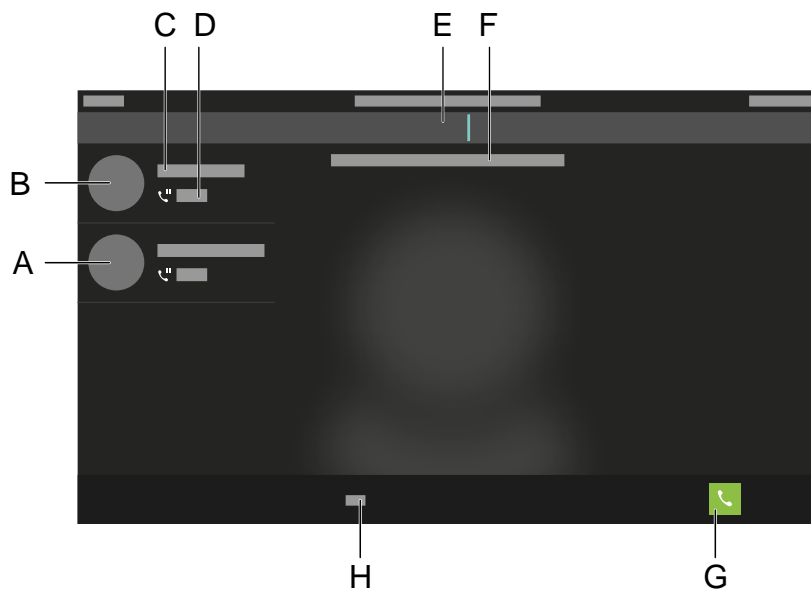

- A Participant 1
- B Participant 2
- C Contact name
- D Call duration
- E Enter the subscriber number to call a different subscriber
- F Note text
- G Trigger a call
- H Toggle between numerical and alphanumeric entry


Call forwarding

Own call will be forwarded

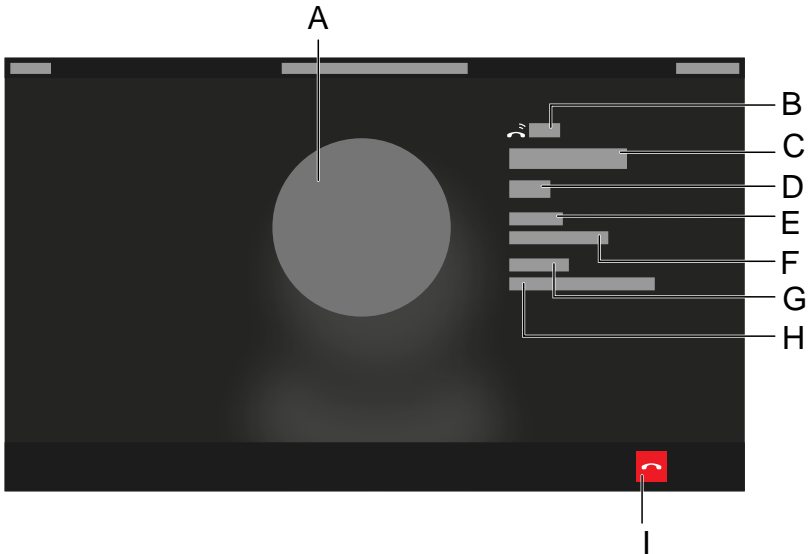


- A Contact profile
- B Call duration
- C Name of the identity to which the call is transmitted
- D Subscriber number of the identity to which the call is transmitted
- E **Identity**
- F Own identity
- G **Redirected via**
- H Redirecting identity with phone number display
- I Hang up

Selects the call forwarding destination

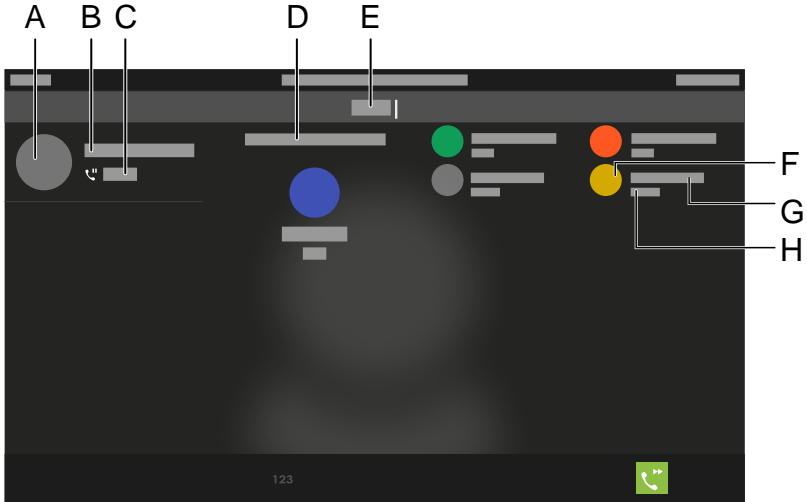

- A Contact profile
- B Identity of the call to be forwarded
- C Duration of the call to be forwarded
- D Note text
- E Call forwarding destination entry
- Suggested contacts, each consisting of:
 - F Contact profile
 - G Identity name
 - H Identity subscriber number

Forwarding an active conversation

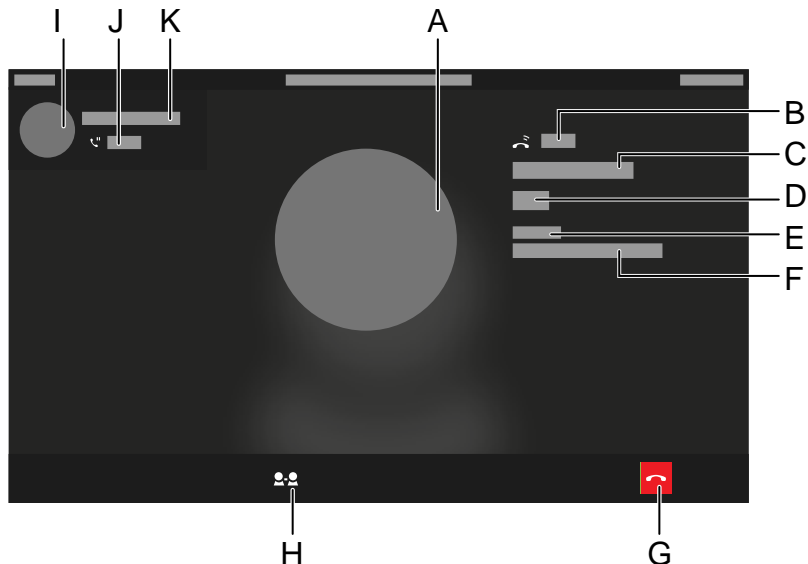

- A Contact profile
- B Duration of call to destination
- C Identity of call to destination
- D Subscriber number of call to destination
- E **Identity**
- F Own identity
- G Hang up
- H Connect partner

Press the soft key to forward the call without announcement


- I Contact profile of the call to be forwarded

Call forwarding

- J Duration of the call to be forwarded
- K Identity of the call to be forwarded

Conference call

Preliminary conference call setup stage

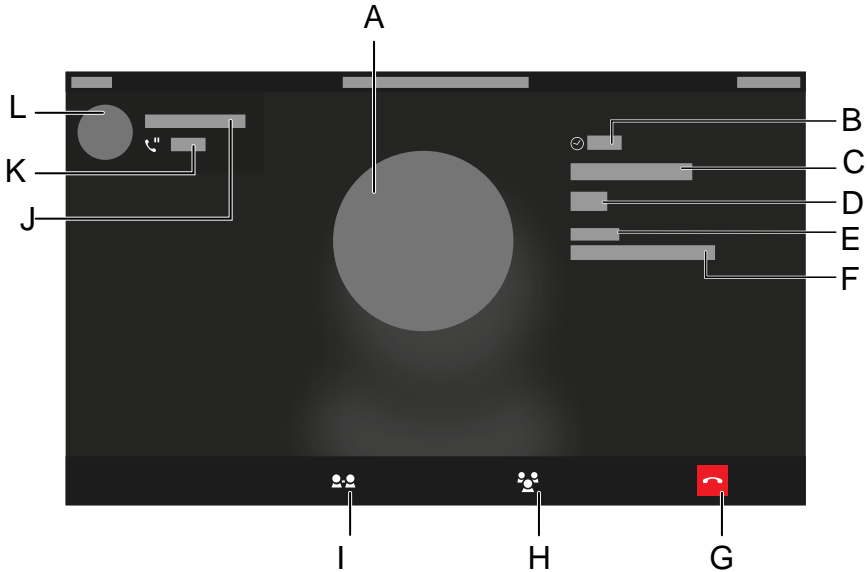


- A Contact profile
- B Duration of active conversation
- C Identity of the active conversation
- D Subscriber number of active conversation
- E **Identity**
- F Own identity
- G Hang up
- H Conference call setup
- I Connect partner

Conference call

- J Identity of on-hold call
- K Duration of on-hold call
- L Contact profile of on-hold call

Active conference call

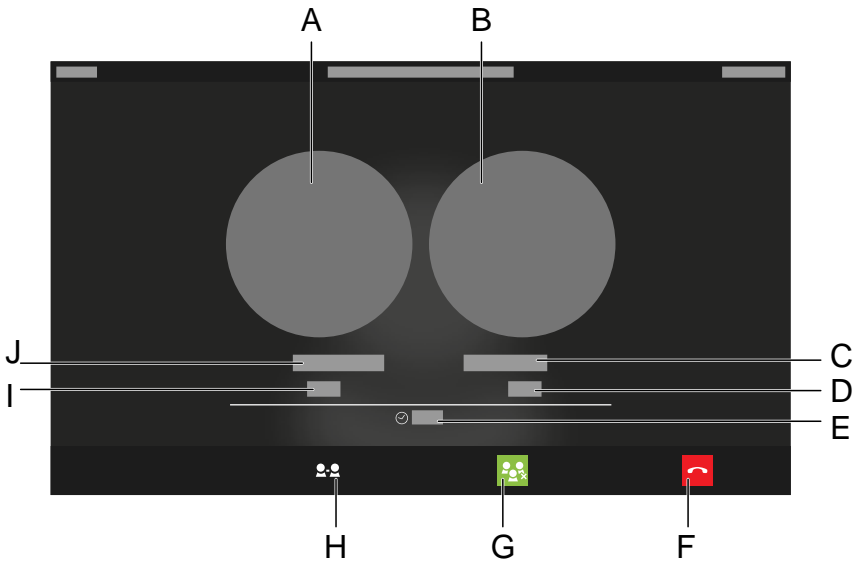

- A Contact profile, conference call participant 1
- B Contact profile, conference call participant 2
- C Identity, conference call participant 2
- D Subscriber number, conference call participant 2
- E Conference call duration
- F Own identity
- G Disconnect conference call

Conference call


H Connect partner

I Subscriber number, conference call participant 1

J Identity, conference call participant 2

Transfer


Call forwarding using transfer

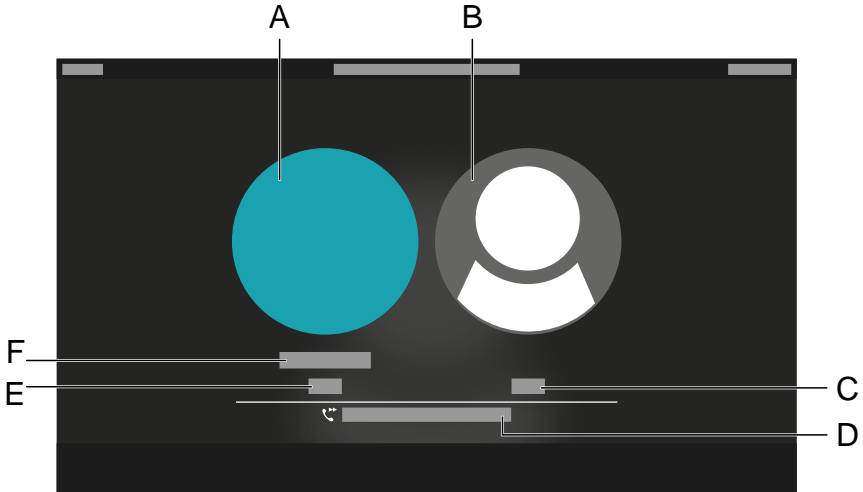

- A Contact profile of active participant
- B Transfer target contact profile
- C Transfer target subscriber number
- D Transfer status display
- E Subscriber number of active participant
- F Identity of active participant

Call bindings

Call bindings with displayed info and additional remote party

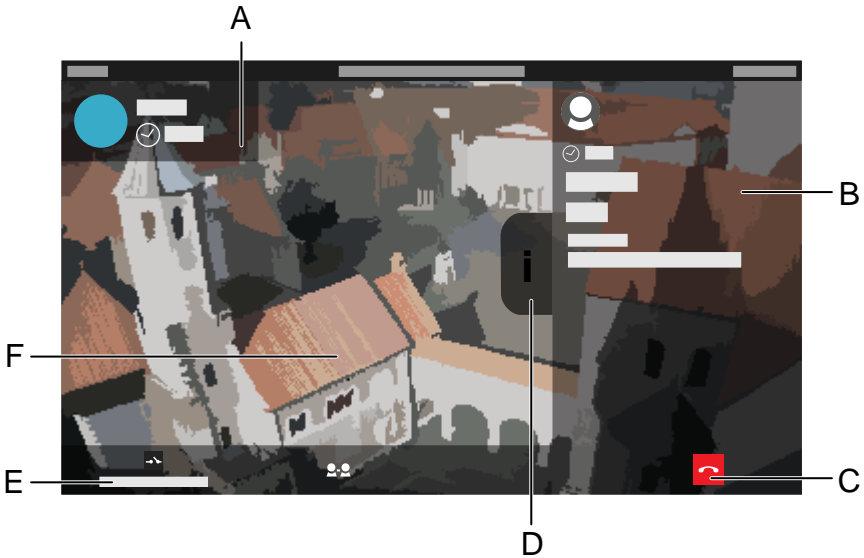

- A Additional calls (e.g. a call on hold)
- B Information about the current remote party
- C Ending a call
- D Flags for displaying or hiding information about the current remote party
- E Set-up function key that is displayed when an incoming call is received. It provides additional options, in this case, opening a door using the Relay function key **Relays**
- F These must be present, to display a camera image:

Call bindings

- An IP camera with a valid URL.
- A call that is connected to the IP camera.

Status Line

The telephone's status line displays the following information:

- Calendar week
- Date
- Time


Status widget

The status widget displays the following information:


- Avatar or profile picture
- Device type
- Contact name as assigned in **Contacts** > **ME**
- Display name as assigned in **Identities**
- Missed calls
- Voice messages

Status bar


To display the status bar,

- swipe from the top edge of the display to the bottom
- Press the  Messages key

To hide the status bar,

- swipe from the bottom edge of the display to the top
- Press the  Back button

The status bar tells the user about the telephone's status at any time.

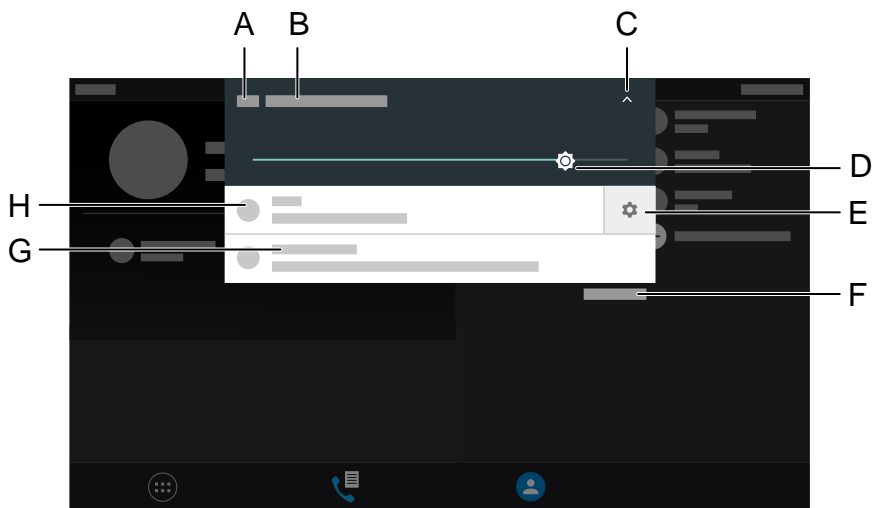

A Time

B Date


Status bar

C Hides or displays the slider that is used to set the display brightness

D Brightness adjuster


E **Settings icon** for working with notifications

F Deletes all notifications

 **Note:** **Delete all** is only displayed when the brightness adjuster is hidden.

G Notification text

H Notification icon

 **Note:** If you need to make other notification-related settings, you will find other options in a context menu. Follow these steps to display it:

- Press and hold the notification
- Swipe the notification to the left or right, to display the **Settings icon**
Selection of the **Settings icon** opens the menu.

Function keys

Touch function keys

The configured touch function keys are displayed on the top right of the display.

Press these keys to perform configured functions.

Use the up/down arrow keys or gesture control to scroll through the list, which contains several items.


 Details about the settings are in [Function keys](#)

 Details about the settings are in [Edit function keys](#)

Key extension module COMfortel[®] D-XT20/D-XT20i

The number of programmable function keys on the device can be extended by adding up to three COMfortel D-XT20/D-XT20i key extension modules (not included in the scope of delivery). Modules are attached to the right-hand side of the phone.

Function keys

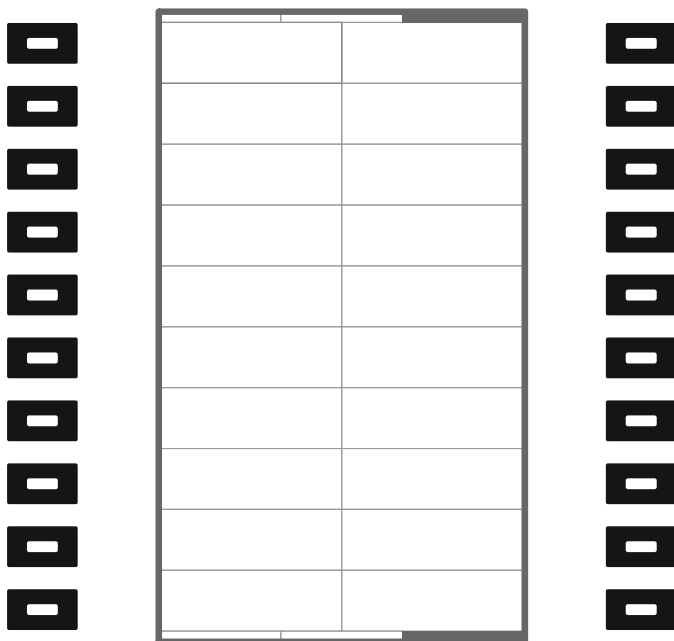

Selecting a key level on the key extension module

Change between key levels by pressing the control rocker.

You can see the current key level on the horizontal scroll bar at the top and bottom edge of the display.

The display content changes according to the selected key level.

System icons


 Menu

 Call list

 Contact

 Add a function key

 Function key: **Speed dial**

 Function key: **Identity**

 Function key: **Browser**

 Function key: **Call forwarding**

 Function key: **Call waiting**

 Function key: **Anonymous call**


 Function key: **Activate config**

 Function key: **Do not disturb**

 Function key: **Group**

 Function key: **XML Minibrowser**

 Function key: **Silent Alert**

 Function key: **VPN**

 Function key: **Relays**

 Function key: **Park position**

System icons

→| Function key: **Login**

←| Function key: **Logout**


 Call forwarding immediately

 Call forwarding on no reply


 Anonymous call

 Do not disturb enabled

 Incoming call

 Duration of an active call

 Active call

 Call on hold

 Call Completion


 Headset

 Bluetooth


 Accepted call

 Missed call

 Outgoing call

 Unsuccessful outgoing call


System icons

 Successfully forwarded call


 Rerouted call


 Call taken externally

 Active conference call


 Conference call participant

 Own device is on hold

 Own device is being forwarded

 Connect subscriber

 Delete numbers

 Switch to numerical entry


 Switch to alphanumeric entry

 Forward call

 Successful forwarding of a call

 Failure to forward a call

 Accepts a call

 Reject a call/hang up

 Search

System icons

⋮ Further information

← Back/quit search

+ Add Contact

👤 Contact

🕒 Status icon: **Call**

✉ Status icon: **New message**

🕒 Status icon: **Missed call**

🔄 Update

🚫 No account

⚠ Warning

🔔 Setting the volume

ℹ Call details

🗪 Edit number before call





+ Add contact

× Delete from list

∨ Open list

∧ Close list

System icons

-  Identity registered, unencrypted
-  Identity registered, encrypted
-  Identity unregistered
-  Identity not configured

Entry and Selection Fields

Element

Function



An empty entry field is displayed, in which you can enter a name, number or address. Tap on the entry field and enter the text or number. You can either use the screen keyboard or the keys on the telephone to enter it.



Note: Any text already present in the entry field is overwritten by the text you input.



Note: The device is equipped with a T9 dictionary. The dictionary language changes to the language set in the device. You can enter frequently-used words in the dictionary. These words are then displayed as suggestions when you are entering text.



Option fields for selecting the required setting. The selected setting is marked by a coloured dot. Tap on an option to activate it. The previous selection is disabled at the same time.



Check boxes for enabling or disabling settings and functions. An empty check box means "inactive". A selected check box means "active". To change a check box's state, tap on it.



Use the sliders to make infinitely variable settings (e.g. brightness or volume settings). The slider's position shows where the setting is. The further the slider is to the left, the lower the value that is set. The further the slider is to the right, the higher the value that is set.

Virtual keyboard



A Marked text

B Insertion marks

To change the marking, move the marks left or right.

C **CUT**

Copies the selected text to the clipboard and removes it from the current view.

D **COPY**

Copies the selected text to the clipboard.

E **SELECT ALL**

Selects the entire text in the entry field.

F Shift key

Switches between upper and lowercase letters.

G Changes between numerical and alphanumeric entry.

Virtual keyboard

H Space

I Confirms the entry and returns to the main menu.

J Deletes the entry character by character.

K Keyboard

Numerical or alphanumeric, depending on current setting.

L **FINISHED**

Confirms the entry and returns to the main menu.


Display/hide the screen keyboard

You can display or hide the screen keyboard as required for text entry fields.

For this, press for approximately 2 seconds.



Navigation in menus

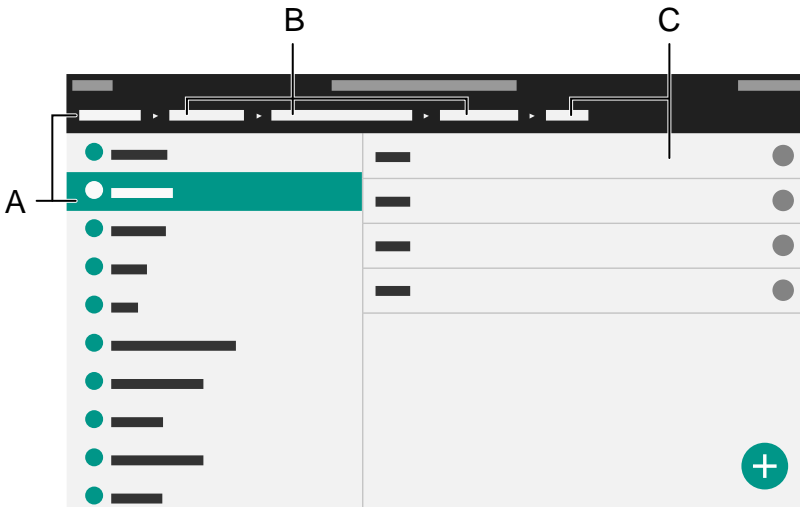You can identify the current place in the menu structure using the breadcrumb navigation below the status line. Use the link paths to find out where you are. It simplifies navigation in complex menus. Tap on a menu option to jump to the next menu up.



- A Menu option at the highest level (start)
- B Menu option between the highest and lowest level
- C Menu option at the lowest level (destination)

Notifications

 **Note:** The options and displays provided in the Notifications menu option are identical to those for the message key .

 Further help under [Dedicated function keys](#)

One missed call

Select to open the list **Calls > Missed**.

A new voice message

The mailbox is called and the dialler is displayed.

Follow the spoken instructions to find out what to do next.

Keys and LEDs

Keypad

Dedicated function keys

Delete, Home and Back

Directional pad and OK

LED signalling on function keys

Casing LED

Changing the input mode

Keypad


Use the keypad to dial subscriber numbers and to enter numbers and letters. Press the digit keys one or more times until the required character appears. The assignment is then listed in the table below. The characters available vary according to the language configured for the device.

Key	Assignment
1	1 - / @
2	a b c 2 A B C ä Ä
3	d e f 3 D E F
4	g h i 4 G H I
5	j k l 5 J K L
6	m n o 6 M N O ö Ö
7	p q r s 7 P Q R S ß
8	t u v 8 T U V ü Ü
9	w x y z 9 W X Y Z
0	Space . , 0 + : ' \ " ? ¿ ! _
*	* () [] < = > « » ^ ' ` ~ { }
#	# % & § £ \$ €

Dedicated function keys

Messages with LED

- Displays these lists:
 - Voice messages
 - Missed calls

 **Note:** The behaviour of the LED message key can be configured via **Settings > Display and LED > Seen missed calls / Heard voice messages**

Microphone with LED

- Switches the microphone off (mute) or on again.
- LED is shining red: microphone is disabled

Hold with LED

- You can put an active call on hold or reconnect it again.

Redialling

- Displays the outgoing calls list.

Headset with LED

- Press the Headset key to enable or disable the headset.
- LED is shining green: headset operation is active
- LED is flashing green: incoming call
- LED is shining red: active headset call

Transfer without LED

- You can transfer calls with or without prior notification.

minus

Dedicated function keys

- Reduces the volume of the ringer, receiver, or loudspeaker, depending on operational state

Loudspeaker with LED

- LED is flashing green: incoming call
- LED flashing red: loudspeaker listening is enabled
- LED is shining red: hands-free calling is enabled

plus

- Increases the volume of the ringer, receiver, or loudspeaker, depending on operational state.

Delete, Home and Back

Delete

- Press this to delete the last character before the cursor.

Home

 
- Press this to display the home screen. Previously started actions will continue in the background.

Back

- Press this to return to the most recently opened menu and end the current action.

Directional pad and OK

Use the directional pad to navigate in the display.

Use the directional pad direction keys to start operation and activate required elements in lists and menus. By pressing OK  the activated element is selected and the element's function is executed.

LED signalling on function keys

Each LED indicates a function key's status depending on the key definition.

*: The function key or the described behaviour of the LED is only visible if the function key has been provisioned by a PBX or activated by manufacturer templates.

Function	LED display	Status
Speed dial	Shining red	Outgoing call from speed dial number or currently active conversation on speed dial number
	Flashing red	Inbound call to the speed dial number
	Flashing green	Missed call from speed dial number
	Off	No active calls or conversations
	Flashing yellow	Sending subscription to PBX
	Shining yellow	Subscription failed
Identity	Shining green	Active, registered identity, default identity

LED signalling on function keys

Function	LED display	Status
Call waiting	Off	Active, registered identity, not a default identity
	Flashing yellow	Current registration attempt
	Shining yellow	Incorrect identity
	Shining green	Function enabled
	Off	Function key configured, function deactivated
Do not disturb	Shining red	Function enabled
	Flashing red *	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow *	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow *	Error
Anonymous call	Shining green	Function enabled

LED signalling on function keys

Function	LED display	Status
Call forwarding on busy	Off	Function key configured, function deactivated
	Shining green	Function enabled
	Off	Function key configured, function deactivated
	Flashing green *	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow *	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured
Call forwarding on no reply	Shining green	Function enabled
	Off	Function key configured, function deactivated
	Flashing green *	Time gap between pressing the function key and acknowledgement by the PBX/provider

LED signalling on function keys

Function	LED display	Status
	Flashing yellow *	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured
Call forwarding immediately	Shining green	Function enabled
	Off	Function key configured, function deactivated
	Flashing green *	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow *	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured
VPN	Shining green	Function enabled
	Flashing yellow	Establishing VPN connection

LED signalling on function keys

Function	LED display	Status
	Off	Function key configured, function deactivated
XML mini browser	None	Performs the stored functions
Switch relay	Flashing green (approx. 2 sec.)	Relay has been switched
Group, Group (incoming), Group (outgoing) *	Shining green	Logged into the group
	Off	Logged out of the group
	Flashing green	Login process
	Flashing yellow	Sending subscription to PBX
	Shining yellow	Subscription failed
CF ext. calls: On Busy *	Shining green	Function enabled
	Off	Function key configured, function deactivated

LED signalling on function keys

Function	LED display	Status
	Flashing green	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured
CF ext. calls: On No reply *	Shining green	Function enabled
	Off	Function key configured, function deactivated
	Flashing green	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured

Function	LED display	Status
CF ext. calls: Immediately *	Shining green	Function enabled
	Off	Function key configured, function deactivated
	Flashing green	Time gap between pressing the function key and acknowledgement by the PBX/provider
	Flashing yellow	Current attempt to register the function key on the PBX/provider, using SIP Subscription
	Shining yellow	Error, function key perhaps not completely configured
Activate config *	Shining green	Configuration active
	Off	Configuration inactive
Park position	Shining red	Call in the internal park zone
	Off	Free park position
From device version COMfortel® D-400		
Browser	None	Calls the set page in the browser

LED signalling on function keys


Function	LED display	Status
Bluetooth	Off	Bluetooth not active
	Shining green	Bluetooth active
	Shining yellow	Error: maybe no Bluetooth dongle inserted

Casing LED

The Casing LED indicates the following statuses:

- Flashing red (quickly): incoming call
- Lit in red: active call

 Changing the input mode

If you want to use the keypad to enter data in fields, press and hold (for approx. 2 seconds) to toggle the input mode (abc < > 123) .


Apps

Apps

All Apps

Installing Additional Apps

All Apps

Tap on  to display all the apps and widgets installed on the telephone.



Displays a selection list containing settings for configuring the device.



You can view and process downloads performed with the browser.



F-Droid is an alternative app store for the Android mobile operating system. Only free software is offered on it, usually with a GNU GPL or Apache license.



Runs an app for viewing and managing pictures.



Runs an app for displaying image sequences from the installed IP cameras.



K-9 Mail is a free e-mail programme for the Android mobile operating system. The software is supplied under an Apache license and is available as an app from Google Play Store, F-Droid and the official website, among others.



Opens the calendar with the dates overview. You can enter new dates or a series of dates.



Displays the contact list.



Runs an app for listening to and managing music.

All Apps



Starts the Voicemail app so that fax and voicemail messages can be retrieved.



Runs a calculator app with standard calculation types: addition, subtraction, multiplication and division.



Runs an app for synchronising contacts and calendar entries.



Displays the call list.



Runs an app for showing the time on the display. You can also activate an alarm clock or use a stopwatch function.

Installing Additional Apps




You can install additional apps from the FDroid App Store. To enable this, the installation of additional apps must be permitted.



Further help under [Apps](#)

To install an app:

1. Press **Apps** via **Menu > Settings > Apps**
2. Select permission to install apps.
3. Close the menu.
4. Open FDroid App Store .
5. Select the app you want in the list.
6. Press **Install**.
7. Follow the additional instructions for the particular app.

Installed apps are listed in the installed apps overview.



Caution: Apps and files downloaded from the Internet may contain viruses which can damage your telephone. To protect your telephone and your personal data, we strongly recommend you only install apps and files from trustworthy sources.

Calls

Calls

**Navigation
Options**

Navigation

 Further help under [Display overview](#)

All

Lists all calls, sorted chronologically.

Missed

Press this to list all missed calls by how recent they are.

Outgoing

Press this to list all outgoing calls by how recent they are.

Options

Trigger a call

Tap on the phone number/contact to start a call.

Display options

- ∨ Displays the list with all available options.

Call details

Displays additional details about the selected call:

- Call type icon
- Contact/phone number
- call type
- Date
- Time
- Conversation duration

Edit number before call

Displays the previously selected phone number. You can then modify the number by selecting:

- Delete
- Complete



Add contact

Jumps to the menu **Add Contact**.

 
 Details about the settings are in [Edit Contact](#)

Clear entry

Deletes the selected entry in the Call history.

Note: Alternatively, you can delete entries in the caller list by pressing Delete . To delete the entire list, press Delete  for approximately 2 seconds.

Using the Call History in Different Ways

1. Select an entry in the call history.
2. By pressing OK  for approximately 2 seconds.
The options as described are listed.
3. Select any required options.

Contacts

Contacts

[Navigation](#)

[Edit Contact](#)

Navigation

Favourites

Lists all the contacts that are marked as Favourites (identified by a star).

All


Lists all contacts in a sorted sequence. The sorting procedure you select defines the sorting sequence.

Options

⋮ Displays these options:

- **Displayed contacts**
- **Manage accounts**

Opens the settings for LDAP

 Details about the settings are in [Contacts/LDAP](#)

- **Settings**

Here, you can modify the selected sorting process.

Delete

Deletes one or more contacts.

To delete a single contact, follow these steps:

1. Tap on the contact to open it.

All the data stored for the contact is displayed.

Navigation

2. Profile picture : > **DELETE**

3. Confirm the action.

To delete one or more contacts, follow these steps:

1. Press the contact to be deleted for approximately 2 sec.

A column with a check box is displayed.

2. Select the contact you want to delete.

3. : > **DELETE**

4. Confirm the action.

Search

🔍 Displays a search field. Use the screen keyboard that is now displayed to search for names, parts of names or numbers.

Add Contact

➕ Changes the menu, so you can create a new contact.

Edit Contact

Name

Enter a name using the

- Keypad
 - screen keyboard.
- ∨ You can then display or edit more details for the name.

phone

Enter a phone number using the

- Keypad
 - screen keyboard.
- ∨ You can then display or edit more details for the number.

E-mail

Enter an e-mail address using the

- Keypad
 - screen keyboard.
- ∨ You can then display or edit more details for the e-mail address.

Other fields

Enter more information for the contact using the

- Keypad

Edit Contact

- screen keyboard.
- ✓ You can then display or edit more details for the contact.

Save




- ✓ Saves the contact data locally in the telephone.

Gallery

More options

Displays options for performing more editing on the selected image, and displaying it.

Set picture as

-  **Background:** The selected image is used as the wallpaper in the display.
 -  **Contact photo:** The selected photo is assigned an icon from the contact list.
-  Further help under [Wallpaper](#)

Voicemail App

Voicemail App

Configuration

Settings

Configuration

Configuration

[Welcome](#)

[Login](#)

[Add ICT system](#)

[Add subscriber](#)

Welcome

Welcome

Accept the terms and conditions.

Login

First login

The ICT system and subscriber must be set up the first time you log in.

 Details about the settings are in [Add ICT system](#)

 Details about the settings are in [Add subscriber](#)

Login with existing data

Select the ICT system you want from the list.

The following options are available:


- **Add**

Adds another ICT system to the list.

 Details about the settings are in [Add ICT system](#)

-  **Edit**

 Details about the settings are in [Add ICT system](#)

 **Note:** If an account for an existing system is found, the login parameters (**Name, IP Address, Port**) are pre-filled with values.

Add ICT system

Name

Freely definable.

IP Address

IP address in the network under which the ICT system is available.

Port

ICT system's remote access port.

Default: 443

Test server

Checks whether a connection to the ICT system can be established with the settings that have been made.

Save and add user

Saves the settings that have been made and switches to **New User**.

 Details about the settings are in [Add subscriber](#)

Add subscriber

Username


Subscriber's phone number.

Save credentials

If this function is active, you can assign a password.

Password

Freely definable.

 **Note:** A password can only be assigned if the **Save credentials** function is active.

Save and log in

Saves the settings that have been made and opens the app.

Settings

Settings

Overview

Faxes

Voicemails

Fax / Voicemail Boxes

Memory Overview

Synchronize

Logout

App Info

Overview

Displays the following information:

- Logged on as (subscriber in the ICT system)
- Unread fax messages (volume)
- Unread voicemails (volume)

Faxes

Overview

Lists all fax messages, sorted by date. More information is displayed for each message:

- Name (sender)
- Number (recipient)
- Date and Time
- Direction (outgoing/incoming)

View

Tap on a fax message in a PDF viewer to open it and read it. Standard functions, such as zoom, page, scroll etc. are available.

Delete

Removes the selected message from the overview.

These options are available:

- **Remove only from phone**
- **Remove from phone and from PBX**

Details


Displays more information about the selected message:

- **Name**
- **Number**

Faxes

- **Trunk**
- **Archived**
- **Box Number**
- **Byte Size**
- **Date**
- **Is New**

Mark as read/unread

 **Note:** Unread messages are displayed in colour in the overview.

 Further help under [Voicemail App](#)

 **Back**

Returns to the higher level menu.

Voicemails

Overview

Lists all voicemails, sorted by date. More information is displayed for each message:

- Name (sender)
- Number (sender)
- Date and Time

Listen

Select the message to hear it again.

Callback

Starts a call to the number of the caller who left the voicemail message.

Delete

Removes the selected message from the overview.

These options are available:

- **Remove only from phone**
- **Remove from phone and from PBX**

Details


Displays more information about the selected message:


- **Name**

Voicemails

- **Number**
- **Trunk**
- **Archived**
- **Box Number**
- **Byte Size**
- **Date**
- **Is New**

Mark as read/unread

 **Note:** Unread messages are displayed in colour in the overview.

 Further help under [Voicemail App](#)

 **Back**

Returns to the higher level menu.

Fax / Voicemail Boxes

Overview

Lists all the fax/voicemail boxes. Additional information is displayed for every box:

- Name (box name)
 - **Type (Fax/Voicemail)**
 - **Status (active/not active (permanent))**
- › Opens the configuration for this box.

Fax Box

Decide whether the selected box is active/not active and whether the box is to be provided permanently.

i Note: Configure the Fax Box in the ICT system. You will find more detailed information in the Instructions for your PBX.

Voicemail Box

Decide whether the selected box is active/not active and whether the box is to be provided permanently.

i Note: Configure the Voicemail Box in the ICT system. You will find more detailed information in the Instructions for your PBX.

← Back

Returns to the higher level menu.

Memory Overview

The Memory Overview displays information about these parameters:

- **Status**
- **Free Space (%)**
- **Free Space (MB)**
- **Manufacturer ID**
- **Name**
- **OEM ID**
- **Revision**
- **Total Space (MB)**
- **Type**
- **Valid**
- **Read-only**

 Further help under [Voicemail App](#)

Synchronize

Synchronize

Starts comparing the telephone settings with the settings in the ICT system.

Logout

Logout

Logs the subscriber off from the app.

App Info

Provides information about the app version.

Displays the software license contract.

Sync

Sync

Accounts

Global options

Accounts

List of all set-up accounts.

 Further help under [Sync](#)

Configure Sync

Opens the Sync configuration function.

Sync Interval

Select the Sync Interval you want.

- **Periodic auto sync**


Synchronises the account and device at the specified interval.

Default: activated

- **Sync Interval**

Select the interval you want.

Default: 2 hours

 **Note:** Sync Intervals that are less than 15 minutes are not permitted.

- **Sync on display switch-on**

Synchronises when the display is switched on, but not more frequently than 1x every 5 minutes.

Default: deactivated

Data service settings

Select the data service that is used for synchronisation:

- **Use cellular networks**

Accounts

- **Sync over WiFi**
- **Sync over Bluetooth**
- **Sync over Ethernet**
- **Sync over WiMAX**
- **Sync over other connections**

Default: all data services are preselected

 Further help under [Sync](#)


Add account

Adds a new account to the list.

 Further help under [Sync](#)

Remove account

Select the account that is to be removed from the list of set-up accounts.

 **Note:** Deletes all contacts and calendar entries associated with this account, on the device.

 Further help under [Sync](#)

Import contacts

Imports addresses for the selected account.

 Further help under [Sync](#)

Global options

Debug options

Use the options below to specify which status messages are to be sent:

- **Report broken events**
- **Enable error reports**
- **Report connection errors**
- **Log to file**

 Further help under [Sync](#)

Use

Displays this information:

- The current app version
- **Support**
- **Contact**

 Further help under [Sync](#)

Settings

Network

Identities

Bluetooth

Wi-Fi

Sound

Language and location

Display and LED

Telephony

Function keys

Camera

Update

Using provisioning

Access

Apps

Date and time

Contacts/LDAP

About phone

Network

Current Settings

IPv4 settings

IPv6 Settings

VLAN

VPN

Topology

Current Settings

Current Settings

The current settings will be shown.

IPv4 settings

IPv4 mode

DHCP

The phone obtains its IP address automatically from a DHCP server.

Static

The telephone uses a fixed IP address (supplied by the system administrator).

 Further help under [IPv4](#)

IP address

If you select **DHCP**: the phone's IP address is displayed

If you select **Static**: you can enter/change the phone's IP address

In the factory settings: 0.0.0.0.

 Further help under [IPv4](#)

Subnet mask

Example: 225.255.255.0

 Further help under [IPv4](#)

Gateway

Example: 192.168.178.1

IPv4 settings

The gateway provides interoperability between networks, so data can pass from one to another. The provider or the network system administrator provide the gateway.

 Further help under [IPv4](#)

DNS 1

The DNS server is needed for Internet access. The provider or network system administrator sets the DNS server. The provider or network system administrator sets the DNS server.

 Further help under [IPv4](#)

DNS 2

Optional

 Further help under [IPv4](#)

IPv6 Settings

IPv6 mode

Auto

The phone obtains its IP address automatically from a DHCP server.

Disabled

Disables IPv6 mode. IPv4 over DHCP is used.

 Further help under [IPv6](#)

Privacy Extensions

If this function is activated, IPv6 addresses that do not allow the user to be identified are created. The host part of the IPv6 address is anonymised.

 Further help under [IPv6](#)

DNS 1

The DNS server is needed for Internet access. The provider or network system administrator sets the DNS server. The provider or network system administrator sets the DNS server.

 Further help under [IPv6](#)

DNS 2

Optional

 Further help under [IPv6](#)

VLAN

Phone VLAN

Switches on VLAN for the phone.

 Further help under [VLAN](#)

Phone VLAN ID

Enter the phone's VLAN ID: 1 ... 4094

The associated data packets are tagged with this ID.

 Further help under [VLAN](#)

Phone VLAN priority

0 (lowest priority) to 7 (highest priority)

 Further help under [VLAN](#)

PC port VLAN

Switches on VLAN for the PC port.

 Further help under [VLAN](#)

PC port VLAN ID

Enter the PC port's VLAN ID: 1 ... 4094

The associated data packets are tagged with this ID.

 Further help under [VLAN](#)

PC port VLAN priority

0 (lowest priority) to 7 (highest priority)

 Further help under [VLAN](#)

VPN

VPN

Switches on VPN for the phone.

 Further help under [VPN](#)

User name

User name for the VPN connection.

Your network administrator will give you your user name.

 Further help under [VPN](#)

Password

Password for the VPN connection.

Your network administrator will give you the password.

 Further help under [VPN](#)

Topology

Topology


Basic Settings

STUN server

Basic Settings

Check hostname

Checks whether the certificate belongs to the domain/IP.

 Further help under [Certificate](#)

FrameSize

Sets the RTP packet size (msec Audio/RTP package).

Local SIP port

1024 ... 65535


Default: 5060

Sets the outgoing port for SIP messages.

 Further help under [SIP](#)

Jitter buffer

Initial value: Initial prefetch delay value (msec).

 **Note:** The value must lie between Min. prefetch and Max. prefetch. If the Initial value = 0, prefetch is deactivated.

Min. prefetch: Minimum prefetch delay (msec).


Default: 60 msec

Max. prefetch: Maximum prefetch delay (msec).

Default: 240 msec


Maximum: Delay that can be set for the jitter buffer (msec).

Default: 360 msec

 Further help under [Topology](#)

RTP off when silent

Ends the sending of RTP packets if no active conversation is taking place.

 **Note:** If this function is switched on, parts of the call can seem like breaks in the connection because background noises are cut off sharply.

 Further help under [Topology](#)

LLDP

If this function is enabled, LLDP packages are sent regularly to the directly connected LLDP-enabled switch.

 Further help under [LLDP](#)

LLDP: Interval in seconds

LLDP package sending frequency

30 to 3600 sec

Minimum: 30 sec

Default: 30 sec

 Further help under [LLDP](#)

STUN server

/ Add STUN server


Adds another STUN server to the list. The list is dynamic. Settings can be made for up to eight STUN servers.

STUN server URL

Requirement:


- Configured DNS server


Enter the STUN server URL.


 Further help under [Topology](#)

STUN server port

1 ... 65535

 **Important:** Every time port forwarding is performed, there is a security risk. For this reason, we recommend you use port forwarding as little as possible.

 **Note:** If you encounter problems with half-open (dropped) call connections, enabling the RTP port might help.

 Further help under [Topology](#)


Time lapse registration (min.)

5 ... 60 minutes

STUN server

The registration time is the number of minutes that must elapse before the telephone reregisters itself with the VoIP provider.

The value you enter here should be a compromise between a short timespan (which generates traffic with the provider) and a long re-registration period.

 Further help under [Topology](#)

Identities

 
[Managing Identities](#)

[Basic Settings](#)

[Options for experts](#)

Managing Identities

Display settings


1. Select an identity in the list.
2. Tap or confirm with OK  to open Identity.

Settings are displayed in the individual menu options.

 **Note:** You can only display settings for set-up identities.

 Further help under [Identities](#)

 
Creating a new identity


1. Select an unconfigured identity (---) from the list.
2. Confirm your selection with OK .
3. Make the settings as described under **Identities**.


A new identity is added to the list.

 Further help under [Identities](#)

Deleting an identity

1. Select the identity you want to delete in the list.
2.  Press


 Further help under [Identities](#)

 **Important:** All settings made for the selected identity are deleted without asking you to confirm. If you back up the settings for an identity to a data storage device first, you can restore them if required.

Basic Settings

Active

Press this to switch the selected identity on.

 Further help under [Identities](#)

SIP Username

Used to identify the device to the VoIP provider or in the PBX. Identical to the user name assigned by the VoIP provider or the internal phone number registered in the PBX.

 Further help under [Identities](#)


SIP Registrar

This tells the phone where it can register itself. The information given here is the URL set by the VoIP provider on the IP address on which the registering PBX can be accessed.

 Further help under [Identities](#)

Password

Used to verify the user name. Identical to the password assigned by the VoIP provider when the identity was being created or the password entered in the PBX.


 Further help under [Identities](#)

Display name

Freely selectable name.

The display name is displayed both in the web interface, under the display name, and on the phone, below the status bar.

If you do not set a display name, the display on the phone contains these elements: SIP user name@SIP registrar.

 Further help under [Identities](#)

Authentication name

Enter the authentication username provided by the VoIP provider.

You need the authentication username when you register with a VoIP provider. If you connect to an Auerswald PBX, you do not need to enter the authentication ID.

 Further help under [Identities](#)

Options for experts

Registrar

SIP

NAT

Function codes

Audio

Security

Outbound proxy

Fallback for

Ringer Tone

Registrar


Send SIP REGISTER

Switches the registrar on.

 Further help under [Identities](#)


SIP domain


Name space that contains all the entries within one directory, specified by the VoIP provider/PBX operator.


 Further help under [Identities](#)

Port

The registrar's port. The (recommended) default value is 5060.

 **Caution:** Different entries can cause malfunctions if the provider makes changes. An SRV query is only possible with the default value.

 **Caution:** Each time a port is opened on the router, this creates a potential security risk. It is essential you put additional protective measures in place.

 Further help under [Identities](#)


Time lapse registration (min.)

5 ... 60 minutes

The registration time is the number of minutes that must elapse before the telephone reregisters itself with the VoIP provider.

Registrar

The value you enter here should be a compromise between a short timespan (which generates traffic with the provider) and a long re-registration period.

 Further help under [Identities](#)

SIP

Session timer

Switches on the check after a connection for a call that is still in existence.

Note: When the SIP session timer is switched on, this may result in the call being interrupted more frequently after the specified interval, if a VoIP provider has not implemented session renewal properly. In this case, set a different session timeout or disabled the session timer.

 Further help under [SIP](#)

Session timeout (in min.)

2 ... 255 minutes, default: 15 minutes

Specifies the number of minutes after which the SIP session timer is to check a call's connection.

 Further help under [SIP](#)

Protocol type

UDP


(User Datagram Protocol). Used to send data packets over connectionless non-secure communication lines.

Note: If very large data packets are present, TCP is used instead of UDP. The maximum size of a data packet can vary according to the network. (RFC 3261 > TCP)

TCP

(Transmission Control Protocol). Segments data into packets, from a specified size, and sends these individual data packets to the recipient address until receipt has been confirmed.

 Further help under [SIP](#)

 **Important:** If encryption using SIPS is enabled, the TCP transport protocol is used. Manual settings are overwritten.

 Further help under [SIP](#)

Subscription interval (min)

This sets the frequency at which the status of potential changes are queried on the PBX. Default: 45 minutes

The value you enter here should be a compromise between a short interval (which generates traffic) and rapid updates.

 Further help under [SIP](#)

Retry subscriptions

Type of repetition

Sets the interval at which attempts are made to configure a subscription on the PBX/provider, if an error occurs.

- **Never**

The device sends exactly one subscription to the PBX/provider. No other subscriptions are sent.

- **Fixed interval**

Attempts to subscribe on the PBX/provider are made at the specified interval.

- **Redouble interval**

The set number of seconds doubles after each attempt to subscribe on the PBX/provider.

Interval in seconds

Sets the time gap between two subscription attempts.

Minimum: 10 sec

Default: 180 sec

 Further help under [SIP](#)

Retry register

Type of repetition

Sets the interval at which attempts are made to register on the PBX/provider, if an error occurs.

- **Never**

The device makes exactly one attempt to register on the PBX/provider. There are no more registration attempts.

- **Fixed interval**

Attempts to register on the PBX/provider are made at the specified interval.

- **Redouble interval**

The set number of seconds doubles after each attempt to register on the PBX/provider.

Interval in seconds

Sets the time gap between two subscription attempts.

SIP

Minimum: 1 sec

Default: 10 sec

 Further help under [SIP](#)

NAT


SIP NAT traversal

Requirements:

- Configured DNS server
- If the option "active" is selected: **Registrar** enabled for the phone


Active

NAT traversal is performed by the telephone. To do this, you must also specify a STUN server.

 **Caution:** Each time a port is opened on the NAT router, this creates a potential security risk. Implement appropriate security measures.

Inactive

NAT traversal is not performed by the telephone. The SIP request also contains an "rport" part in which the IP addresses used here (local, public) are transported. The router which connects the local area network with the Internet should be a properly functioning SIP-aware router which performs NAT traversal.

 Further help under [Identities](#)


RTP NAT traversal


Requirement:

- Configured DNS server

Active


NAT traversal is performed by the telephone. To do this, you must also specify a STUN server.

 **Caution:** Each time a port is opened on the NAT router, this creates a potential security risk. Implement appropriate security measures.

 **Note:** If there are problems with unilateral call connections, a STUN server should be used.


Inactive


NAT traversal is not performed by the telephone. The router which connects the local area network with the Internet should be a properly functioning SIP-aware router which performs NAT traversal.

 Further help under [Identities](#)

NAT Keep-Alive Interval (sec.)

After the time specified here has passed, NAT Keep-Alive packets are sent to the firewall to maintain the NAT mapping.


 **Note:** Some providers lock accounts if the NAT Keep-Alive Interval is too short. As a rule, this is reported with error message 503 during SIP registration. If this problem occurs, it is recommended to raise the value (e.g. to 180).

 Further help under [Identities](#)

Use ICE

Enable the best possible transmission route to be found between the phone and PBX/provider.


 **Note:** ICE must only be activated if the other end supports ICE.

 Further help under [Identities](#)

Function codes


Pick-up code

This is required to perform a call pick-up. Enter the character string stored on the PBX/at the provider, e.g. **##06** for Auerswald PBXs.

 Further help under [Pick-Up](#)

Voicemail number

Enter the voicemail number assigned by the VoIP provider or the voicemail number entered in the PBX.

 Further help under [Voicemail number](#)

CLIR type

(Number suppression)

Area in the From header in which the VoIP provider expects to receive number presentation suppression. Selection as set in the PBX/at the provider.

Anonymous

The sent display text in the From header is "anonymous".

User anonymous


Both the display text and the User name section in the From header is "anonymous".

 Further help under [Anonymous call](#)

Audio


Music on hold


If a connection or call is on hold, the "music on hold" is played.

 Further help under [Music on hold](#)

Play popup notification sound

Enables audible signalling of new popup messages.

 **Note:** No tone is output when a new popup message is displayed during an active call.

 Further help under [Notifications](#)


Codecs

Press this to display the codecs in the sequence in which they are used.

If you select a codec, you can replace it with a different codec, or none at all.

Best available quality: G.711, G722

Best available compression: G.726, G.729, iLBC




 **Note:** Codecs that are assigned multiple times are automatically removed from the list and replaced with---

 Further help under [Codecs](#)

Security



SIPS active

Enables the encrypted transfer of signalling data.

-  Further help under [SIPS](#)
-  Further help under [Certificate](#)
-  Further help under [Identities](#)

Peer-to-peer TLS

Forces the encryption of SIP messages over the entire route to the destination.

-  **Note:** The call is not made if TLS is not available on the entire connection.
-  Further help under [Identities](#)

SRTP

Transport protocol for encrypted connections.

Mandatory

This setting forces voice encryption to be on. If the voice partner (VoIP provider, PBX, external VoIP subscriber) does not support SRTP, the connection is not established.

Preferred

Switches on negotiation for the encryption of call data via SRTP. When a call is made, the call partner will be asked if encryption is possible. If


Security

selected, voice data is transmitted in encrypted form. If not selected, it is not encrypted.

Disabled


This setting forces voice encryption to be off. If the voice partner (VoIP provider, PBX, external VoIP subscriber) does not support encryption, the connection is not established.


 Further help under [SRTP](#)


 Further help under [Identities](#)

Certificate

If the SIPS function is activated, the system checks whether the certificate belongs to the domain/IP.

 **Note:** For each device variant, simply shows whether a certificate is installed and where processing can take place, if relevant.

 Further help under [Identities](#)

 Further help under [Certificate](#)

Outbound proxy

Mode

Inactive

Deactivate this function if

- the registrar can be accessed without outbound proxy
- no outbound proxy is available

Automatically

The PBX automatically determines an outbound proxy.


Manually

The outbound proxy is a fixed default setting. Enter this data as an IP address or a URL.

 Further help under [Outbound proxy](#)

URL


Server address for the outbound proxy.

 **Note:** The **URL** must be filled out if mode **Manually** is selected.

 Further help under [Outbound proxy](#)

Port

Port for the outbound proxy.

 **Note:** The **Port** must be filled out if mode **Manually** is selected.

 Further help under [Outbound proxy](#)

Alternative URL

Alternative server address for the outbound proxy.

 Further help under [Outbound proxy](#)

Alternative port

Alternative port for the outbound proxy.

 Further help under [Outbound proxy](#)

Fallback for

No fallback

No fallback is possible for the current identity.


 Further help under [Fallback identity](#)

Configured/Unconfigured identity

Sets the main identity for which the fallback identity applies.

Configured identity: displays **Display name**

Configured identity: displays **Identity** + seq. no.

 **Note:** A fallback identity can also be created for identities that have not yet been configured.

 Further help under [Fallback identity](#)

Ringer Tone

Ringer Tone


Assigns a ringtone to the identity.

 Further help under [Sound](#)

Bluetooth


Switch on

Switches on communication with nearby Bluetooth devices.

 Further help under [Bluetooth](#)


Available

Displays the closest Bluetooth-enabled devices.

 Further help under [Bluetooth](#)


Connecting/disconnecting a device

Tap on a device to display a dialogue in which you can set up or disconnect the connection you want.

 Further help under [Bluetooth](#)


update

Refreshes the list of available Bluetooth devices.

 Further help under [Bluetooth](#)

Show received files

Here, you can modify the selected sorting process.


 Further help under [Bluetooth](#)

Connected devices

Displays these settings:

- **Name**
- **Use for**

Select the type of use dependent on paired device.

 Further help under [Bluetooth](#)

Wi-Fi

Wi-Fi

[Overview](#)

[Configure Wi-Fi](#)

Overview

Switch on

- Switches the Wi-Fi function on
- Runs the search for existing wireless networks
- Automatically connects the telephone to wireless networks for which access data has already been configured/provisioned

 Further help under [Wi-Fi](#)

Add a network

Opens a menu option in which you enter another network manually.

Network name

Use the displayed screen keyboard to enter the network name.

Security

Select the required Wi-Fi security standard.

Advanced options

Select proxy and IP settings.

 Further help under [Wi-Fi](#)

update


Refreshes the list of available wireless networks.

 Further help under [Wi-Fi](#)

Advanced

Displays procedures for simplified logon to a Wi-Fi network.

- **Install certificates**
- **WPS Push Button**
- **WPS Pin Entry**

 **Notices:** The Wi-Fi router/access point must support the simplified procedures.

 Further help under [Wi-Fi](#)

Configure Wi-Fi

Opens the Wi-Fi configuration dialogue.

 Details about the settings are in [Configure Wi-Fi](#)

Configure Wi-Fi

Saved networks

Lists saved networks.

 Further help under [Wi-Fi](#)

Network notification

Activates notification when available public networks are discovered.

 Further help under [Wi-Fi](#)

Keep Wi-Fi on during sleep

Always

The Wi-Fi connection is kept open during sleep.

Never

The Wi-Fi connection is closed when the device enters sleep mode.

 Further help under [Wi-Fi](#)

Sound

Procedure for selecting a ringtone:

- If you hover over a ringtone, the system plays it.
- If you confirm a selected ringtone, this enables it.

Default ringtone

Assigns a ringtone to inbound calls. This ringtone can be set individually so the user can identify different call types → **Ringtones by call type**.

 Further help under [Sound](#)

Default notification

Assigns a ringtone to notifications (e.g. callback on busy).

 Further help under [Sound](#)

Default alarm

Assigns a ringtone to wake-up calls. This can be set individually for each wake-up call → Clock app.

 Further help under [Sound](#)

Ringtones by call type

Opens a list with six predefined default names.

Select an entry in the list to open another menu in which you can assign a ringtone to the call type.

Search term

Sound

Alert info from the PBX/provider's SIP Invite.


Ringer Tone

Assigns a ringtone to the alert info from the PBX/provider's SIP Invite.

 Further help under [Sound](#)

Silence on user proximity

Switches Silence on user proximity on.

 Further help under [Gesture control](#)

Language and location

Phone language

Changes the language used on the phone user interface.

 Further help under [Language and location](#)

Location

Sets the phone's actual or required location.

Audio frequencies (pitches, pulse/pause characters and/or ringing tones), and also the time and time format, are different for each selected location.

 Further help under [Language and location](#)

Language web interface

Changes the language used on the web interface

 Further help under [Language and location](#)

Display and LED

Idle state

After the selected time, the phone is automatically returned to the idle state.

- **Not automatically**

The phone is not automatically returned to the idle state.

 Further help under [Idle state](#)

Proximity sensor

Enables the brightness sensor.

 Further help under [Display and LED](#)


Brightness sensor

Switches on display brightness adjustment to ambient light.

 Further help under [Display and LED](#)

Brightness

Sets the brightness.

 **Note:** Any changes you make to the brightness affect on all key extension modules that are connected.

 Further help under [Display and LED](#)

Seen missed calls

Sets the message key LED's reaction to seen missed calls.

- **LED lights up**

The message key LED shines and a text message is displayed in the Notifications menu.

- **LED is flashing**

The message key LED flashes and a text message is displayed in the Notifications menu.

- **LED off**

The message key LED does not flash and a text message is displayed in the Notifications menu.

- **Disabled**

The message key LED does not flash and no text message is displayed in the Notifications menu.

 Further help under [Display and LED](#)

Heard voice messages

Sets the message key LED's reaction to heard voice messages.

- **LED lights up**

The message key LED shines and a text message is displayed in the Notifications menu.

- **LED is flashing**

The message key LED flashes and a text message is displayed in the Notifications menu.

- **LED off**

The message key LED does not flash and a text message is displayed in the Notifications menu.

- **Disabled**

The message key LED does not flash and no text message is displayed in the Notifications menu.

 Further help under [Display and LED](#)

Message key LED

Controls the behaviour of the message key LED. If this option is deselected, the message key LED are switched off permanently.

 Further help under [Display and LED](#)

Keypad backlight mode

Manually

Use a preset brightness.

Ambient light

Adjusts the keypad brightness to suit ambient light conditions. The brighter the ambient light, the brighter the keypad brightness. Conversely, the darker the ambient light, the darker the keypad brightness. If the ambient light is very bright, the keypad brightness is switched off.

 Further help under [Display and LED](#)

Keypad brightness

Sets the brightness of the illuminated keypad if "Manually" mode is selected.

 Further help under [Display and LED](#)

Proximity sensor minimal distance


Sets the proximity sensor's sensitivity.

The slider sets the distance after which the device reacts to movement and gestures. The further the slider is to the right, the greater the sensor's sensitivity.

 Further help under [Display and LED](#)

Reset wallpaper

Removes the current wallpaper and replaces it with the default wallpaper.

 Further help under [Wallpaper](#)

Show icons on D-XT20(i)


Switches on the display of icons and images on all connected key extension modules.

 Further help under [Display and LED](#)

Camera as wallpaper

Opens a menu in which you can select one of the configured cameras that is to be used as the wallpaper for the idle screen.

Display and LED

 Further help under [Cameras](#)

Telephony

Call waiting

Audible indication

Do not disturb

Call forwarding

Anonymous call

Reverse search

Automatic start of call

Direct call

Automatic call acceptance

Call Completion

Log calls

Call bindings

Call waiting

Call waiting

Call waiting


Indicates an incoming call during a call.

Audible indication

Audible indication

This acoustic signal indicates that there is an incoming call during a call.

If this option is disabled, incoming calls are only signalled by a change in the display content during a call.

 Further help under [Call waiting](#)

Do not disturb

Do not disturb

Do not disturb

Rejects calls to the phone.

Call forwarding

Immediately

Forwards incoming calls to the set destination number immediately.

 Further help under [Call forwarding](#)

Call forwarding destination

Enter the destination number here.

 Further help under [Call forwarding](#)

On busy

Forwards incoming calls to the set destination number if the subscriber is busy.

 Further help under [Call forwarding](#)

Call forwarding destination

Enter the destination number here.

 Further help under [Call forwarding](#)


On no reply

Forwards incoming calls to the set destination number if these calls have not been taken within a set time.

 Further help under [Call forwarding](#)

Call forwarding destination

Enter the destination number here.

 Further help under [Call forwarding](#)

Waiting time before call forwarding

Sets the number of the seconds that the phone waits before activating call forwarding.

 Further help under [Call forwarding](#)

Anonymous call

Anonymous call

Stops your phone number from being displayed to the person you are calling

Reverse search

Reverse search

For incoming and outbound calls, this option displays the names of saved contacts that are suitable for the phone number.

Automatic start of call

Automatic start of call

The call starts automatically after the predefined time.


Seconds until start of call


You can use the sliding adjuster to set the number of the seconds that the phone waits before making the automatic call.

Direct call

Destination


Enter the phone number that is to be called after the specified waiting time has elapsed.

 **Notes:** The function is only active if a destination has been entered. Comply with the phone number format set for the PBX when entering external phone numbers.

 Further help under [Direct call](#)

Waiting time before call starts in s

Shows the number of seconds the device will wait before starting the call to the specified destination.

 Further help under [Direct call](#)

Automatic call acceptance

On SIP request

Received calls use an Alert Info header containing `info=alert-autoanswer` to request immediate call acceptance.

 Further help under [Automatic call acceptance](#)

After timeout

Sets the number of seconds that the phone waits before automatically taking an incoming call. Automatic call acceptance is prevented by selecting the setting **Not automatically**.

 Further help under [Automatic call acceptance](#)


Beep when connecting

Uses a tone to signal incoming calls.

 Further help under [Automatic call acceptance](#)

Interrupt active calls

Active calls are put on hold when InterCom calls are received.

 **Note:** For active calls to be interrupted, the Call waiting function must be enabled.

 Further help under [Automatic call acceptance](#)

Call Completion

Call Completion


The callback is triggered automatically by the PBX.

 Further help under [Call Completion](#)

Log calls


Log calls

Activates the logging of incoming and outgoing calls.

 **Note:** If the function is switched off, calls cannot be started by redialling the number.

 Further help under [Log calls](#)


Call bindings

 adding

Creates a new call binding.

Name

Freely selectable name.

 Further help under [Call bindings](#)

Remote party

Select a remote party with whom the shortcut is to be set up.

To prevent interruptions in the camera image display when phone numbers change, you can also use regular expressions (regex) to represent a greater range of phone numbers.

Example 1: The camera is connected with remote party 55. As the door bell button "55(4)" was being pressed when the call was displayed, there is no camera image. This situation can be prevented in 2 ways:

1. Configure another call binding with remote party 554
2. Enter this regular expression `55[1-4]?@.*`


When you enter this regular expression, these phone numbers are recognised as valid: 55, 551, 552, 553 and 554.


A camera image would not be displayed for:

- phone numbers with more than 3 digits
- phone numbers that do not start with 55
- phone numbers with digits outside the range 1 to 4 after 55

Example 2: Call binding in connection with an AVM FRITZ!box


The camera is connected to an AVM FRITZ!box with the internal remote party `**620.*`. `*` In regular expressions, the star key has a function assigned to it and must therefore be marked as a digit by adding escape characters to it. The correct entry is: `**620@fritz.box`.

 **Note:** The AVM FRITZ!box sends internal phone numbers as `xxx@fritz.box`.

 Further help under [Call bindings](#)


Camera

Select the camera whose images are to be displayed.

 Further help under [Call bindings](#)

Softkeys | key 1/2

Selects a configured function key.

 Further help under [Call bindings](#)

Function keys

Function keys

[Managing function keys](#)


[Edit function keys](#)

[Edit parameters](#)

Managing function keys


Choose a key

Selects a key for adjusting settings.

 Further help under [Function keys](#)


+ Add entry to list

Adds a new entry to the end of the list.

 Further help under [Function keys](#)

Delete

Deletes the marked function key in the list.

 Further help under [Function keys](#)

Insert

Adds an entry to the list, above the marked position.

 Further help under [Function keys](#)

Edit


Opens a dialogue in which parameters can be configured for the selected key.

 Further help under [Function keys](#)

Edit function keys

Function

Selects the function and displays the necessary parameters.

 **Note:** To use additional function templates, activate the Auerswald/ Fontevo templates.

 Further help under [Function templates](#)

 Details about the settings are in [Edit parameters](#)

Key label

Displayed beside each function key on the screen.

Delete

Deletes the marked function key in the list.

Cancel

Closes the menu without adopting changes.

Save

Saves the entered parameters and close the window.

Edit parameters

Speed dial

Identity

Activate config

Anonymous call

Automatic configuration switching

Bluetooth

Browser

Call forwarding immediately

Call forwarding on busy

Call forwarding on no reply

Call waiting

CF ext. calls: Immediately

CF ext. calls: On busy

CF ext. calls: On no reply

Do not disturb

DTMF-Relay

Group

Group (incoming)

Group (outgoing)

Park position

Relays

Silent Alert


VPN

XML Minibrowser

Speed dial


Number/URI

Enter a phone number or address such as 198@192.168.XX.YY or 198@company.com, here.

 Further help under [Speed dial](#)


Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Subscription


Activates the sending of BLF subscriptions to the PBX.


 **Note:** It may be a good idea to deactivate subscriptions in situations when it is necessary to prevent the PBX from being overloaded by high volumes of transmitted data.

Pickup

Activates the Pickup function.


 **Note:** Pickup only works if the Subscription function is activated.

 **Note:** Pickup should not be used if the key is only used to switch functions in the PBX using a programming code. Deactivate Pickup in that case.

 Further help under [Pick-Up](#)


InterCom

Enables the InterCom function. The connection with the destination number is established directly. No ringing or active call acceptance.

 Further help under [InterCom](#)

Signalise missed call


If this function is enabled, missed calls associated with the speed dial number are signalled with flashing green LEDs.

 Further help under [Speed dial](#)

Identity

Identity


Identity used to trigger subsequent calls.

 Further help under [Identities](#)

Activate config

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Configuration id

The PBX assigns the configuration ID automatically.

 Further help under [Function templates](#)

Anonymous call

Anonymous call


No parameters necessary.

 Further help under [Anonymous call](#)

Automatic configuration switching

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

ID


Identification number for system relay with Automatic configuration switchover operating mode (900, in the factory settings).

 Further help under [Function templates](#)

Bluetooth

Bluetooth

No parameters necessary.

 Further help under [Bluetooth](#)

Browser

Number/URI


Web server address


 Further help under [Apps](#)


Call forwarding immediately

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination

Call forwarding destination


 Further help under [Call forwarding](#)


Call forwarding on busy

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination

Call forwarding destination


 Further help under [Call forwarding](#)


Call forwarding on no reply

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 **Note:** Only assign the Identity parameter if PBX function templates are used.

 Further help under [Function templates](#)

Destination


Call forwarding destination

 Further help under [Call forwarding](#)

Call waiting

Call waiting


No parameters necessary.

 Further help under [Call waiting](#)

CF ext. calls: Immediately

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination

Call forwarding destination

 Further help under [Function templates](#)

CF ext. calls: On busy

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination

Call forwarding destination

 Further help under [Function templates](#)

CF ext. calls: On no reply

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Call forwarding for external calls

Point-to-multipoint connection: External phone numbers (MSN, see PBX configuration), for which call forwarding is to be performed.

PTP connection:Header plus extension for which call forwarding is to be performed.

Destination


Call forwarding destination

 Further help under [Function templates](#)

Do not disturb

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

 Further help under [Do not disturb](#)

DTMF-Relay

DTMF sequence


Numbers needed to perform the required function.

 Further help under [Function templates](#)

Group

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number


 Further help under [Function templates](#)

Group (incoming)

Group (incoming)

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number

 Further help under [Function templates](#)

Group (outgoing)

Group (outgoing)

Identity

Identity for which this function is set up.

 Further help under [Identities](#)

Group

Group telephone number

 Further help under [Function templates](#)


Park position

Number/URI

Phone number of the park position.

Identity


Identity for which this function is set up.

 Further help under [Park position](#)

Relays


Identity

Identity for which this function is set up.

 Further help under [Identities](#)

ID

Relay ID number according to PBX.


 **Note:** The Relay function key is for relays with light, door opener or calculator operating mode. This function key is not suitable for manual relays. For additional Information, refer to the Advanced Information about the PBX.

 Further help under [Function templates](#)

Silent Alert


URL

Required for forwarding the alarm message.

 **Caution:** The function can only be executed if the appropriate URL has been entered.

Delay


Countdown counter. The alarm is triggered after the countdown reaches zero.

 Further help under [Silent Alert](#)

VPN

VPN

No parameters necessary.

 Further help under [Network](#)

XML Minibrowser

Number/URI

Web server address

 Further help under [XML Minibrowser](#)

Camera

Add camera

Adds another camera to the list. The list is dynamic. You can make settings for any number of cameras.

 Further help under [Cameras](#)

Name

Freely selectable name. The name is used to identify the camera within the telephone.

 Further help under [Cameras](#)


URL

Address from which the camera images are fetched.

 Further help under [Cameras](#)

Refresh rate in ms

Select the refresh rate: at least 100 ms.


 **Note:** The value for the images actually transferred depends on which type of camera is used.

 Further help under [Cameras](#)

Username


Enter the user name, if necessary.

Camera

 Further help under [Cameras](#)


Password

Enter the password, if necessary.

 Further help under [Cameras](#)

Use for incoming calls only


The camera image display is only activated for incoming calls.

 Further help under [Cameras](#)

Update


Start update

Starts the update.

 Further help under [Update](#)


Check for updates

If selected, the phone automatically checks for current updates.

 Further help under [Update](#)


Automatically install updates

If selected, available updates are installed automatically.

 Further help under [Update](#)


Update server URL


In the default settings: <https://update.auerswald.de>

 Further help under [Update](#)

Restart phone

Restarts the telephone.

 **Caution:** This interrupts all connections, all calls and data services. Unsaved data is lost!

 Further help under [Update](#)

Reset to default

Resets the telephone to the factory settings. Any saved data and settings are deleted. The phone is shut down and then restarted.

 Further help under [Reset to default](#)

Using provisioning

Start provisioning

Starts manual provisioning.

Automatic provisioning

Automatic provisioning is performed according to the schedule and each time the phone is switched on.

 Further help under [Using provisioning](#)

Provisioning with DHCP data

The phone obtains the provisioning server's URL from a DHCP server. Additional data for controlling provisioning can also be transferred along with the URL.

 Further help under [Using provisioning](#)

Redirect Server

The phone obtains the provisioning server's URL from the redirect server.

 Further help under [Using provisioning](#)

Provisioning from PBX search

Automatic provisioning of the phone is performed via the PBX.

 Further help under [Using provisioning](#)

Provisioning server URL

This URL is required if it is not obtained via DHCP or a redirect server.

 Further help under [Using provisioning](#)

Vendor templates


Activates templates and scripts that are specially designed to run on Auerswald/FONtevo PBXs.


 Further help under [Function templates](#)

Access

Extended Logging

Enables debug info recording.

 **Note:** In some situations, extended logging can have a negative impact on system performance.

 Further help under [Logging](#)

Web administration (https)

Activates access to the web interface.


 **Note:** You cannot call web interface if this function is inactive.


Android Debug Bridge (adb)

Enables the PC to access the phone via the software interface. You can then use ADB to execute commands on the Android system.

Password web interface


Displays the password entry/modification dialogue for the web interface.


 **Note:** When you define the password, comply with the conventions for secure passwords.

 Further help under [Passwords](#)

Evaluate action URLs


Triggers running of action URLs. The device receives HTTP requests from the PC and executes them.

 **Note:** Activating **Evaluate action URLs** is not possible if the function **Web administration (https)** is inactive.

 Further help under [Action URL](#)

Action URL server


Required to send events. No entry required if only commands are received.

 Further help under [Action URL](#)

Apps

F-Droid


Activates the display and use of F-Droid.

 **Note:** If the function is not activated, the app is not displayed in the overview of installed apps.

 Further help under [Apps](#)

K-9 Mail


Activates the display and use of K-9 Mail.

 **Note:** If the function is not activated, the app is not displayed in the overview of installed apps.

 Further help under [Apps](#)

Firefox Klar

Activates the display and use of Firefox Klar.

 **Note:** If the function is not activated, the app is not displayed in the overview of installed apps.


 Further help under [Apps](#)

Date and time

Automatic time (NTP)

The time is automatically transferred from the NTP server.

If NTP is not enabled, there is no synchronisation between the phone and the time server. It is possible that the date and time may be displayed incorrectly.

 Further help under [Date and time](#)

NTP server

The time server that supplies the time stamp. Use the address of a time server that is geographically close by, to achieve maximum accuracy.

Example: pool.ntp.org

 Further help under [Date and time](#)

Time format

12 h: time display in 12-hour format. In addition, the time range AM/PM is displayed.


24 h: time display in 24-hour format.

 Further help under [Date and time](#)

Time zone

Data on the phone that has a time stamp (such as call history entries, calendar entries and e-mails) is displayed with the correct time.

Date and time

 Further help under [Date and time](#)

Contacts/LDAP

Active

Switches on the directory service request.

 Further help under [LDAP](#)

Max. LDAP contacts

Sets the max. number of contacts that the LDAP server is to output.

 Further help under [LDAP](#)

Max. matches

Sets the max. number of search results that the LDAP server is to output.

 Further help under [LDAP](#)

Sort by

Sorting algorithm (by First name, by Last name)

 Further help under [LDAP](#)

Name format

Defines the format in which names are displayed (First name first, Last name first).

 Further help under [LDAP](#)

Number search incoming

If "Number search incoming" is enabled, the display name is searched for via LDAP, for incoming calls.

 Further help under [LDAP](#)

Number search outgoing

If "Number search outgoing" is enabled, the display name is searched for via LDAP, for outgoing calls.

 Further help under [LDAP](#)

About phone

Device name

The name you assign to the device.

 Further help under [Device Information](#)

Model

Displays your device's model details.

Serial number

Displays your device's serial number.

Keypad serial number

Displays the serial number of the keyboard PCB installed on your device.

Build number

Displays the build number of the software version installed on the device.

MAC address

Displays your device's physical address on the network.

Android version

Displays the Android version installed on your device.

Kernel version

Displays the kernel version in use on your device.

Update system version

Displays the update system version in use on your device.

Bootloader version

Displays the bootloader version in use on your device.

Network chip

Model of the network chip integrated in the phone.

Licenses

Here, you can display the following license information:

- **End User License Agreement**
- **Data protection**
- **Open source licenses**
- **Android licenses**
- **Webview licenses system**
- **Webclient licenses**

 Further help under [Device Information](#)

Glossary

Technical Terms and Functions

Abbreviations

Technical Terms and Functions

Account

Bootloader

Browser

Build number

Call deflection

Client

Codec

DHCP

DNS

Domain

Downdate

DTMF

EHS

End device

Ethernet

Firewall

Firmware

Frame size

Gateway

HOST

HTTP

ICE

IMAP

IP address

Ipssec

IPv4

IPv6

jitter buffer

LDAP

LED

LLDP

MAC

NAT

NAT traversal

NTP

Open source licenses

PoE

POP3

Port

Prefetch

Using provisioning

Redirect Server

Registrar

router

RTP

Rubber cover

Server

SIP

SIP port

SIPS

SLAAC

SMTP server

STUN

Subnet mask

Switch

TCP

TLS

UDP

Technical Terms and Functions

Update

update server

URI

URL

VLAN

VoIP

VoIP account

VoIP address

VoIP provider

VPN

Dial preparation

XML

Certificate

Account

Authorisation to access a VoIP provider or a VoIP PBX. Users must identify themselves by logging in with a username and a password.

Bootloader

Special software, loaded from a bootable data medium by the firmware and then executed. The Bootloader then loads other parts of the operating system, including usually a kernel.

Browser

Browser

Special software to display websites from the Internet.

Build number

The build number is a sequential number, automatically assigned during a build process. The build number is part of the software version number.

Call deflection

Call Deflection – refers to call forwarding during the ringing period. If Call Deflection has been activated, the called subscriber can deflect the call on a case-to-case basis while the telephone is still ringing.

Client

Client

Piece of computer hardware or software that accesses a service made available by a server.

Codec

A codec is a method that encodes (digitizes) analogue voice data for transmission and again decodes again, meaning converts into back into voice. There are various codecs that feature different voice data compression rates thereby require different band widths for data transmission. The equality of VoIP calls is dependent on the codec used.

DHCP

Dynamic Host Configuration Protocol – client/server protocol for dynamically allocating IP addresses and network parameters. The IP addresses are requested by the DHCP clients (PCs in the network) on the DHCP server (for example, a router or the Internet service provider). The DHCP server takes these IP addresses from a set address pool and sends them to the client. In addition, the client receives additional information (for example, the addresses for the standard gateway and DNS server).

The IP address is temporarily allocated for a certain amount of time. If the address is no longer required by the client, the server has access to it again, and can allocate it to another client.

DNS

Domain Name Service – needed to translate Internet addresses. The name of a computer on the Internet (for example **www.auerswald.de** is assigned to the corresponding IP address. This service is provided by DNS servers at the various Internet service providers or by upper domain servers.

Domain

Globally unique name of a website, consisting of third-level domain (e. g. the service name “www”), second-level domain (e. b. “auerswald”) and top-level domain (e. g. the country code “uk”). The domain is part of the URL.

Downdate

Downdate

Reset of the telephone to the previous firmware version.

DTMF

DTMF

Dual Tone Multi Frequency dialling – dialling method that transmits the dialled number to the exchange as two superimposed sinusoidal signals.

EHS

Electronic Hook switch: a device that connects a wireless (Bluetooth or DECT standard) headset with the phone, electronically, making particular functions available on the headset. Phone calls can be controlled entirely from the headset, via EHS: conversations can be accepted or ended directly on the headset, conversations can be split between the headset and phone and the phone can be muted. Additional features can be implemented, depending on product.

End device

Device that can be operated on a communication network or on a PBX, e.g. telephone, fax machine, answering machine, ISDN PC controller, etc.

Ethernet

Network system with a speed of 10/100/1000 Mbit/s developed by the companies INTEL, DEC and Xerox.

Firewall

Network security component that uses a set of security rules to protect a computer network or an individual computer against unauthorised access to or from the network.

Firmware

Operating software on the telephone or PBX that is stored in the device itself. The device cannot function without firmware.

Frame size

Frame size

Sets the RTP packet size (msec Audio/RTP package).

Gateway

PC or router that acts as an intermediary between two networks. The Internet service provider is the gateway for direct Internet dial-up connections. If you use a router, this is the gateway in a local network.

HOST

HOST

Component of a data processing system that manages larger application programs and data volumes and makes them available to lower-order servers and clients.

HTTP

HTTP

Hypertext Transfer Protocol Secure – communication protocol for tap-proof data transfer with encryption within the World Wide Web.

ICE

Interactive Connectivity Establishment is used when two nodes must communicate as directly as possible, over the Internet, but the presence of NATs and firewalls makes it difficult for them to do so. ICE uses the STUN (Session Traversal Utilities for NAT)- and TURN (Traversal Using Relays Around NAT) protocols to establish a connection.

IMAP

Internet Message Access Protocol – protocol to download e-mails from a server, with extended functions as compared to POP3 (e-mails are stored on a server, not on the client PC, so that they cannot be lost due to a failure of the client PC).

IP address

Unique numerical address within a TCP/IP network that is assigned to one device and ensures that data packages reach the correct recipient.

Ipsec

The telephone uses the IPsec protocol to transport IP packages cryptographically secured via public networks.

IPv4

IPv4 addresses consist of four numbers between 0 and 255 that are separated by a full stop, for example, 192.168.0.14. The network addresses are divided up into different classes (Class A to C) depending on how many computers can be located in a network.

Certain ranges are reserved for operating local networks:

- Class A: 10.x.x.x (for networks with up to 16.5 million PCs)
- Class B: 172.16.x.x to 172.31.x.x (for networks with up to 65534 PCs)
- Class C: 192.168.0.x to 192.168.255.x (for networks with up to 254 PCs)

These addresses have no validity on the Internet. This means that data packets with this kind of sender or recipient address cannot be sent over the Internet. However, they can be used in local networks without restriction. The benefit of this is that if data from a local network configured in this way comes in contact with the Internet, none of the data on the computers in the local network can leak out or be accessed externally.

IPv6

IPv6 addresses consist of eight blocks, each containing four numbers or letters, and each separated by a colon, e.g. 3001:00FF:ABC0:0EAC:0001:0000:0000:000F or, in short form, 3001:FF:ABC0:EAC:1::F.

Thanks to the longer address format, IPv6 offers a greater number of possible IP addresses than the Internet Protocol Version 4 (IPv4).

jitter buffer

Buffers RTP packages, to compensate irregular transfer rates of the Internet.

A high jitter buffer reduces short interruptions during the call. In return the delay of the RTP packages increases.

LDAP

Lightweight Directory Access Protocol – protocol that enables you to query the data in a directory service (a hierarchical database) over the network.

LED

LED

Light emitting diode - electronic device similar to a lamp and used for displays (also multi-coloured).

LLDP

Link Layer Discovery Protocol – the protocol IP phones use to collect and query device-specific information from devices directly connected in the network.

LLDP-MED – LLDP software upgrade that supports special VoIP apps.

MAC

Media Access Control address – specific, unique hardware address specified for each individual single network card used in the whole world. This means that the network card unique and can be controlled without any problems and detected by the network. The IP addresses on the TCP/IP network are always mapped to the respective MAC address.

NAT

Network Address Translation – permits the mapping of a specific IP address used within a network to another IP address used by another network. This function is e.g. performed by a router which connects a local area network to the Internet.

NAT traversal

Method to establish and hold communication connections that allows IPsec-encrypted data packets to pass through NAT transition points.

NTP

Network Time Protocol – protocol that synchronises the time on a computer or on other devices in the network with other computers or with an external clock via the Internet. An NTP server is selected to perform the time synchronisation. The time provided by the NTP server is synchronised as exactly as possible to Coordinated Universal Time (UTC).

If a local NTP server is available in a local network, it can be selected, or a public NTP server from a public list on the Internet can be used.

Open source licenses

Software license acknowledged by the Open Source Initiative (OSI). Open-source licenses are the basis of free-of-charge applications whose programming code may be modified without restrictions.

PoE

Power over Ethernet (PoE) is a method by which small devices in a network, for example, VoIP telephones, receive both power and data via an Ethernet cable. Benefit: Fewer obtrusive power cables are required.

PoE is described in the IEEE 802.3af standard.

POP3

POP3

Post Office Protocol, version 3 – ASCII protocol to download e-mails from a server.

Port

A single PC can simultaneously establish multiple connections and provide multiple services for other PCs. Ports are used to differentiate these connections from parallel connections. Due to a common agreement, PCs usually provide their services on ports 1 to 1023. Outgoing connections are usually established starting at Port 1024. Most services that use the standard port numbers (for example, web browsers use port 80).

Prefetch

The loading of memory contents before a requirement for them has become obvious. When the requirement actually occurs, this enables a faster access speed to be achieved.

Using provisioning

Automated configuration of one or more telephone(s) from a provisioning server.

Redirect Server

Supports the setup of a connection by identifying alternative addresses of a recipient in the database of the registrar and returning them to the originator of the request. The originator can then send a new request to the alternative address.

Registrar

A domain name registrar is an organisation or company that registers Internet domains.

A SIP registrar tells the phone where it can register itself. The information given here is the URL set by the VoIP provider on the IP address on which the registering PBX can be accessed.

router

Routers connect two separate networks. This means, for example, that you can connect the local network to another LAN or a WAN. When a PC wants to send a data packet, this packet must travel over a router. The router uses the IP address to detect the network it must send the data to. In addition to connecting to networks, routers can also execute certain control functions, such as maintaining a simple firewall. In a home network, routers are usually used to connect the local network to the Internet and to enable simultaneous Internet access for multiple users.

RTP

Transport Protocol – a transport protocol that guarantees complete data transport in real time, especially of audio/video data, for which a packet loss of 1 to 20% is acceptable, depending on the codec in use. RTP does not guarantee the service quality of the data transfer.

Rubber cover

Rubber cover

Rubber cover which must be removed before the key extension module can be mounted.

Server

Computer or software that performs different tasks as part of a network and, for example, provides other users (clients) of this network with specific information, data or services.

SIP

The Session Initiation Protocol (SIP) network protocol sets up a communication session between two or more subscribers. SIP is only used to negotiate the communication conditions. Other protocols such as RTP are responsible for actual data transfer.

SIP port

SIP port

Port of the local system used as the communication port for the SIP transfer.

SIPS

Session Initiation Protocol Secure – SIPS are SIP data encrypted using the TLS protocol. The network protocol sets up a communication session between two or more subscribers. The provider encrypts external connections to prevent listening in. The processes used to set up and shut down a connection, and signalling, are all encrypted by SIPS.

SLAAC

Stateless Address Autoconfiguration – process for automatically and statelessly configuring IPv6 addresses on a network interface. "Stateless" means that the IPv6 address is not assigned and stored centrally. The host generates its own IPv6 address, using additional information as an aid. SLAAC is the further development of "classic" processes for IP auto configuration in IPv4. IPv6 routers have an active role, unlike those in IPv4. IPv6 offers the same convenience as operating a very simple DHCP server.

SMTP server

Simple Mail Transfer Protocol – network protocol used for the secure transfer of e-mails between the PBX and external mail servers. The PBX needs an external SMTP server (outgoing mail server) to send system e-mails or forward voice mail messages and fax messages.

STUN

Simple Transversal of UDP over NATs – used to determine the public IP address of an Internet connection. To do this, a STUN request is sent to a STUN server, which then shares its own IP address allocated by the VoIP provider with the Internet connection.

Subnet mask

Configuring subnetworks makes it possible to connect many totally different networks located in totally different areas because each subnetwork receives its own address and can therefore be addressed by the router. A subnetwork is created when the IP address is linked with a subnet mask:

If a bit in the subnet mask is set, the corresponding bit in the IP address is considered a part of the network address. If a bit is not set in the subnet mask, the corresponding bit in the IP address is used as a part of the PC address.

The value of the subnet mask, as with IP addresses, is often given in decimal form (for example, 255.255.255.0 for IPv4 addresses).

Switch

Switch

Active network distributor that distributes data packages to a destination defined by an IP address among the different segments of a network.

TCP

TCP (Transmission Control Protocol) is a transport protocol that segments data into packets up to a specified size and reliably sends these individual data packets to the recipient address, in the correct sequence. In this process, every data packet sent must be resent until it has been confirmed as arrived. To ensure this happens, a large amount of information is sent along with the actual payload data. Most Internet services are implemented with TCP, e.g., HTTP (WWW), SMTP/POPS (e-mail), etc.

TLS

TLS

ransport Layer Security – protocol for the encryption and secure transmission of data on the Internet. TLS is often used to protect http connections, e. g. for commercial transactions (https).

UDP

User Datagram Protocol) – protocol used to send data packets over non-secure communication lines without a connection. This means that successful transmission is dependent on the application and is therefore not always guaranteed. UDP itself does not verify whether data has been transmitted successfully. When a UDP packet is sent, the sender cannot assume that the packet will indeed arrive at the recipient. This particular protocol needs only a small amount of additional information, and results in a better data throughput rate in a well-functioning network, e.g., on a LAN. UDP is used, e.g., for the DNS (Domain Name Server).

Update

Installation of a new firmware version to integrate new features and to solve possible problems. Previous settings of the device remain unchanged.

update server

update server

Server that provides up-to-date data, e. g. firmware files, provider profiles, etc., for downloading to a telephone.

URI

Uniform Resource Identifier. Used to uniquely identify every single item in the World Wide Web, irrespective of whether it is a page with text, a video, a sound file, a moving image, a static image or a programme.

A URI usually describes:

- the mechanism used to access a resource
- the specific computer on which the resource is present
- the specific name of the resource (or the file name) on the computer

URL

URL

Uniform Source Locator – complete address of a resource (e. g. a website), consisting of a scheme (e. g. „http://“) and a scheme-specific part (e. g. domain „www.auerswald.de/“ and path „en/products/pbx/home-office.html...“).

VLAN

Virtual Local Area Network. This is a virtual network within a local network.

VLAN-enabled switches ensure that data packets within the subnet are not forwarded to a different VLAN, although the subnets might be connected to shared switches.

Among other things, a VLAN can be used to keep IP telephony separate from normal network traffic, at network level.

VoIP

Voice over Internet – Internet telephony. An Internet connection (for example, DSL) is used for telephoning instead of an analogue or ISDN line. In this case, digital voice data is sent as IP packets from from one telephone to another. This functions the same way as the transmission of a webpage over the Internet.

The transmission quality and the reliability of Voice over IP depends to a great extent on the quality of the Internet connection used.

VoIP account

Account configured with a VoIP provider who provides the necessary access data required for VoIP calls. To do this, use your name and address data to register on the provider's website. After that, you will be assigned one or more telephone numbers that can be reached from the land line and the Internet, and also an account with a username and password. The registered connection usually becomes active within a few minutes and can be used very soon after that.

VoIP address

VoIP address

VoIP telephone number plus domain, separated by the @ character:
<subscriber>@domain.

VoIP provider

VoIP provider

Internet service provider offering internet telephony (VoIP, Voice over Internet Protocol).

VPN

A VPN (Virtual Private Network) integrates distant or neighbouring networks (LAN) into your own network via a VPN tunnel. The tunnel serves as a shell in which the data is embedded and transported from one network to the other.

Dial preparation

Dialling of a number before a call is initiated by lifting the receiver.

XML

Extensible Markup Language – a markup language used to display hierarchically structured data, in a text file.

XML data can be opened and edited in an editor. Computers can also read and write XML format. XML consists of tags which are enclosed by pointed brackets: "<" ">". Unlike XML, HTML has only one fixed set of tags, such as, for example <h1>, or . You can define your own custom tags in XML. The standard only defines what a tag must look like, not what it means. Tags can be nested, enabling a hierarchy to be created.

A Document Type Definition (DTD) describes the structure and grammar used in documents. It is an XML system component and is enabled by default.

Certificate

Digital key issued by a Certification Authority (CA) to ensure the authentication and secure transmission of e-mails, web sites, etc.

Abbreviations

AM		answering machine
ARA	Auerswald Remote Access	
CLIR	Calling Line Identification Restriction	Phone number is not displayed if that is appropriate
CTI	Computer Telephony Integration	Computer-aided telephony
DDI	Direct Dial-In	Extension
DECT	Digital Enhanced Cordless Telecommunications	Digital radio telephone network
DHCP	Dynamic Host Configuration Protocol	Protocol for assigning the network configuration to network clients
DNS	Domain Name Service	
DSL	Digital Subscriber Line	Digital subscriber connection
DTMF	Dual Tone Multi Frequency	Dual TMfrequency
ESMTP	Simple Mail Transfer Protocol	An integral part of e-mail, extended SMTP
HTML	Hypertext Markup Language	Defines the structure of a website

Abbreviations

HTTP	Hypertext Transfer Protocol	Hypertext transmission protocol
IMAP	Internet Message Access Protocol	Enables online access to an e-mail inbox (live access)
IP	Internet Protocol	Internet Protocol
Ipsec	Internet Protocol Security	Encryption extension of the Internet Protocol (IP)
IPv4	Internet Protocol version 4	
IPv6	Internet Protocol version 6	
ISDN	Integrated Services Digital Network	Digital network with integrated services
LAN	Local Area Network	Local network
LDAP	Lightweight Directory Access Protocol	Protocol for easy access to directory server
LED	Light-emitting diode	Light emitting diode
MAC	Media Access Control	Physical address of a network interface
NAT	Network Address Translation	
NTP	Network Time Protocol	
PBX	Private Branch Exchange	Private PBX
PoE	Power over Ethernet	

Abbreviations

<u>POP3</u>	Post Office Protocol, Version 3	
<u>RTP</u>	Real-Time Transport Protocol	
<u>SIP</u>	Session Initiation Protocol	
<u>SIPS</u>	Session Initiation Protocol Secure	
<u>SLAAC</u>	Stateless Address Autoconfiguration	Process for automatically and statelessly configuring IPv6 addresses on a network interface.
SMTP	Simple Mail Transfer Protocol	Protocol that is used to exchange e-mails in computer networks
S RTP	Secure Real-Time Transport Protocol	
SSL	Secure Sockets Layer	Most widely used security protocol, provides a secure channel between two computers working over the Internet or an internal network
<u>STUN</u>	Simple Transversal of UDP over NATs	
<u>TCP</u>	Transmission Control Protocol	

Abbreviations

<u>TLS</u>	Transport Layer Security	
<u>UDP</u>	User Datagram Protocol	
<u>URI</u>	Uniform Resource Identifier	
<u>URL</u>	Uniform Resource Locator	Uniform Resource Pointer
USB	Universal Serial Bus	
<u>VLAN</u>	Virtual Local Area Network	
VMB	Voice Mailbox	voice mailbox
<u>VoIP</u>	Voice over Internet Protocol	
<u>VPN</u>	Virtual Private Network	
<u>XML</u>	Extensible Markup Language	